

TAYAMA TSP-100

TAYAMA 1 Qt. Mini Ceramic Stew Cooker (Model TSP-100) Instruction Manual

Model: TSP-100

INTRODUCTION

The TAYAMA Mini Electric Ceramic Stew Cooker is designed for efficient and gentle cooking. Its unique water stewing method ensures even heat distribution, preserving the natural flavors and nutrients of your food. This compact appliance features multiple preset functions and a built-in timer for convenient meal preparation.

TAYAMA®

TAYAMA brand logo.


IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then

remove plug from wall outlet.

- Do not use appliance for other than intended use.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

PRODUCT COMPONENTS

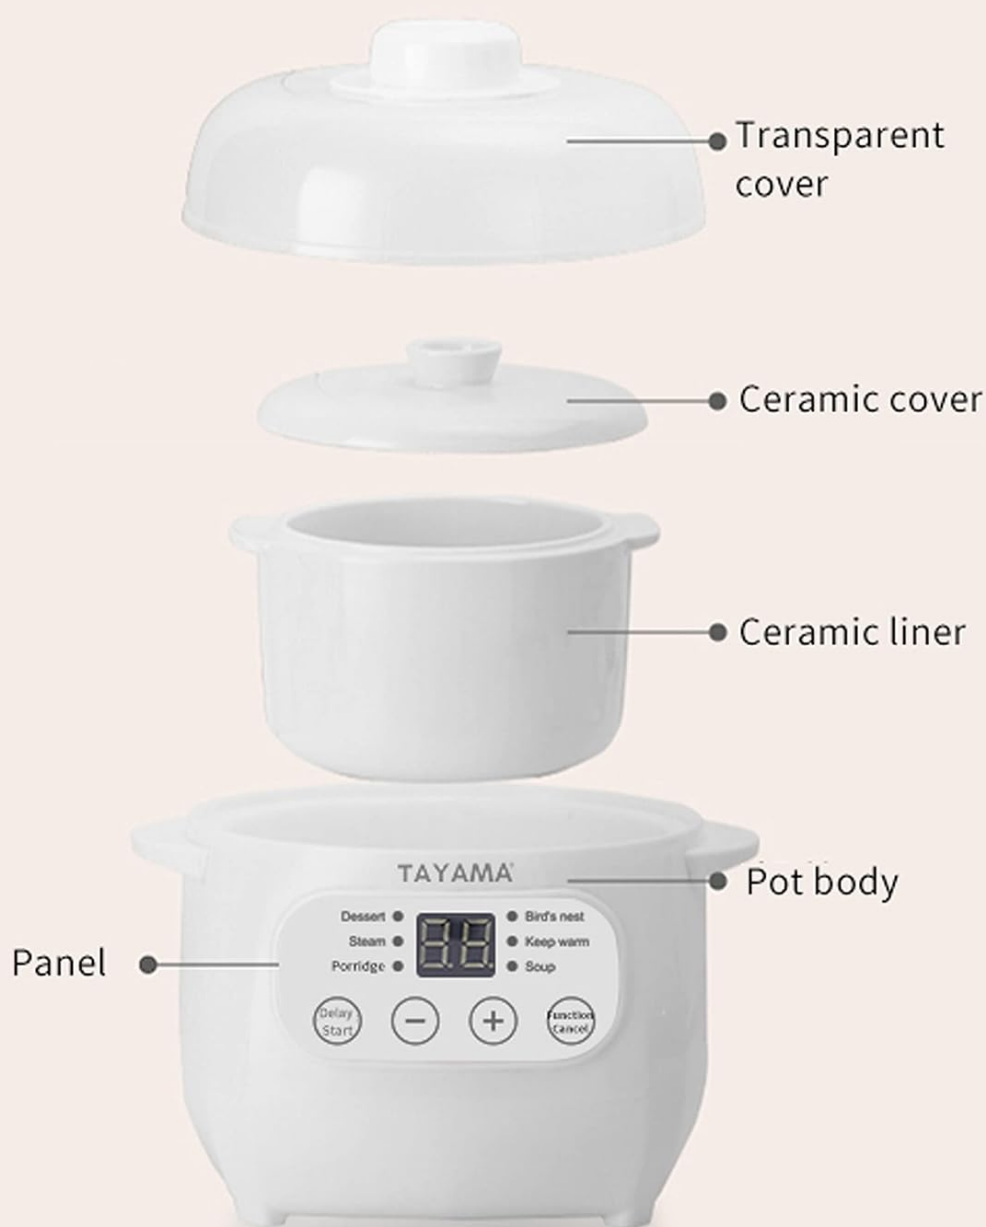

Exploded view of the TAYAMA Mini Ceramic Stew Cooker, showing the transparent outer lid, ceramic inner lid, ceramic liner pot, main pot body, and control panel.

- **Pot Body:** The main unit housing the heating element and control panel.
- **Ceramic Liner:** The inner pot where food is placed for stewing.
- **Ceramic Cover:** Lid for the ceramic liner.
- **Transparent Cover:** Outer lid for the main pot body, allowing visibility during cooking.
- **Control Panel:** Features digital display, function buttons, and timer adjustments.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Wash the ceramic liner, ceramic cover, and transparent cover with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the pot body with a damp cloth.
3. **Placement:** Place the pot body on a stable, flat, heat-resistant surface away from walls or other appliances to ensure proper ventilation.
4. **Water Level:** Fill the main pot body with water up to the MAX line indicated inside. This water creates the steam for the stewing process.



Ensure water is filled to the MAX line in the main pot body.

OPERATING INSTRUCTIONS

1. **Prepare Ingredients:** Place your desired ingredients into the ceramic liner.
2. **Assemble:** Place the ceramic liner with ingredients into the main pot body (which should already contain water up to the MAX line). Cover the ceramic liner with its ceramic cover, then place the transparent outer cover over the entire unit.
3. **Power On:** Plug the appliance into a suitable electrical outlet. The digital display will illuminate.
4. **Select Function:** Press the 'Function' button repeatedly to cycle through the preset cooking modes: Dessert, Steam, Porridge, Bird's Nest, Keep Warm, and Soup. The indicator light next to the selected function will light up.
5. **Adjust Time (if applicable):** For functions other than 'Keep Warm', you can adjust the cooking time using the '+' and '-' buttons.
6. **Delay Start (Optional):** To set a delayed start, press the 'Delay Start' button after selecting your function and time. Use '+' and '-' to set the delay time. The unit will start cooking after the delay period.
7. **Start Cooking:** The appliance will automatically begin cooking after a few seconds of inactivity or after setting the delay.

8. **Keep Warm:** Once cooking is complete, the unit will automatically switch to 'Keep Warm' mode.



Control panel for selecting functions and adjusting time.

Your browser does not support the video tag.

Official product video demonstrating the TAYAMA Mini Ceramic Stew Cooker's features and operation, including ingredient preparation and function selection.

COOKING FUNCTIONS

- **Dessert:** Ideal for sweet soups and custards.
- **Steam:** For steaming vegetables, dumplings, or other items.
- **Porridge:** Perfect for cooking various types of porridge to a smooth consistency.
- **Bird's Nest:** Specialized setting for delicate bird's nest soup.
- **Keep Warm:** Maintains food at a serving temperature after cooking.
- **Soup:** For preparing savory soups and stews.



The cooker in operation, showing the digital display and various food preparations.



Examples of food prepared using the cooker: millet and carrots for porridge, and a bird's nest dessert.

CLEANING AND MAINTENANCE

- **Before Cleaning:** Always unplug the appliance and allow it to cool completely before cleaning.

- **Ceramic Pot and Lids:** The high-quality ceramic porcelain stew pot and its lid, along with the transparent outer cover, are safe for hand washing with warm, soapy water. Rinse thoroughly and dry.
- **Pot Body:** Wipe the exterior of the pot body with a damp cloth. Do not immerse the pot body in water or any other liquid.
- **Dishwasher Safety:** The ceramic pot and lids are not specified as dishwasher safe in the product details. Hand washing is recommended to preserve their quality.
- **Storage:** Store the appliance in a dry place when not in use.

TROUBLESHOOTING

- **Appliance not turning on:** Ensure the power cord is securely plugged into a working electrical outlet.
- **Food not cooking properly:** Verify that the correct function and cooking time have been selected. Ensure the main pot body has sufficient water for the stewing process.
- **Power reduces when water is low:** This is a built-in safety feature. If the water level in the main pot body drops too low, the appliance will automatically reduce power to prevent overheating. Add water to the main pot body to resume normal operation.
- **Overheat protection and auto shut-off:** The appliance is equipped with safety mechanisms to prevent overheating. If activated, the unit will shut off automatically. Allow it to cool down before attempting to use it again.

SPECIFICATIONS

Feature	Specification
Brand	TAYAMA
Model Number	TSP-100
Color	White
Material	Ceramic
Product Dimensions	9.5"D x 9.5"W x 8.5"H
Capacity	1 Liters (1.1 Quarts)
Wattage	200 watts
Voltage	220 Volts
Control Method	Touch
Control Type	Digital
Number of Settings	3 (Low, High, Warm - based on similar models, though presets are digital)
Dishwasher Safe	No (for main unit); Ceramic pot and lid recommended hand wash.
Item Weight	3.89 pounds
UPC	810044280517

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or contact TAYAMA customer service directly. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question