

BLACK+DECKER BCKM1016KS10

BLACK+DECKER Kitchen Wand Cordless Immersion Blender (BCKM1016KS10)

Instruction Manual

1. PRODUCT OVERVIEW

The BLACK+DECKER Kitchen Wand is a versatile 6-in-1 cordless kitchen multi-tool designed to assist with various food preparation tasks. This kit includes a wand base with an adjustable speed dial and battery indicator lights, along with several attachments for blending, whisking, frothing, can opening, wine opening, and spice grinding. It features a built-in rechargeable battery for cordless convenience.

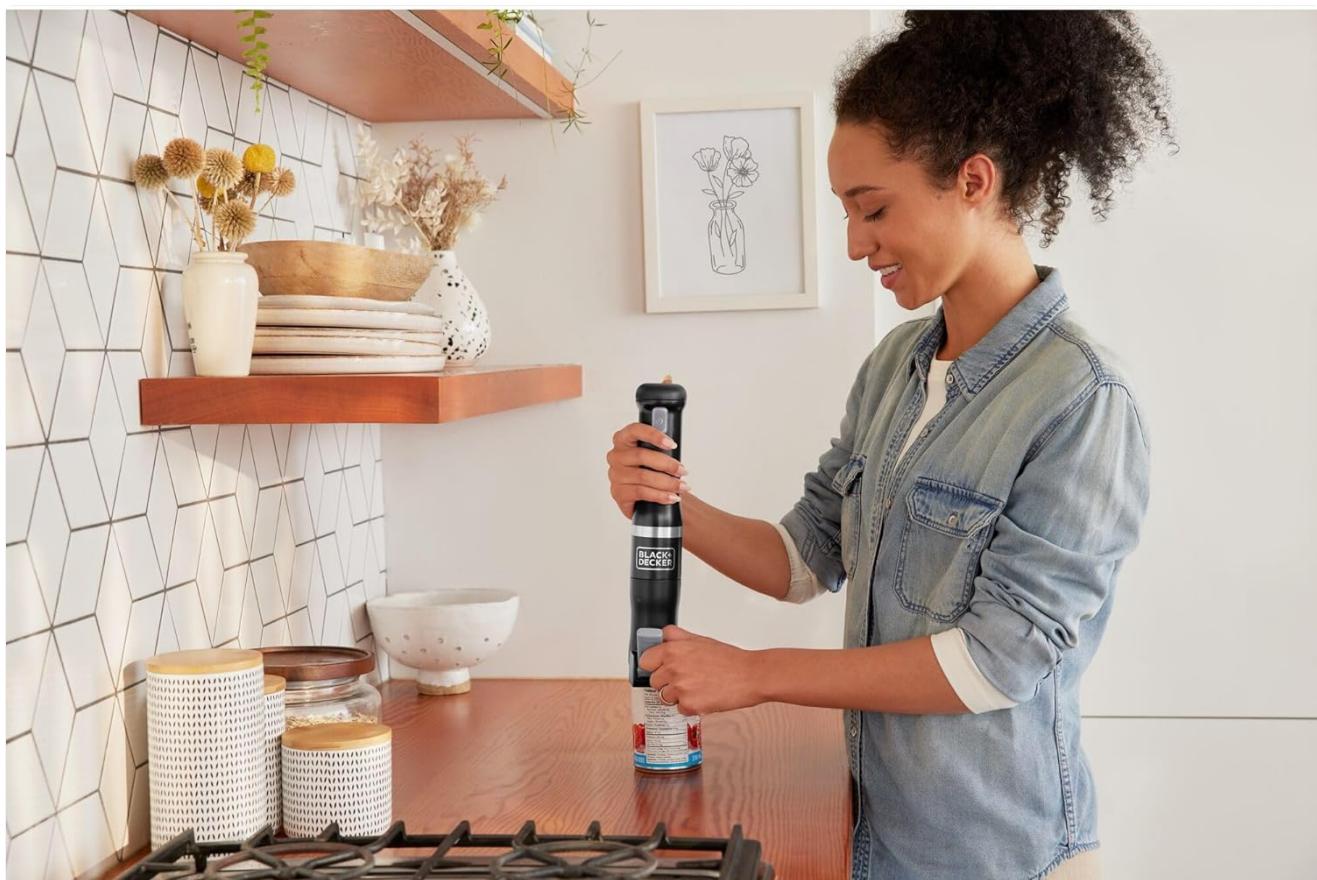


Figure 1: The BLACK+DECKER Kitchen Wand 6-in-1 Multi-Tool Set, showcasing the main unit and various attachments in its

packaging.

2. SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is switched off and unplugged (if applicable) before assembling, disassembling, or cleaning.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury.
- Do not immerse the motor unit in water or other liquids. Clean with a damp cloth only.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only attachments and accessories recommended by the manufacturer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.

3. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- Black wand base
- Immersion Blender Attachment
- Immersion Blender Guard
- Whisk Attachment
- Milk Frother Attachment
- Wine Opener Attachment with Foil Cutter
- Spice Grinder Attachment with Lid
- Measuring Cup with Lid
- 2 Storage Cases with Tray Insert
- Charging Dock with Cord



Figure 2: The main unit of the BLACK+DECKER Kitchen Wand with the immersion blender attachment connected.

4. SETUP AND CHARGING

4.1 Initial Charge

Before first use, fully charge the Kitchen Wand base. Place the wand base onto the charging dock and connect the power cord to an electrical outlet. The battery state-of-charge indicator lights on the wand base will illuminate to show charging progress. A full charge provides up to 30 minutes of continuous runtime.



Figure 3: The charging dock with its power adapter, used to recharge the Kitchen Wand base.

4.2 Attaching Accessories

To attach any accessory, align the accessory with the wand base and twist until it locks securely into place. Ensure the attachment is firmly connected before operation.

5. OPERATING INSTRUCTIONS

5.1 General Operation

The wand base features an adjustable speed dial for precise control over power. Rotate the dial to select your desired speed setting. Press and hold the power button to operate the appliance. Release the button to stop.

5.2 Immersion Blender Attachment

Attach the immersion blender to the wand base. Insert the blender into liquids or soft foods in a pot or container. Use a gentle up-and-down motion to blend ingredients until desired consistency is achieved. The immersion blender guard (Figure 4) should be used to protect the blades and prevent splashing.



Stick Vacuums

Figure 4: A man is using the BLACK+DECKER Kitchen Wand with the immersion blender attachment to blend soup in a pot.

5.3 Whisk Attachment

Connect the whisk attachment to the wand base. Use for whipping cream, beating eggs, or mixing batters. Start at a low speed and gradually increase as needed.



Hand Vacuums

Figure 5: A man is using the BLACK+DECKER Kitchen Wand with the whisk attachment to mix ingredients in a bowl.

5.4 Milk Frother Attachment

Attach the milk frother. Insert into milk or other beverages to create foam. Move the frother gently up and down to achieve desired frothiness.



Drills & Drivers

Figure 6: A woman is using the BLACK+DECKER Kitchen Wand with the milk frother attachment to create foam in a glass.

5.5 Can Opener Attachment

Secure the can opener attachment. Place the can opener on the rim of the can, ensuring the cutting wheel is positioned correctly. Press the power button and allow the opener to rotate around the can until it completes a full circle. Lift the can opener to remove the lid.



Figure 7: A woman is shown using the BLACK+DECKER Kitchen Wand to open a can, demonstrating the can opener attachment.

5.6 Wine Opener Attachment

Attach the wine opener. Use the included foil cutter (Figure 8) to remove the foil from the wine bottle. Place the wine opener over the bottle neck, ensuring it is centered. Press the power button to extract the cork. Reverse the operation to release the cork from the opener.

Why choose us?

- › Over a century of innovation and expertise in home and garden tools
- › Trusted by millions to make everyday tasks easier
- › Comprehensive product guarantees for peace of mind.
- › Thousands of happy customers

available at
amazon

Figure 8: A man is using the BLACK+DECKER Kitchen Wand with the wine opener attachment to open a wine bottle.

5.7 Spice Grinder Attachment

Attach the spice grinder. Fill the transparent chamber with whole spices like salt or pepper. Press the power button to grind. Adjust the coarseness if applicable (refer to specific grinder instructions if provided with the attachment).



Outdoor Power Tools

Figure 9: A woman is using the BLACK+DECKER Kitchen Wand with the spice grinder attachment to season a salad.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your Kitchen Wand.

- **Wand Base:** Wipe the wand base with a damp cloth. Do not immerse in water.
- **Attachments:** Most attachments (immersion blender shaft, whisk, milk frother, measuring cup, storage cases)

are dishwasher safe or can be washed by hand with warm, soapy water. Refer to individual attachment instructions for specific cleaning guidelines.

- **Can Opener, Wine Opener, Spice Grinder:** These attachments may have specific cleaning requirements. Generally, wipe clean with a damp cloth. Avoid immersing electrical components.
- **Storage:** Use the provided storage cases with tray inserts (Figure 10) to keep all components organized and protected when not in use.



Figure 10: Two clear storage cases with custom-fit tray inserts to organize the various Kitchen Wand attachments.

7. TROUBLESHOOTING

If you encounter issues with your BLACK+DECKER Kitchen Wand, refer to the following common solutions:

- **Appliance does not turn on:** Ensure the wand base is fully charged. Check that the attachment is securely connected to the wand base.
- **Attachments not working effectively:** Verify that the attachment is correctly assembled and locked into place. Ensure the speed dial is set to an appropriate level for the task.

- **Battery not charging:** Confirm the charging dock is properly connected to a working electrical outlet and the wand base is correctly seated on the dock.
- **Excessive vibration or noise:** Discontinue use immediately. Check for any obstructions in the attachment or damage to components.

For issues not resolved by these steps, please contact customer support.

8. SPECIFICATIONS

Brand	BLACK+DECKER
Model Number	BCKM1016KS10
Color	Black
Special Feature	Cordless
Capacity (Measuring Cup)	700 Milliliters
Product Dimensions	18.86"D x 11.3"W x 7.25"H
Power Source	Battery Powered
Voltage	230 Volts
Blade Material	Plastic
Control Type	Variable Speed Dial
Container Material	Plastic
Item Weight	7.8 pounds

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This BLACK+DECKER Kitchen Wand is covered by a **Limited Warranty**. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration of coverage. Keep your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, replacement parts, or any questions regarding your product, please visit the official BLACK+DECKER website or contact their customer service department. Contact information can typically be found in the warranty documentation or on the manufacturer's website.