

Qaba 350-141V00WT

Qaba Kids Wooden Kitchen Playset (Model 350-141V00WT) - Instruction Manual

Comprehensive guide for assembly, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the Qaba Kids Wooden Kitchen Playset. This manual provides essential information for the safe assembly, operation, and maintenance of your playset. Please read all instructions carefully before use and retain this manual for future reference.



Figure 1: The Qaba Kids Wooden Kitchen Playset, featuring a refrigerator, stove, oven, sink, washing machine, and various accessories.

2. SAFETY INFORMATION

This product is designed for children aged 3-6 years. Adult supervision is recommended during play. Ensure all parts are securely fastened during assembly and periodically check for loose components. Keep small parts away from young children to prevent choking hazards. This product meets ASTM F963-17 and CPSIA certification standards.

3. SETUP AND ASSEMBLY

Assembly of the Qaba Kids Wooden Kitchen Playset is required. Please follow the detailed instructions provided in the packaging. Ensure all screws are tightened appropriately, but do not overtighten to avoid damaging the wood. The playset features an adjustable two-section design, allowing for either a corner or a straight configuration to best suit your space.

3.1 Battery Installation

The range hood and cooktop each require 2 AAA batteries (not included) for sound and light effects. Locate the battery compartments, typically on the underside or rear of the respective units, and insert batteries according to polarity markings. Secure the battery compartment covers.

3.2 Playset Configuration

The playset consists of two main sections that can be arranged in different ways. For a corner setup, position the sink section perpendicular to the main stove section. For a straight setup, align both sections side-by-side. Ensure the connecting points are stable.



Figure 2: The playset's adjustable design allows for corner or straight configurations.

3.3 Unboxing and Assembly Overview

Your browser does not support the video tag.

Video 1: An overview of the unboxing and assembly process for a similar corner kitchen playset. This video provides visual guidance for initial setup.

4. OPERATING INSTRUCTIONS

The Qaba Kids Wooden Kitchen Playset offers various interactive features for an engaging play experience.

4.1 Cooktop and Range Hood

- **Cooktop Knobs:** Turn the cooktop knobs to hear realistic clicking sounds.
- **Stove Lights:** Place a pot or pan on the stove burners to activate realistic red lights, simulating a hot burner.
- **Range Hood:** The range hood features sound effects, enhancing the cooking experience.

4.2 Ice Maker

The ice maker includes ice cubes. Place a cup under the dispenser and press the lever to release the ice cubes,

mimicking a real ice-making process.

4.3 Washing Machine

The washing machine features a rotating knob. Turn the knob to simulate different wash cycles, encouraging imaginative laundry play.

4.4 Other Appliances

The playset includes an espresso maker, refrigerator, dishwasher, oven, and sink. These components feature openable doors and interactive elements for diverse role-playing scenarios.



Figure 3: Key features of the playset, including interactive appliances and sound effects.

Your browser does not support the video tag.

Video 2: A brief demonstration of the Qaba Kids Wooden Kitchen Playset's interactive features, including sound effects and appliance functions.

5. MAINTENANCE

Regular maintenance ensures the longevity and safety of your playset.

- **Cleaning:** Wipe down all surfaces with a damp cloth and mild soap. Avoid harsh chemicals that may

damage the wood finish.

- **Sink Cleaning:** The sink basin is removable for easy cleaning. Lift it out, wash with soap and water, and dry thoroughly before replacing.
- **Battery Replacement:** Replace batteries in the range hood and cooktop as needed when sounds or lights diminish.
- **Tightening Screws:** Periodically check all screws and fasteners to ensure they are tight. Re-tighten any loose screws to maintain structural integrity.

6. TROUBLESHOOTING

- **No Sound/Lights from Cooktop/Range Hood:** Check if batteries are installed correctly and are not depleted. Replace batteries if necessary.
- **Loose Parts:** If any parts become loose, re-tighten the corresponding screws. If a part is damaged, discontinue use and contact customer support.
- **Ice Maker Not Dispensing:** Ensure ice cubes are properly loaded into the ice maker compartment.

7. SPECIFICATIONS

Feature	Detail
Model Number	350-141V00WT
Overall Dimensions (Big Section)	31" L x 11.5" W x 32" H
Overall Dimensions (Small Section)	20.75" L x 11.5" W x 19.25" H
Item Weight	45.1 pounds
Recommended Age	3-6 years
Weight Capacity (Tabletop)	110 lbs.
Certifications	ASTM F963-17, CPSIA
Battery Requirements	2 AAA batteries for Range Hood, 2 AAA batteries for Cooktop (not included)
Included Accessories	Pots, Pans, Lids, Utensils

8. WARRANTY AND SUPPORT

For warranty information, replacement parts, or any product-related inquiries, please contact Qaba customer support. Refer to your purchase documentation or the Qaba official website for contact details.