

[Manuals.plus](#) /

> [QCen](#) /

> QCen Juicer Machine User Manual

QCen KS-501

QCen Juicer Machine User Manual

Model: KS-501

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the QCen Juicer Machine. Retain this manual for future reference.

- Always ensure the juicer is assembled correctly and the locking system arm is securely in place before operation. The machine will not operate if not properly locked.
- Do not operate the juicer with damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner.
- Keep hands and utensils out of the feed chute during operation to prevent injury. Use the food pusher provided.
- Do not attempt to juice items with very low water content, such as avocados or bananas, as this can damage the motor.
- Unplug the juicer from the outlet when not in use, before putting on or taking off parts, and before cleaning.
- This appliance is for household use only. Do not use outdoors.
- The motor base should never be immersed in water or other liquids.
- The overload protection system will automatically switch off the machine if overheating occurs. Allow the unit to cool down before resuming operation.

PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your QCen Juicer Machine.



Image: The QQen Juicer Machine, showcasing its sleek design and the included juice pitcher, surrounded by fresh produce like lettuce, tomatoes, onions, and cucumbers.

Juicer Components

Component	Description
Food Pusher	Used to guide fruits and vegetables down the feed chute.
Feed Chute	Wide opening for inserting produce.
Cover/Lid	Covers the juicing mechanism and secures the feed chute.
Filter Basket (Strainer)	Stainless steel mesh filter that separates pulp from juice.
Juice Spout	Where the extracted juice exits the machine.

Component	Description
Pulp Container	Collects the discarded pulp.
Motor Base	Houses the 500W motor and control dial.
Locking System Arm	Secures the cover to the motor base for safe operation.
Control Dial	Used to select speed settings (0, 1, 2).
Juice Pitcher	Container for collecting fresh juice.

SETUP AND ASSEMBLY

Follow these steps to assemble your juicer before first use.

1. Place the motor base on a stable, flat, and dry surface.
2. Insert the pulp container into its designated slot on the side of the motor base.
3. Carefully place the filter basket onto the motor base, ensuring it sits securely.
4. Position the juicer cover over the filter basket and motor base, aligning the juice spout with the opening.
5. Lift the locking system arm and secure it into the grooves on the juicer cover. You should hear a click, indicating it is locked.
6. Place the juice pitcher under the juice spout to collect the juice.
7. Insert the food pusher into the feed chute.

Easy to Use

Combine All Parts



Combine All Parts



Locking Safety Arm



Put Into Fruit & Vge and Push the Rod



Put the Lid Back to Spout Mouth

Image: A visual guide demonstrating the four key steps for assembling the juicer: combining all parts, engaging the locking safety arm, inserting fruit with the rod, and placing the lid back on the spout mouth.

OPERATING INSTRUCTIONS

Learn how to effectively use your QCen Juicer Machine for optimal results.

Preparing Produce

- Wash all fruits and vegetables thoroughly.
- For fruits with hard pits or large seeds (e.g., peaches, mangoes), remove them before juicing.
- The 3-inch wide mouth feed chute can accommodate whole fruits and vegetables, reducing prep time. However, for very large items, cutting them into smaller pieces may be beneficial.
- Peeling is generally not necessary for most fruits and vegetables, but you may peel citrus fruits if you prefer to avoid the bitterness of the rind.

3" Wide Mouth

Save your time on chopping and cutting the fruits and vegetables before juicing



Image: A close-up view of the juicer's 3-inch wide mouth, illustrating how it can accommodate whole fruits like apples, saving preparation time.

Using the Dual Speed Control


The QCen Juicer features a dual-speed control for various types of produce:

- **Speed "1" (12000-18000 RPM):** Ideal for soft fruits and vegetables.

- Examples: Watermelon, oranges, strawberries, grapes, tomatoes, kiwis, cucumbers.
- **Speed "2" (12000-18000 RPM):** Designed for harder fruits and vegetables.
 - Examples: Carrots, celery, apples, pears, ginger, beets, kale.

2 Speed Control

For different fruits and vegetable

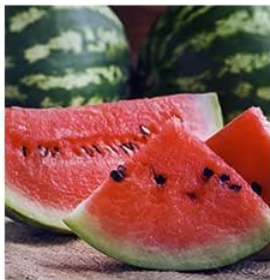

SPEED I

For soft fruits and veg



SPEED II

For hard fruits and veg



Juicing Process

1. Ensure the juicer is properly assembled and the juice pitcher is in place.
2. Plug the juicer into a suitable power outlet.
3. Turn the control dial to the desired speed setting ("1" or "2") based on the produce you are juicing.
4. Gradually feed the prepared fruits or vegetables into the feed chute. Use the food pusher to gently guide them down. Do not force the produce.
5. The fresh juice will flow into the juice pitcher, and the pulp will be collected in the pulp container.
6. When finished juicing, turn the control dial to "0" (off) and unplug the appliance.

500W Powerful Motor

Juices fruits and vegetables quickly



Image: The QQen Juicer Machine in operation, surrounded by glasses of freshly extracted juice and a variety of fruits, highlighting its 500W powerful motor for quick juicing.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your juicer.

Disassembly for Cleaning

1. Ensure the juicer is unplugged from the power outlet.
2. Release the locking system arm and remove the juicer cover.
3. Carefully remove the filter basket. To do this, grasp the edge of the filter basket and pull upwards.
4. Remove the pulp container and juice pitcher.

HOW TO REMOVE FILTER

Grasp the edge of the strainer basket and pull up.



Image: A close-up showing hands grasping the edge of the filter basket and pulling it upwards, illustrating the correct method for removal.

Cleaning Instructions

- All detachable parts (cover, filter basket, pulp container, juice pitcher, food pusher) are easy to clean.
- Rinse all detachable parts under running water immediately after use to prevent pulp from drying and sticking.

- Use a brush (often included with juicers) to clean the mesh of the filter basket thoroughly.
- Wash parts with warm, soapy water.
- **Important:** The motor base should never be immersed in water. Wipe it clean with a damp cloth.
- Dry all parts completely before reassembling or storing.
- The product specifications state that the juicer is **not dishwasher safe**. Hand wash only.

EASY TO CLEAN

Removable accessories, easy to install and clean, all parts except the motor are dishwasher safe.



Image: Various detachable components of the juicer, including the filter, cover, and pulp container, shown submerged in water, emphasizing their easy-to-clean design.

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in; Locking arm not secured; Overload protection activated.	Ensure plug is firmly in outlet; Securely lock the arm; Unplug and allow motor to cool for 30 minutes before restarting.
Low juice yield or excessive pulp.	Filter basket clogged; Incorrect speed setting; Produce too soft or overripe.	Clean the filter basket thoroughly; Use appropriate speed for produce type; Alternate soft produce with firmer items.
Machine vibrates excessively or is noisy.	Filter basket not properly seated; Too much produce forced into chute.	Disassemble and re-seat the filter basket; Feed produce slowly and gently.
Motor smells burnt.	Overheating due to continuous use or hard produce.	Turn off and unplug the juicer immediately. Allow it to cool down completely (at least 30 minutes) before attempting to use again. Avoid continuous operation for extended periods.

SPECIFICATIONS

- **Brand:** QCen
- **Model Name:** KS-501
- **Color:** Aqua
- **Maximum Power:** 500 Watts
- **Number of Speeds:** 2 (12000-18000 RPM)
- **Feed Chute Size:** 3 inches (Wide Mouth)
- **Product Dimensions:** 13.7"D x 12.01"W x 7.76"H
- **Item Weight:** 6.26 pounds
- **Material:** Stainless Steel (Blade), BPA-free plastic (Housing)
- **Power Source:** Corded Electric
- **Voltage:** 120 Volts
- **Control Type:** Button/Dial
- **Dishwasher Safe:** No (Hand Wash Only)

WARRANTY AND SUPPORT

For warranty information or technical support, please contact QCen customer service through the retailer where the product was purchased or visit the official QCen website. Please have your model number (KS-501) and purchase date available when contacting support.

For more information and product registration, visit:[QCen Official Store](#)

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question