

[Manuals.plus](#) /

› [QCen](#) /

› QCen 500W Centrifugal Juicer Machine Instruction Manual

QCen KS-501

QCen 500W Centrifugal Juicer Machine Instruction Manual

Model: KS-501

1. INTRODUCTION

Thank you for choosing the QCen 500W Centrifugal Juicer Machine. This appliance is designed for efficient juice extraction from various fruits and vegetables, promoting a healthy lifestyle. Please read this manual thoroughly before first use to ensure safe operation, optimal performance, and proper maintenance.



Image 1.1: The Q Cen 500W Centrifugal Juicer Machine, shown with fresh produce and a juice collection cup.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances.

- Read all instructions before using the appliance.
- Ensure the juicer is properly assembled and the locking safety arm is securely engaged before operation. The machine will not start if not correctly locked.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Unplug the juicer from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Keep hands and utensils away from the feed chute and moving parts during operation to prevent injury. Always use the food pusher provided.

- The appliance is equipped with an overload protection system that will automatically shut off the motor if it overheats. Allow the unit to cool down for 15-20 minutes before restarting.
- Avoid juicing items with very low water content, such as bananas or avocados, as they may clog the filter and yield minimal juice.
- Do not immerse the motor base in water or any other liquid.
- This appliance is for household use only.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your QCen Centrifugal Juicer Machine:

1. Food Pusher
2. Feed Chute Cover
3. Stainless Steel Filter Basket
4. Juice Collector (with spout)
5. Pulp Container
6. Motor Base with Control Dial
7. Locking Safety Arm

Easy to Use

Combine All Parts



Combine All Parts



Locking Safety Arm



Put Into Fruit & Vge and Push the Rod



Put the Lid Back to Spout Mouth

Image 3.1: Visual guide to assembling the juicer components.

4. SETUP INSTRUCTIONS

Follow these steps to set up your juicer for first use:

1. Place the motor base on a clean, dry, and stable surface.

2. Position the pulp container under the pulp ejection spout on the motor base.
3. Place the juice collector onto the motor base, ensuring the spout aligns with the juice outlet.
4. Insert the stainless steel filter basket firmly into the juice collector.
5. Place the feed chute cover over the filter basket and juice collector, aligning it correctly.
6. Lift and secure the locking safety arm into the grooves on the feed chute cover. Ensure it clicks into place. The juicer will not operate if the safety arm is not locked.
7. Insert the food pusher into the feed chute.
8. Plug the power cord into a standard electrical outlet.

5. OPERATING INSTRUCTIONS

5.1. Preparation of Fruits and Vegetables

- Wash all fruits and vegetables thoroughly.
- For fruits with large seeds or hard pits (e.g., peaches, cherries), remove them before juicing.
- The 3-inch wide feed chute accommodates many whole fruits and vegetables. However, cut larger items into smaller pieces that fit comfortably without forcing.
- Remove thick or inedible peels (e.g., pineapple, melon, citrus fruits). Thin skins (e.g., apples, cucumbers) can be juiced.

3" Wide Mouth

Save your time on chopping and cutting the fruits and vegetables before juicing



Image 5.1: The wide mouth feed chute allows for larger pieces of produce.

5.2. Juicing Process


1. Ensure the juicer is correctly assembled and plugged in.
2. Place a glass or container under the juice spout.
3. Turn the control dial to the desired speed setting:

- **Speed 1 (12000-18000 RPM):** Ideal for soft fruits and vegetables such as watermelon, oranges, strawberries, grapes, tomatoes, and lemons.
- **Speed 2 (18000-22000 RPM):** Suitable for hard fruits and vegetables like carrots, celery, apples, pears, beets, and kale.

4. Gradually feed the prepared ingredients into the feed chute. Use the food pusher to gently guide them down. Do not apply excessive force.
5. Allow the juicer to process the ingredients at its own pace. Overloading can cause the motor to stall or activate the overload protection.
6. Once juicing is complete, turn the control dial to '0' (off) and unplug the appliance.

2 Speed Control

For different fruits and vegetable

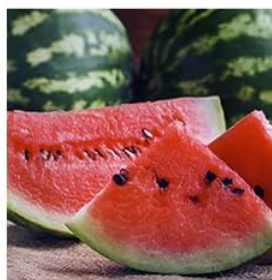

SPEED I

For soft fruits and veg



SPEED II

For hard fruits and veg



Image 5.2: Two-speed control for various produce types.

500W Powerful Motor

Juices fruits and vegetables quickly



Image 5.3: The 500W motor efficiently extracts juice.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your juicer.

1. Always unplug the juicer from the power outlet before cleaning.

2. Disassemble all removable parts: food pusher, feed chute cover, filter basket, juice collector, and pulp container.
3. **Hand Wash Only:** All detachable parts should be washed by hand with warm, soapy water. Rinse thoroughly and dry immediately. Do not use abrasive cleaners or scouring pads.
4. **Filter Basket Cleaning:** The stainless steel filter basket requires special attention. Use the provided cleaning brush to remove pulp residue from the mesh. Rinse under running water until clean.
5. **Removing the Filter Basket:** To remove the filter basket, grasp its edge and pull upwards firmly.
6. **Motor Base:** Wipe the motor base with a damp cloth. Never immerse the motor base in water or any other liquid.
7. Reassemble the dry parts for storage or next use.

HOW TO REMOVE FILTER

Grasp the edge of the strainer basket and pull up.



Image 6.1: Proper method for removing the filter basket.

EASY TO CLEAN

Removable accessories, easy to install and clean, all parts except the motor are dishwasher safe.



Image 6.2: Detachable parts are easy to clean by hand.

7. TROUBLESHOOTING

If you encounter issues with your juicer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Juicer does not turn on.	1. Power cord not plugged in. 2. Locking safety arm not engaged. 3. Overload protection activated.	1. Ensure the power cord is securely plugged into an outlet. 2. Check that the locking safety arm is fully secured. 3. Unplug, allow to cool for 15-20 minutes, then restart. Reduce load.
Low juice yield or wet pulp.	1. Incorrect speed setting for produce. 2. Filter basket clogged. 3. Overloading the feed chute.	1. Use Speed 2 for hard produce. Use Speed 1 for soft produce. 2. Clean the filter basket thoroughly after each use. 3. Feed ingredients gradually and do not force them.
Motor stops during operation.	Overload protection activated due to excessive load or overheating.	Unplug the appliance, remove any blockage, and allow the motor to cool for 15-20 minutes before resuming operation. Reduce the amount of produce fed at one time.
Excessive vibration or noise.	Improper assembly or damaged filter basket.	Ensure all parts are correctly assembled and securely locked. Check the filter basket for any damage or deformation.

8. SPECIFICATIONS

- **Brand:** QCen
- **Model Name:** KS-501
- **Maximum Power:** 500 Watts
- **Voltage:** 120 Volts
- **Number of Speeds:** 2 (Speed 1: 12000-18000 RPM, Speed 2: 18000-22000 RPM)
- **Product Dimensions:** 13.7"D x 12.01"W x 7.76"H
- **Item Weight:** 6.36 pounds
- **Blade Material:** Stainless Steel
- **Finish Type:** Stainless Steel
- **Product Care Instructions:** Hand Wash Only
- **Is Dishwasher Safe:** No

9. WARRANTY AND SUPPORT

For detailed warranty information, product registration, or customer support, please refer to the documentation included with your QCen Juicer Machine. You may also visit the official QCen website or contact their customer service department directly for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question