



Manuals.plus /

› Jimmyjane /

› JIMMYJANE Pulsus Prostate Massager Instruction Manual

Jimmyjane JJ10552

JIMMYJANE Pulsus™ Prostate Massager

Model: JJ10552

INTRODUCTION

Thank you for choosing the JIMMYJANE Pulsus™ Prostate Massager. This device is designed to provide targeted stimulation with its unique "Come-Hither" motion and dual motors. Please read this manual thoroughly before first use to ensure safe and optimal operation.

Important Safety Information:

- This product is for adult use only.
- Consult a healthcare professional before use if you have any medical conditions or concerns.
- Discontinue use immediately if you experience any discomfort or pain.
- Do not use if the product appears damaged.
- Keep out of reach of children.

PRODUCT FEATURES

- **"Come-Hither" Fingering Motion:** Features 3-speed/7-pattern rocking motions for targeted prostate stimulation.
- **Dual Motors:** A powerful motor in the curved tip for P-spot vibrations and a hyper-pulse motor in the base for perineum stimulation.
- **10 Vibration Modes:** Offers a variety of intensity and pattern options.
- **Wireless Remote Control:** Allows for hands-free operation with a range of up to 25 feet.
- **Body-Safe Material:** Made from soft, flexible, phthalate-free, and latex-free silicone.
- **Waterproof Design:** IPX7 rated for safe use in water.
- **Rechargeable:** Convenient magnetic USB charging.
- **Ergonomic Design:** Shaped to conform to natural curves for comfort.
- **Travel-Ready:** Includes a travel lock and discreet pouch.

PACKAGE CONTENTS

- JIMMYJANE Pulsus™ Prostate Massager
- Wireless Remote Control
- Magnetic USB Charging Cable
- Discreet Storage Pouch
- Instruction Manual

SETUP

1. Initial Charging

Before first use, fully charge your Pulsus device and its remote control.

1. Locate the magnetic charging port on the device and the remote.
2. Attach the magnetic USB charging cable to the ports. Ensure a secure connection.
3. Connect the USB end of the cable to a standard USB power adapter (not included) or a computer USB port.
4. The indicator light will illuminate during charging and turn solid when fully charged.
5. Charging typically takes 2-3 hours for a full charge.



Image: The JIMMYJANE Pulsus Prostate Massager and its remote control. The massager is a curved, ergonomic device, and the remote is a small, circular unit with control buttons.

OPERATION

1. Power On/Off

- **To Power On:** Press and hold the power button on the device or the remote control for 2 seconds. The indicator light will flash.
- **To Power Off:** Press and hold the power button on the device or the remote control for 2 seconds. The indicator light will turn off.

2. Using the Remote Control

The wireless remote control allows for convenient adjustment of settings.



Image: Close-up of the JIMMYJANE Pulsus remote control, showing the power, intensity, and pattern buttons.

- **Power Button:** Press and hold to turn the device on/off.
- **Intensity Button:** Press to cycle through 3 speed levels for the "Come-Hither" motion and 10 vibration modes for the perineum stimulator.
- **Pattern Button:** Press to change the vibration pattern.

3. Activating Travel Lock

To prevent accidental activation during travel:

- While the device is OFF, press and hold the power button and the intensity button simultaneously for 3 seconds. The indicator light will flash to confirm activation.
- To deactivate, repeat the process.

CARE AND MAINTENANCE

1. Cleaning

- Clean the device thoroughly before and after each use.
- Wash with warm water and a mild, toy-safe soap.
- Rinse thoroughly and pat dry with a lint-free cloth.

- Do not use cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone.

2. Storage

- Store the device in its discreet pouch in a cool, dry place, away from direct sunlight and extreme temperatures.
- Avoid storing with other toys made of different materials to prevent material degradation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is low or depleted. Travel lock is active.	Charge the device fully. Deactivate travel lock (see "Activating Travel Lock" section).
Remote control is not working.	Remote battery is low. Out of range.	Charge the remote control. Ensure the remote is within 25 feet of the device.
Vibrations feel weak.	Battery is low.	Recharge the device.

SPECIFICATIONS

- **Model Number:** JJ10552
- **Material:** Body-safe Silicone, Plastic
- **Color:** Blue (as per current variant)
- **Water Resistance:** IPX7 (Waterproof)
- **Power Source:** Rechargeable Lithium-ion Battery
- **Charging:** Magnetic USB
- **Remote Range:** Up to 25 feet
- **Package Dimensions:** 10.24 x 4.72 x 2.83 inches
- **Item Weight:** 1.21 Pounds

WARRANTY AND SUPPORT

JIMMYJANE products are manufactured to the highest quality standards. For warranty information, product support, or to register your product, please visit the official JIMMYJANE website or contact customer service through the details provided on the product packaging or official website.

Please retain your proof of purchase for warranty claims.