

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sencor](#) /

› [Sencor SPR 3600WH Electric Pressure Cooker User Manual](#)

## Sencor SPR 3600WH

# Sencor SPR 3600WH Electric Pressure Cooker

## User Manual

**Important: Read this manual thoroughly before first use.**

### 1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions carefully before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use the appliance for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is properly closed before operating.
- Never force open the pressure cooker. Ensure internal pressure is completely released before opening.
- Do not fill the unit over 2/3 full. When cooking foods that expand during cooking, such as rice or dried vegetables, do not fill the unit over 1/2 full.
- Always check the pressure release valve and float valve for clogging before use.

### 2. PRODUCT OVERVIEW

## 2.1 Components



Figure 1: Sencor SPR 3600WH Electric Pressure Cooker main unit.

The Sencor SPR 3600WH Electric Pressure Cooker consists of the following main components:

- **Main Unit:** Houses the heating element and control panel.
- **Inner Pot:** Non-stick cooking pot with capacity markings.
- **Lid:** Pressure-sealing lid with safety valves and handle.
- **Accessories:** Measuring cup, rice spoon, ladle, steam rack, steamer basket.



Figure 2: The removable inner pot with capacity markings up to 4 liters.



Figure 3: Included accessories: ladle, rice spoon, steam rack, steamer basket, and measuring cup.

## 2.2 Control Panel



Figure 4: The control panel of the Sencor SPR 3600WH.

The control panel features a digital display and various buttons for operation:

- **Display:** Shows cooking time, temperature, and program status.
- **Preset Programs:** Icons for 14 different cooking functions (e.g., Fry, Stew, Meat, Fish, Rice, Bread, Pasta, Vegetables, Slow Cook, Yoghurt, Desserts, Oven, Cake, Steam).
- **Preset Button:** Selects preset cooking programs.
- **+/- Buttons:** Adjust time, temperature, or other settings.
- **Texture Button:** Adjusts cooking texture (e.g., Light, Standard, Strong for some programs).
- **Manual Button:** For custom cooking settings.
- **Keep Warm/Cancel Button:** To cancel a program or activate/deactivate the keep warm function.
- **Start Button:** Initiates the selected cooking program.
- **Menu Knob:** Used to navigate through options and confirm selections.

### 3. SETUP AND FIRST USE

### 3.1 Unpacking

Carefully remove all packaging materials and inspect the pressure cooker for any damage. Retain packaging for future storage or transport if needed.



Figure 5: The product packaging for the Sencor SPR 3600WH.

### 3.2 Initial Cleaning

1. Wash the inner pot, lid (including the sealing ring and valves), and all accessories with warm, soapy water.
2. Rinse thoroughly and dry all parts completely.
3. Wipe the exterior of the main unit with a damp cloth. Never immerse the main unit in water.

### 3.3 Assembly

1. Place the inner pot into the main unit. Ensure it sits correctly and is level.
2. Check that the sealing ring is properly seated inside the lid.
3. Ensure the pressure release valve and float valve are clear and free of debris.
4. Place the lid onto the main unit, aligning the arrow on the lid with the unlock symbol on the cooker body. Rotate clockwise until it locks into place, aligning with the lock symbol.

## 4. OPERATING INSTRUCTIONS

### 4.1 Basic Operation

- 1. Prepare Ingredients:** Place desired ingredients and liquid into the inner pot. Do not exceed the MAX fill line (2/3 full for most foods, 1/2 full for expanding foods).
- 2. Close Lid:** Securely close the lid as described in Section 3.3. Ensure the pressure release valve is set to the "Sealing" position.
- 3. Plug In:** Connect the power cord to a grounded electrical outlet. The display will illuminate.
- 4. Select Program:**
  - **Preset Programs:** Press the "Preset" button repeatedly or use the "Menu" knob to cycle through the 14 available programs (e.g., Fry, Stew, Meat, Fish, Rice, Bread, Pasta, Vegetables, Slow Cook, Yoghurt, Desserts, Oven, Cake, Steam). The selected program icon will light up.
  - **Adjust Settings (if applicable):** For some programs, you can adjust cooking time using the "+/-" buttons or texture (Light, Standard, Strong) using the "Texture" button.
  - **Manual Mode:** Press the "Manual" button to set custom cooking time and temperature. Use the "+/-" buttons to adjust values.
- 5. Start Cooking:** Press the "Start" button to begin the cooking process. The cooker will preheat, build pressure, and then begin the countdown.
- 6. Pressure Release:** Once cooking is complete, the cooker will beep and automatically switch to "Keep Warm" mode. To release pressure:
  - **Natural Release:** Allow the pressure to dissipate naturally. This is recommended for foamy foods or large cuts of meat. The float valve will drop when pressure is released.
  - **Quick Release:** Carefully turn the pressure release valve to the "Venting" position. **Caution:** Hot steam will be released. Keep hands and face away from the valve.
- 7. Open Lid:** Once the float valve has dropped, indicating all pressure is released, rotate the lid counter-clockwise and lift it carefully away from your face.

### 4.2 Using Preset Programs

The Sencor SPR 3600WH offers 14 preset programs for various dishes. Each program has optimized default settings, which can often be adjusted.



Figure 6: The display showing a timer setting for a cooking program.

Examples of cooking with preset programs:

- **Pasta:** Select the "Pasta" program. Add pasta and water according to recipe. The cooker will automatically set the appropriate pressure and time.
- **Stew:** Use the "Stew" program for tender meats and vegetables.
- **Steam:** Place food on the steamer basket with water below. Select "Steam" for healthy cooking of vegetables or fish.



Figure 7: Pasta prepared using a preset program.



Figure 8: Stew cooking in the inner pot.



Figure 9: Fish and vegetables steaming using the steamer basket.



Figure 10: Cake baking in the pressure cooker.

#### 4.3 Keep Warm Function

After cooking, the appliance automatically enters "Keep Warm" mode to maintain food temperature. Press the "Keep Warm/Cancel" button to exit this mode.

### 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your pressure cooker.

## 5.1 Cleaning the Inner Pot and Accessories

- After each use, allow the inner pot to cool completely.
- Wash the inner pot and accessories with warm, soapy water and a non-abrasive sponge.
- Rinse thoroughly and dry completely before storing.
- The inner pot is dishwasher safe, but hand washing is recommended to preserve the non-stick coating.

## 5.2 Cleaning the Lid

- Remove the sealing ring from the lid for thorough cleaning. Wash it with warm, soapy water.
- Clean the pressure release valve and float valve to ensure they are free of food particles. Use a small brush if necessary.
- Wipe the lid with a damp cloth. Do not immerse the lid in water.
- Ensure all lid components are dry before reassembling.

## 5.3 Cleaning the Main Unit

- Unplug the appliance and allow it to cool.
- Wipe the exterior of the main unit with a damp cloth.
- Never immerse the main unit in water or any other liquid.

## 6. TROUBLESHOOTING

If you encounter issues with your Sencor SPR 3600WH, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Pressure not building.	Lid not properly closed; sealing ring not seated; pressure release valve in "Venting" position; insufficient liquid.	Ensure lid is locked; check and adjust sealing ring; set pressure release valve to "Sealing"; add more liquid.
Steam leaking from lid.	Sealing ring damaged or improperly installed; food debris on sealing ring or rim; lid not closed correctly.	Inspect and reposition/replace sealing ring; clean lid and rim; ensure lid is securely locked.
Food undercooked.	Insufficient cooking time; too much food; incorrect program selected.	Increase cooking time; reduce food quantity; select appropriate program.
Display shows error code.	Specific internal malfunction.	Refer to the full manual for specific error codes or contact customer support. Unplug and replug the unit.

If the problem persists after attempting these solutions, please contact Sencor customer support.

## 7. SPECIFICATIONS

Brand	Sencor
Model Number	SPR 3600WH

<b>Capacity</b>	5.5 Liters
<b>Power / Wattage</b>	1000 watts
<b>Voltage</b>	220 Volts
<b>Material</b>	Stainless steel
<b>Product Dimensions</b>	84 x 56 x 34 cm
<b>Item Weight</b>	6 Kilograms
<b>Special Features</b>	Automatic Shut-Off, Keep Warm Setting, 14 Preset Programs
<b>Control Method</b>	Touch / Knob

## 8. WARRANTY AND SUPPORT

This Sencor SPR 3600WH Electric Pressure Cooker comes with a **2-year replacement warranty** from the date of purchase.

For warranty claims, technical support, or further assistance, please contact your local Sencor customer service or the retailer from whom the product was purchased. Please have your proof of purchase and product model number ready.

For more information, visit the official Sencor website: [www.sencor.com](http://www.sencor.com)

© 2023 Sencor. All rights reserved.

Manual Version: 1.0