

MEUBLE COSY EPPING FABRIC GREY NATURE WOOD LEG 2022

MEUBLE COSY Scandinavian Rocking Chair User Manual

Model: EPPING FABRIC GREY NATURE WOOD LEG 2022

Brand: MEUBLE COSY

1. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- **Maximum Weight Capacity:** This rocking chair has a maximum recommended weight capacity of **110 kg (approximately 242 lbs)**. Do not overload the product to ensure your safety and prevent damage.
- **Assembly:** Follow the assembly instructions carefully. Do not overtighten screws until all components are aligned.
- **Stability:** Ensure the chair is placed on a flat, stable surface before use.
- **Children:** Keep children away from the assembly area. Small parts may pose a choking hazard.
- **Maintenance:** Regularly check all fasteners to ensure they remain tight.

2. PRODUCT OVERVIEW

The MEUBLE COSY Scandinavian Rocking Chair is designed for comfort and relaxation. Its elegant design features a padded fabric seat and backrest, supported by a durable metal frame with natural wood rocking runners. It is suitable for various rooms including living rooms, bedrooms, and nurseries.

Key Features:

- **Comfortable Padding:** Features SOFT FOAM material for a comfortable and resilient seating experience.
- **Ergonomic Design:** High backrest adapts to the curve of your back, providing optimal support and comfort.
- **Gentle Rocking Motion:** Two curved wooden runners allow for a smooth, relaxing rocking movement.
- **Durable Construction:** Sturdy iron structure combined with wood and metal legs ensures quality and longevity.
- **Scandinavian Aesthetic:** Timeless design that complements various interior styles.



Image 1: The MEUBLE COSY Scandinavian Rocking Chair in Light Grey, showcasing its elegant design and comfortable appearance.

This image displays the overall design of the rocking chair, highlighting its upholstered seat, high backrest with button tufting, and the distinctive wooden rocking base.



Image 2: The rocking chair positioned in a modern living room, demonstrating its aesthetic integration into a home environment.

This image illustrates the rocking chair's suitability for a living room, complementing other furniture and decor, emphasizing its role as a leisure chair.

3. PACKAGE CONTENTS

Before beginning assembly, please ensure all parts are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Chair Seat and Backrest Assembly
- Metal Frame Components
- Wooden Rocking Runners
- Hardware Pack (screws, washers, Allen key)
- Assembly Instructions Manual

4. SETUP AND ASSEMBLY

Assembly is required for this product. It is recommended to assemble the chair on a soft, clean surface to prevent scratches. Two people may be helpful for certain steps.

Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a protected surface. Verify all parts listed in the "Package Contents" section are present.
2. **Attach Metal Frame:** Connect the metal frame components to the underside of the chair seat. Ensure all holes are aligned before inserting screws.
3. **Secure Wooden Runners:** Attach the wooden rocking runners to the metal frame. Do not fully tighten screws at this stage.
4. **Final Tightening:** Once all components are loosely assembled and aligned, gradually tighten all screws using the provided Allen key. Ensure all connections are secure but do not overtighten.
5. **Stability Check:** Gently rock the chair to ensure stability and proper function.

Important Note: Do not fully tighten screws until all components are aligned. This prevents misalignment and potential damage during assembly.



Image 3: Detailed dimensions of the rocking chair, including width, depth, height, and seat measurements.

This image provides a visual guide to the chair's dimensions, which can be helpful during assembly and placement planning.

5. OPERATING INSTRUCTIONS

The MEUBLE COSY Scandinavian Rocking Chair is designed for simple and comfortable use.

- **Seating:** Sit gently into the chair, ensuring your weight is evenly distributed.
- **Rocking:** Use your feet to initiate a gentle rocking motion. Avoid excessive force or rapid movements to prevent tipping.
- **Relaxation:** Lean back and enjoy the ergonomic support and soft cushioning. The armrests are designed for comfortable arm placement.

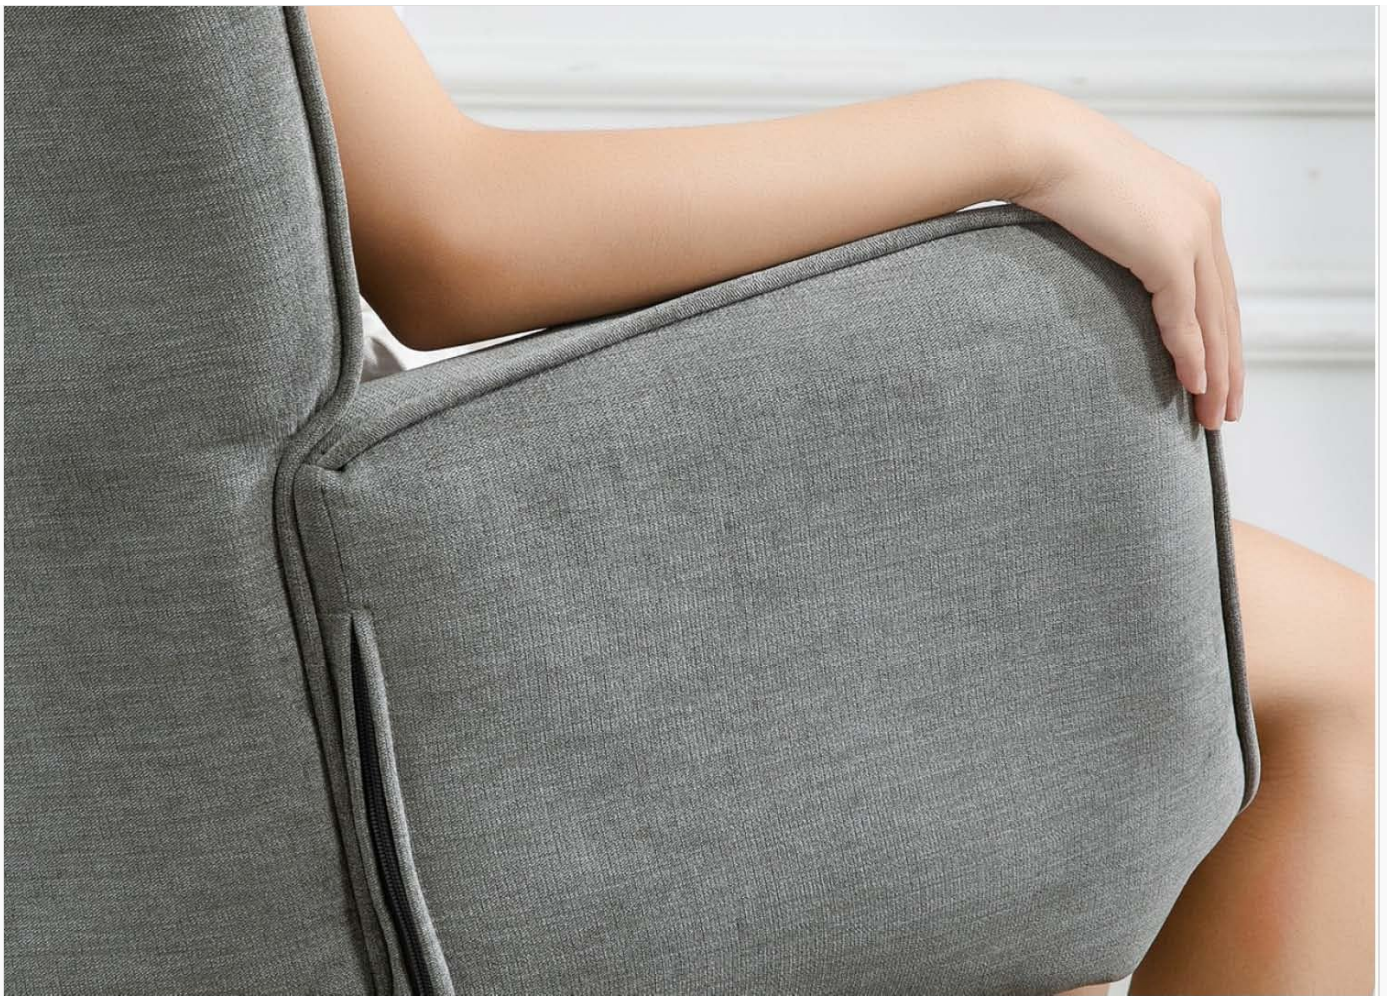


Image 4: A close-up view of the chair's armrest, highlighting the soft padding and fabric texture.

This image details the construction of the armrests, showing the soft sponge filling that contributes to overall comfort.



Image 5: A demonstration of the chair's soft foam cushioning, indicating its comfort and resilience.

This image visually confirms the "SOFT FOAM" material used in the chair's cushioning, emphasizing its comfortable and supportive nature.

6. MAINTENANCE

Proper care will extend the life and appearance of your rocking chair.

- **Cleaning:** The manufacturer recommends cleaning the fabric as needed. For general cleaning, use a soft, damp cloth. For spills, blot immediately with a clean, dry cloth. Avoid harsh chemicals or abrasive cleaners.
- **Frame Care:** Wipe the metal and wood components with a dry or slightly damp cloth.
- **Fasteners:** Periodically check all screws and bolts to ensure they are tight. Retighten if necessary to maintain stability and safety.
- **Placement:** Avoid placing the chair in direct sunlight or near heat sources to prevent fading or material degradation.



Image 6: Icons illustrating the fabric's properties: breathable, durable, resilient, and comfortable.

This image visually communicates the quality and characteristics of the chair's fabric, which are important for maintenance and long-term satisfaction.

7. TROUBLESHOOTING

If you encounter any issues with your rocking chair, refer to the following common solutions:

Problem	Possible Cause	Solution
Chair feels wobbly or unstable.	Loose fasteners; uneven floor.	Check and tighten all screws and bolts. Move the chair to a flat, level surface.

Problem	Possible Cause	Solution
Squeaking noise during rocking.	Friction between components; loose connections.	Ensure all fasteners are tight. Apply a small amount of silicone lubricant to contact points if necessary (avoiding fabric).
Difficulty with assembly.	Misaligned parts; incorrect hardware.	Review the assembly instructions carefully. Ensure parts are correctly oriented before tightening. Contact customer support if parts are missing or damaged.

8. SPECIFICATIONS

Feature	Detail
Brand	MEUBLE COSY
Model Number	EPHING FABRIC GREY NATURE WOOD LEG 2022
Color	Light Grey
Product Dimensions (L x W x H)	84 x 66 x 97 cm (33.1 x 26 x 38.2 inches)
Material	Wood, Metal, Fabric (SOFT FOAM padding)
Special Features	Armrest, Ergonomic Design
Item Weight	10 Kilograms (22 lbs)
Maximum Weight Capacity	110 kg (242 lbs)
Care Instructions	Clean as needed (refer to Maintenance section)
Country of Origin	China

9. WARRANTY AND SUPPORT

Information regarding specific warranty terms and customer support contact details is not available in the provided product data. Please refer to your purchase documentation or the retailer's website for warranty information and customer service contacts. For general inquiries or assistance, please visit the MEUBLE COSY brand store:[MEUBLE COSY Brand Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question