

[Manuals.plus](#) /

› [zheozeig](#) /

› zheozeig 4K 48MP Digital Camera User Manual

zheozeig DC101

zheozeig 4K 48MP Digital Camera User Manual

Model: DC101

Brand: zheozeig

INTRODUCTION

This manual provides detailed instructions for the zheozeig 4K 48MP Autofocus Vlogging Camera, Model DC101. This camera is designed for photography and video recording, offering features such as 4K video resolution, 48MP image resolution, autofocus, 16X digital zoom, and a 180-degree flip screen. Please read this manual thoroughly to ensure proper use and to maximize your camera's capabilities.

WHAT'S IN THE BOX

- 1 x 4K Digital Camera
- 1 x Charging Stand
- 2 x Rechargeable Batteries
- 1 x 32GB SD Card
- 1 x Power Adapter
- 1 x USB Cable
- 1 x HDMI Cable
- 1 x Camera Bag
- 1 x Wrist Strap
- 1 x User Manual



Figure 1: Camera and Included Accessories

The package includes the 4K Digital Camera unit, a charging stand, two rechargeable batteries, a 32GB SD card, a power adapter, USB cable, HDMI cable, camera bag, wrist strap, and this user manual.

SETUP

1. Charging the Batteries

Before initial use, fully charge both included Lithium Ion batteries. Insert a battery into the charging stand and connect the stand to the power adapter using the USB cable. Plug the power adapter into a wall outlet. The indicator light on the charger will show charging status. Alternatively, you can charge the battery directly inside the camera by connecting the camera to the power adapter via the USB cable.

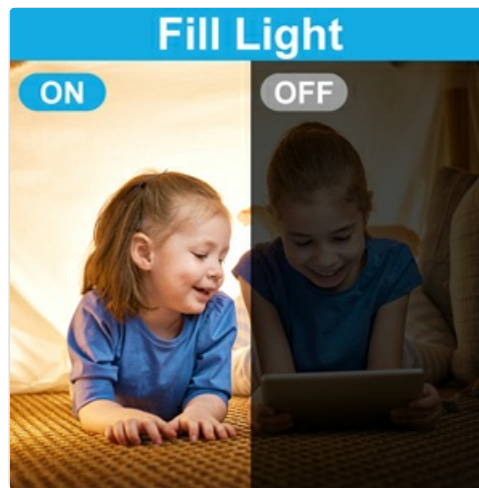


Figure 2: Dual Charging Mode

The camera supports dual charging modes, allowing batteries to be charged directly in the camera via USB or using the included external charging stand.

2. Inserting the SD Card

Locate the SD card slot on the side of the camera. Ensure the camera is powered off. Insert the provided 32GB SD card (or another compatible SD card up to 128GB, Class 10 or higher) into the slot with the metal contacts facing down until it clicks into place. To remove, gently push the card in until it springs out.



Figure 3: SD Card Insertion

The camera's SD card slot is located on the side. Insert the 32GB SD card into this slot for storage of photos and videos.

OPERATING THE CAMERA

1. Powering On/Off

Press and hold the Power button located on the top of the camera to turn it on or off. The LCD screen will illuminate upon startup.

2. Autofocus Function

The camera features an autofocus function to ensure sharp images. To focus on a subject, gently press the shutter button halfway down. The camera will automatically adjust the focus. Once focused, fully press the shutter button to capture the photo or start recording.

Autofocus Camera



Figure 4: Autofocus in Action

This image demonstrates the camera's autofocus capability, ensuring subjects are sharp and clear.

3. Using the 180-Degree Flip Screen

The 3.0-inch LCD screen can be flipped 180 degrees, making it ideal for self-portraits, vlogging, or group selfies where you want to see yourself while composing the shot. Simply rotate the screen outwards and then pivot it to face the front.



Figure 5: 180-Degree Flip Screen

The camera's flip screen allows for easy self-recording and monitoring during vlogging sessions.

4. Digital Zoom (16X)

To zoom in or out, use the W (Wide) and T (Telephoto) buttons on the camera. The camera supports up to 16X digital zoom, allowing you to magnify distant subjects. Note that digital zoom may affect image quality at higher magnifications.



Figure 6: 16X Digital Zoom

The camera offers 16X digital zoom for capturing distant details.

5. Video Recording and Pause Function

To begin video recording, press the dedicated Record button. The camera supports 4K video resolution. During recording, you can press the Pause button to temporarily stop the recording and then press it again to resume, creating a single continuous video file without interruption.

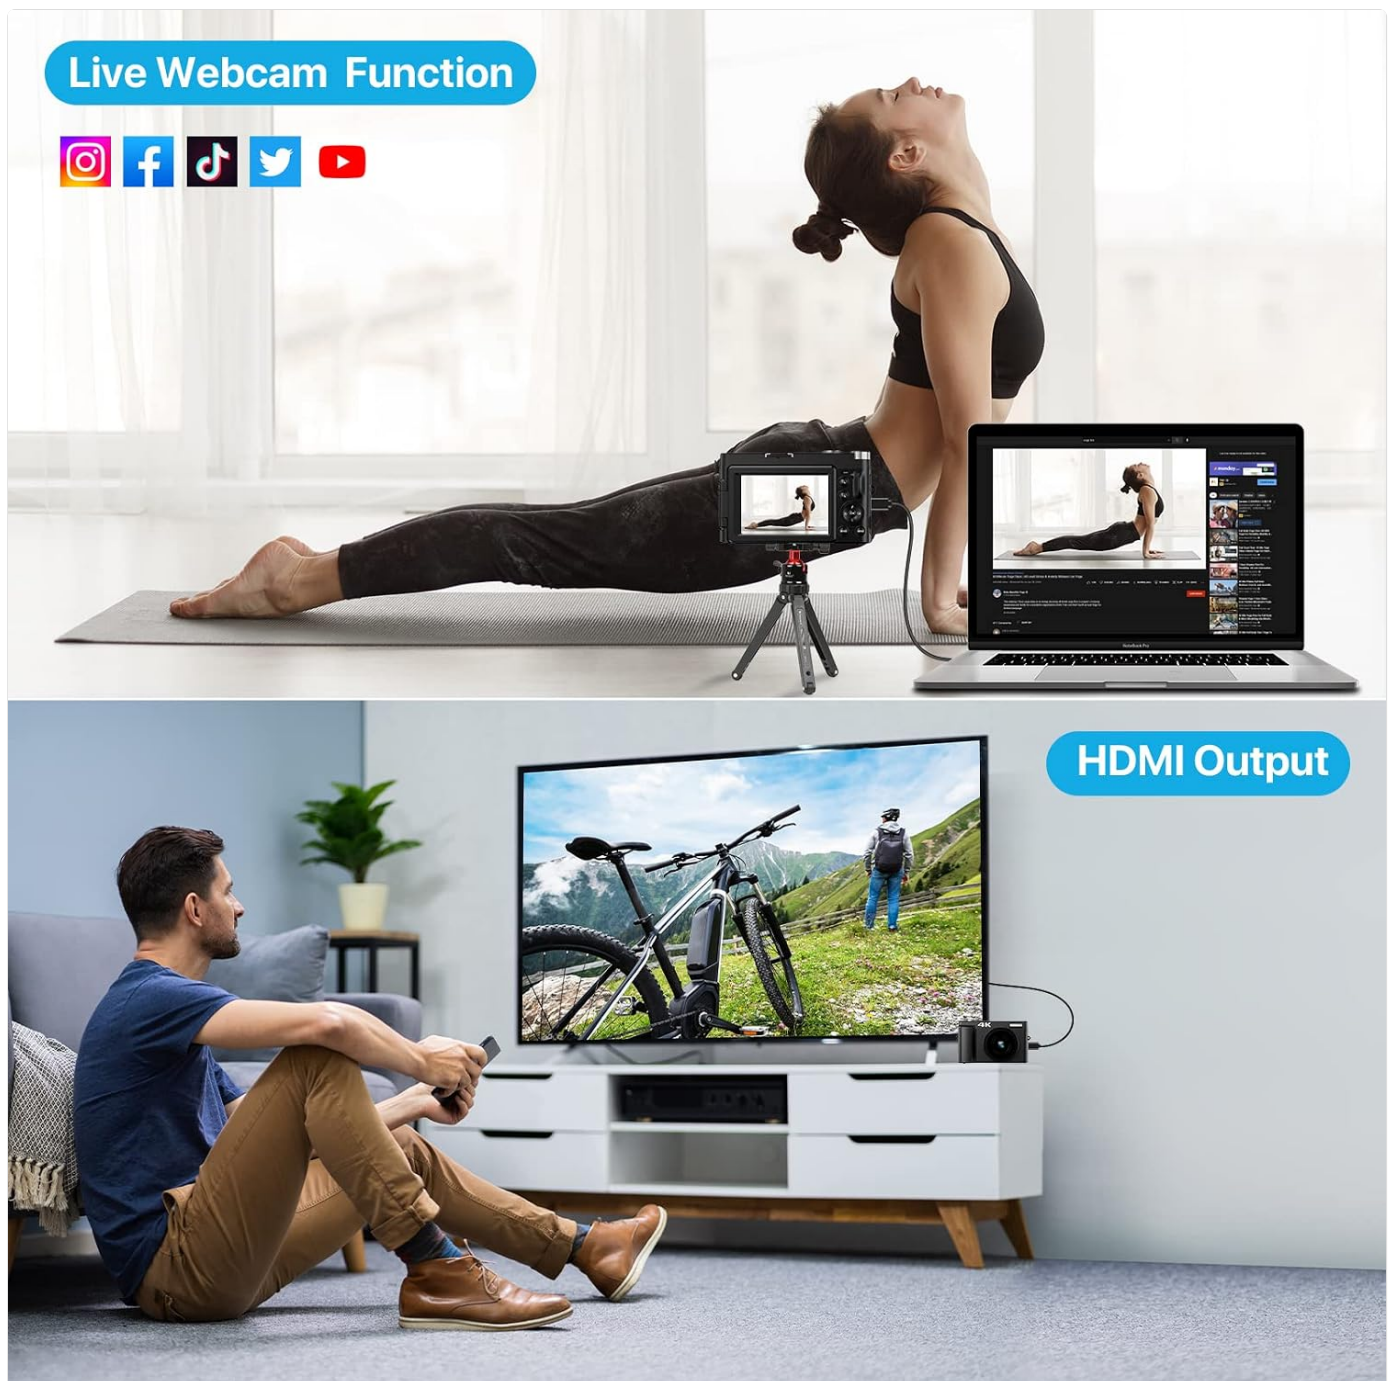


Figure 7: Video Recording with Pause

The pause function allows for seamless video recording without creating multiple clips.

6. Webcam and HDMI Output

The camera can function as a webcam. Connect it to your computer using the provided USB cable. Select 'PC Camera' mode on the camera's menu. This allows for video calls, online teaching, or live streaming. For viewing content on a larger display, connect the camera to a TV or monitor using the included HDMI cable.



Figure 8: Webcam and HDMI Connectivity

Connect the camera to a computer for webcam use or to a TV via HDMI for content playback.

7. Special Features

The camera includes several additional features to enhance your shooting experience:

- **Time-Lapse:** Capture events over an extended period and condense them into a short video.
- **Slow Motion:** Record videos at a higher frame rate for smooth slow-motion playback.
- **Continuous Shooting:** Capture a rapid sequence of photos by holding down the shutter button.
- **Anti-Shake:** Digital image stabilization helps reduce blur from camera movement.
- **Smile & Face Detection:** Automatically detects faces and smiles for optimal focus and exposure.
- **Beauty Face:** Enhances facial features in photos for a more polished look.

The Perfect gift for friends and family



1x 4K Camera



1x Micro SD Card



2 xBatteries



1xCamera bag



1XUSB Cable



1X HDMI Cable



1x Dual Charger



1x Charger

Figure 9: Overview of Camera Features

Explore the camera's diverse features such as anti-shake, slow motion, continuous shooting, and time-lapse.

MAINTENANCE

1. Cleaning the Camera

Use a soft, lint-free cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid using abrasive materials or harsh chemicals that could damage the lens coating or camera body.

2. Battery Care

To prolong battery life, avoid extreme temperatures. Store batteries in a cool, dry place when not in use. Fully charge batteries before extended periods of storage and recharge them every few months to prevent deep discharge.

3. Storage

When not in use, store the camera in the provided camera bag to protect it from dust, scratches, and minor impacts. Remove

batteries if storing for a long period.

TROUBLESHOOTING

Problem	Solution
Camera won't turn on	Ensure batteries are fully charged and correctly inserted.
Images are blurry	Check autofocus by half-pressing the shutter button. Ensure lens is clean. Adjust lighting conditions.
Video quality is poor	Verify recording resolution settings. Ensure sufficient lighting. Use anti-shake feature if needed.
SD card error	Reinsert the SD card. Format the SD card (this will erase all data). Try a different SD card.
No sound in video	Check microphone settings. Ensure volume is not muted during playback.

SPECIFICATIONS

Feature	Detail
Video Resolution	4K (2160p)
Photo Resolution	48 MP
Digital Zoom	16x
Display Screen	3.0 inch 180 degree flip screen
Storage	SD card up to 128GB (32GB included)
File Format	JPG/AVI
Connectivity	USB, HDMI
Battery Type	Lithium Ion (2 included)
Weight	0.07 Pounds
Model Name	DC101
Brand	zheozeig

WARRANTY AND SUPPORT

The zheozeig 4K Digital Camera comes with a 1-year hassle-free warranty. For technical support, troubleshooting assistance, or any inquiries regarding your product, please contact our customer support team. We are committed to providing prompt and helpful service.



Figure 10: Customer Support Information

For any questions or support needs, please contact our customer service. We offer a 1-year hassle-free warranty and 24-hour online support.

© 2023 zheozeig. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BG8JSFLH>

More documents and user manuals: <https://manuals.plus/>