

[Manuals.plus](#) /

› [ZOLAMENTE](#) /

› ZOLAMENTE 2.7K Full HD 1080P 30FPS Vlogging Camera Instruction Manual

ZOLAMENTE B0BGFFJLGY

ZOLAMENTE 2.7K Full HD 1080P 30FPS Vlogging Camera Instruction Manual

Model: B0BGFFJLGY

1. INTRODUCTION

Thank you for purchasing the ZOLAMENTE 2.7K Full HD Vlogging Camera. This manual provides essential information for setting up, operating, and maintaining your camera. Please read it thoroughly before use to ensure optimal performance and longevity of your device.

2. WHAT'S IN THE BOX

Verify that all items listed below are included in your package:

- ZOLAMENTE 2.7K Vlogging Camera
- Rechargeable Lithium-Ion Batteries (x2)
- Remote Control
- USB Cable
- Lens Cover
- Storage Bag
- User Manual (this document)

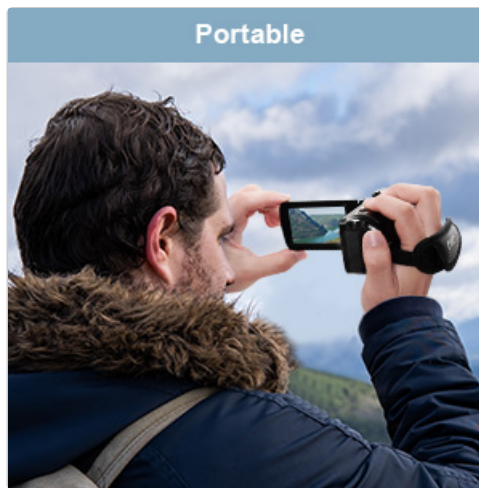 


Figure 2.1: Included Accessories

3. PRODUCT FEATURES

The ZOLAMENTE 2.7K Vlogging Camera offers a range of features designed for versatile video recording and photography:

- **2.7K 30FPS Video Resolution:** Capture high-quality videos with clear detail.
- **30MP Still Image Resolution:** Take sharp photographs.
- **IR Night Vision:** Record clear videos and photos in low-light conditions up to 7 meters.
- **16X Digital Zoom:** Magnify your subjects for close-up shots.
- **3-inch IPS LCD Screen:** A 270-degree rotatable screen for easy viewing during recording.
- **Pause Function:** Pause and resume video recording within the same file.
- **Webcam Functionality:** Connect to a computer for live streaming or video calls.
- **HDMI Output:** Connect to a TV for high-resolution video playback.
- **External Microphone Support:** Enhance audio quality with an external 3.5mm microphone.
- **Rechargeable Batteries:** Two 1500mAh batteries for extended recording time, with support for recording while charging.
- **SD Card Support:** Compatible with up to 128GB SD cards (not included).
- **Special Modes:** Includes slow motion, motion detection, continuous shooting, and time-lapse.



Figure 3.1: 2.7K Video, 30MP Photos, and 16X Digital Zoom



Figure 3.2: 270° Rotatable 3-inch IPS LCD Screen

4. SETUP

4.1. Battery Installation

1. Open the battery compartment cover located on the bottom of the camera.
2. Insert the provided lithium-ion battery, ensuring the correct polarity.
3. Close the battery compartment cover securely.

4.2. SD Card Installation

The camera requires an SD card (up to 128GB, not included) for storing recordings.

1. Locate the SD card slot, usually near the battery compartment or under the LCD screen.
2. Insert the SD card gently until it clicks into place.

3. To remove, press the card inward until it springs out.


4.3. Charging the Battery

Connect the camera to a power source using the provided USB cable. The charging indicator light will show the charging status. It is recommended to fully charge the batteries before first use.


5. OPERATING INSTRUCTIONS

Pause Function

00:50:00

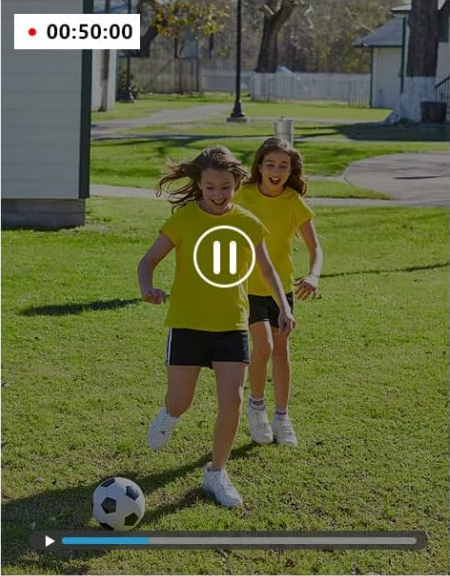

00:50:01

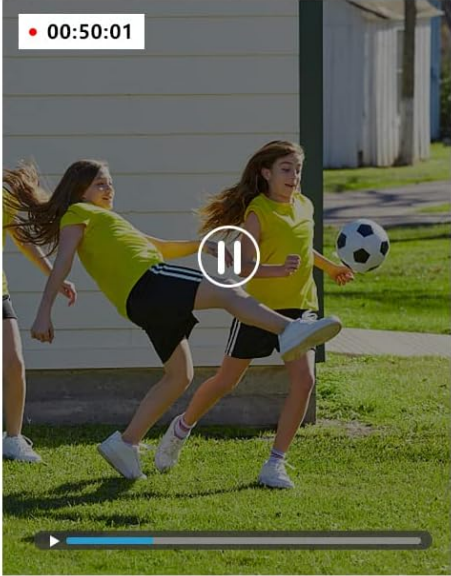 

00:50:02



*Remote control





Figure 5.1: Camera Controls Overview

5.1. Power On/Off

Open the LCD screen to automatically power on the camera. Close the LCD screen to power off.

5.2. Basic Recording (Video/Photo)

- **To Record Video:** Press the **Record** button (often red) to start recording. Press it again to stop.
- **To Take Photos:** Press the **Photo** button (often green) to capture a still image.

5.3. Zoom Functionality

Use the zoom toggle switch, typically located near the top of the camera, to zoom in or out on your subject. The camera features 16X digital zoom.

Figure 5.2: 16X Digital Zoom in Action

5.4. Mode Selection

Press the **MODE** button to cycle through different recording and playback modes, including:

- Video Recording
- Photo Mode
- Slow Motion
- Loop Recording
- Time-Lapse Photography
- Playback Mode



Figure 5.3: Pause Function



Figure 5.4: Advanced Shooting Modes and Recording While Charging

5.5. IR Night Vision

Activate the IR Night Vision mode to record in dark environments. The camera uses infrared lights to capture clear black and white footage.

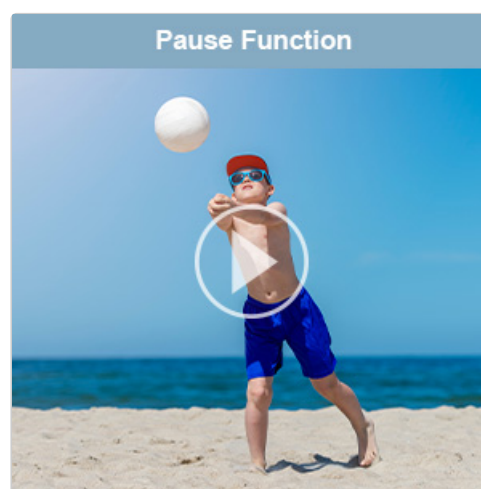


Figure 5.5: IR Night Vision Function

5.6. Webcam & HDMI Output

- **Webcam Mode:** Connect the camera to your computer via USB and select "PC CAM" mode for live streaming or video conferencing.
- **HDMI Output:** Use an HDMI cable to connect the camera to a TV or monitor to view your recordings in high definition.
- **MSDS Mode:** Connect via USB to transfer files to your computer.

Figure 5.6: PC Cam, MSDS, and HDMI Connectivity



Figure 5.7: Webcam Function and HDMI Output

5.7. Remote Control

Use the included remote control to operate the camera from a distance, allowing for convenient recording without touching the device. This is especially useful when the camera is mounted on a tripod or used for self-recording.



Figure 5.8: Remote Control for Convenient Operation

5.8. Adjusting Settings

Navigate through the camera's menu using the directional buttons and the OK/Power button to adjust various settings such as:

- Video Resolution (e.g., 2.7K, 1080P)
- White Balance
- Exposure Settings
- Sharpness
- ISO (Auto or manual)
- Watermark On/Off
- Motion Detection

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution.
- **Storage:** When not in use, store the camera in its provided storage bag in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the camera will not be used for an extended period. Recharge batteries regularly to maintain their lifespan.
- **Avoid Water:** This camera is not water-resistant. Avoid exposure to water or high humidity.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is low or not inserted correctly.	Ensure battery is fully charged and correctly inserted.
Cannot record video/take photos.	SD card is full, not inserted, or corrupted.	Insert a valid SD card, ensure sufficient space, or format the card (backup data first).
Poor image/video quality.	Lens is dirty, lighting is poor, or incorrect settings.	Clean the lens, ensure adequate lighting, adjust resolution/exposure settings.
Remote control not working.	Battery is dead or remote is not pointed at the camera's IR receiver.	Replace remote battery, ensure direct line of sight to camera.

8. SPECIFICATIONS

Feature	Detail
Brand	ZOLAMENTE
Video Capture Resolution	2.7K (2688x1520P), 1080p
Effective Still Resolution	30 MP
Optical Zoom	16 x
Digital Zoom	16 x
Screen Size	3 Inches (270° Rotation IPS LCD)
Flash Memory Type	SD (supports up to 128GB)
Connectivity Technology	Infrared, USB, HDMI
Special Features	Infrared, Night Vision, Pause Function, Webcam Function, Motion Detection, Slow Motion, Time-Lapse, Continuous Shooting
Batteries	2 Lithium Ion batteries (included)

Feature	Detail
Color	Black

9. WARRANTY AND SUPPORT

9.1. Manufacturer's Warranty

This ZOLAMENTE Vlogging Camera comes with a 12-month manufacturer's warranty from the date of purchase. Please retain your proof of purchase for warranty claims.

9.2. Customer Support

For any questions, technical assistance, or warranty inquiries, please contact ZOLAMENTE customer support through the retailer's platform or the contact information provided in your product packaging.

10. OFFICIAL PRODUCT VIDEOS

10.1. ZOLAMENTE 1080P 30FPS Vlogging Camera, IR Night Vision Camcorder Overview

Your browser does not support the video tag.

This video provides a concise overview of the ZOLAMENTE 1080P 30FPS Vlogging Camera, highlighting its key features such as IR Night Vision and general functionality. It demonstrates the camera's design and some of its capabilities in a brief format.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

