

BANDAI Kamen Rider Geats - DecaDriver & OOO Driver Raise Buckle Set

BANDAI Kamen Rider Geats DecaDriver & OOO Driver Raise Buckle Set DX Instruction Manual

Model: Kamen Rider Geats - DecaDriver & OOO Driver Raise Buckle Set (Model
4549660834052)

INTRODUCTION

Thank you for purchasing the BANDAI Kamen Rider Geats DecaDriver & OOO Driver Raise Buckle Set DX. This set allows fans to recreate iconic transformations and special attacks from the Kamen Rider series. Please read this manual carefully before use to ensure proper operation and enjoyment.

This set includes:

- DecaDriver Raise Buckle: 1
- OOO Driver Raise Buckle: 1

Note: The Transformation Belt DX Designer Driver and DX Magnum Shooter 40X are sold separately and are required for full functionality.

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

- Adult supervision is recommended during play.
- Do not attempt to disassemble or modify the product.
- Keep away from extreme temperatures and direct sunlight.
- Clean with a dry cloth only.

SETUP

The DecaDriver and OOO Driver Raise Buckles require no assembly. They are ready for use out of the

box.

To begin playing, you will need the **Transformation Belt DX Designer Driver** (sold separately).



Image: The BANDAI Kamen Rider Geats DecaDriver & OOO Driver Raise Buckle Set in its retail packaging, showing both buckles.



Image: A close-up view of the pink DecaDriver Raise Buckle, highlighting its intricate design.



Image: A close-up view of the yellow OOO Driver Raise Buckle, showcasing its unique coin-like elements.

OPERATING INSTRUCTIONS

1. Attaching to the DX Designer Driver

1. Select either the DecaDriver Raise Buckle or the OOO Driver Raise Buckle.
2. Insert the chosen Raise Buckle into the designated slot on the **Transformation Belt DX Designer Driver** (sold separately). Ensure it clicks securely into place.



へんしん お へんしん
変身ベルトを押して変身!

かいてん
さらにベルトが回転!

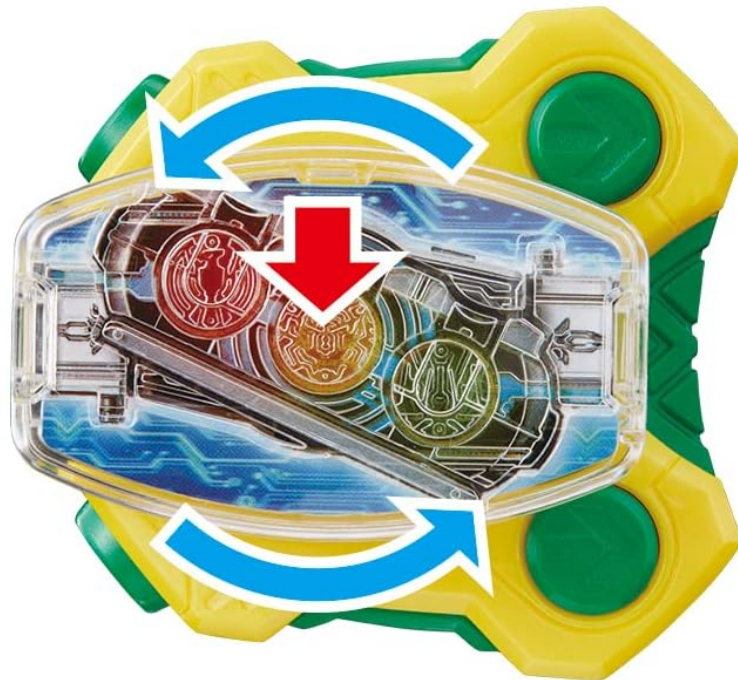


Image: A visual guide demonstrating the insertion and activation mechanism of the Raise Buckles into a compatible driver. Arrows indicate pressing down and rotation.

2. Transformation Play

1. Once the Raise Buckle is attached to the DX Designer Driver, press the buckle.
2. The DX Designer Driver will play the transformation sound for Kamen Rider Decade (with DecaDriver Buckle) or Kamen Rider OOO (with OOO Driver Buckle).
3. The DX Designer Driver will also activate its transformation game features, including LED lights and sounds.

ハッ ラ デラックス
別売りのDXデザイアドライバーで変身!

ベルトにセット!
レイズバックルを押す!

LEDが発光&
変身音が発動!



ベルトにセット!
レイズバックルを押す!

LEDが発光&
変身音が発動!



●DXデザイアドライバーは別売りです。

Image: An illustration showing both the DecaDriver and OOO Driver Raise Buckles correctly inserted into the DX Designer Driver, ready for transformation. Text indicates "DUAL ON" and "READY FIGHT" states.

3. Special Technique Play

For enhanced play, combine the Raise Buckles with the DX Magnum Shooter 40X (sold separately).

1. Attach the Raise Buckle to the DX Magnum Shooter 40X.
2. Press the buckle to activate special technique sounds and LED light effects.

ひつ さつ わざ 必殺技!

レイズバックル
を押す!



しやくほつ ころ ひつ さつ わざ あん ほつ どり
LEDが7色発光&必殺技音が発動!

レイズバックル
を押す!



しやくほつ ころ ひつ さつ わざ あん ほつ どり
LEDが7色発光&必殺技音が発動!

●DXデザイナードライバーは別売りです。

Image: A diagram illustrating the activation of special techniques using the DecaDriver and OOO Driver Raise Buckles with the DX Designer Driver. Text indicates "BOOST DECADE VICTORY" and "BOOST OOO VICTORY" with LED light activation.

Official Product Video

Your browser does not support the video tag.

Video: A product overview video demonstrating the features and functionality of the BANDAI Kamen Rider Geats DecaDriver & OOO Driver Raise Buckle Set. This video shows how the buckles interact with other Kamen Rider Geats DX items.

MAINTENANCE

- To clean the Raise Buckles, wipe gently with a dry, soft cloth.
- Do not use abrasive cleaners, solvents, or water, as these may damage the product.
- Store the buckles in a cool, dry place away from direct sunlight when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or light when attached to DX Designer Driver.	Buckle not fully inserted or DX Designer Driver batteries are low/dead.	Ensure the Raise Buckle is securely clicked into place. Check and replace batteries in the DX Designer Driver (sold separately) if necessary.
Buckle does not fit into the DX Designer Driver.	Incorrect orientation or incompatible driver.	Ensure the buckle is oriented correctly. This product is designed for the Transformation Belt DX Designer Driver .

SPECIFICATIONS

- **Brand:** BANDAI
- **Model Name:** Kamen Rider Geats - DecaDriver & OOO Driver Raise Buckle Set
- **Model Number:** 4549660834052
- **Item Weight:** 0.1 Kilograms
- **Item Dimensions:** 1 x 1 x 1 inches (approximate, for individual buckle)
- **Material:** Plastic (Outer Material: Plastic, Material Type: Resin)
- **Recommended Age:** 36 months (3 years) to 1200 months (100 years)
- **Batteries Required:** No (for Raise Buckles themselves; host drivers may require batteries)
- **Included Components:** DecaDriver Raise Buckle (1), OOO Driver Raise Buckle (1)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official BANDAI website or contact your local retailer. Keep your purchase receipt for any warranty claims.

Manufacturer: (BANDAI)

Official Website: www.bandai.com