

ECONTROLLY BN59-00599A

ECONTROLLY BN59-00599A Remote Control User Manual

For Samsung Televisions

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY BN59-00599A remote control, designed as a replacement or secondary remote for various Samsung television models. This remote control offers essential functions for operating your compatible Samsung TV.

2. COMPATIBILITY

The ECONTROLLY BN59-00599A remote control is compatible with the following Samsung TV models:

- FPT5884X/XAA, FPT6374, FPT5084, FPT5084X/XAA, FPT5884
- FTP6374X/XAP, FPT6374X/XAA
- HPT4254, HPT4254X/XAA, HPT4254X/XAC, HPT4254X/XAP
- HPT4264, HPT4264X/XAA, HPT4264X/XAC
- HPT5044, HPT5044X/XAA
- HPT5054, HPT5054X, HPT5054X/XAA, HPT5054X/XAC, HPT5054X/XAP
- HPT5064, HPT5064X/XAA, HPT5064X/XAC
- LN32R81BD

Please verify your TV model number to ensure full compatibility.

3. SETUP

3.1 Battery Installation

This remote control requires two (2) AAA batteries (not included). No programming is necessary; simply install the batteries, and the remote will be ready for use with compatible Samsung TVs.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings

inside the compartment.

4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Figure 1: Back view of the remote control, highlighting the battery compartment. Ensure correct battery orientation when installing.

4. OPERATING INSTRUCTIONS

The ECONTROLLY BN59-00599A remote control features a standard layout for intuitive operation of your Samsung TV. Below are descriptions of common buttons and their functions.





Figure 2: Front view of the ECONTROLLY BN59-00599A remote control, displaying all functional buttons.

4.1 Basic Functions

- **POWER:** Turns the TV on or off.
- **SOURCE:** Cycles through available input sources (e.g., HDMI, AV, Component).
- **TV/DVD/STB/CABLE/VCR:** Selects the device to control (if programmed for universal use, though this remote is primarily for Samsung TVs).
- **Number Buttons (0-9):** Directly enter channel numbers.
- **VOL (+/-):** Adjusts the volume level.
- **CH (Up/Down):** Changes the TV channel.
- **MUTE:** Silences or restores the TV audio.
- **MENU:** Opens the TV's main menu.
- **ENTER (Navigation Pad):** Confirms selections within menus.
- **Navigation Pad (Up/Down/Left/Right):** Navigates through menu options.
- **EXIT:** Closes the current menu or on-screen display.
- **RETURN:** Returns to the previous menu or screen.

4.2 Media Playback Controls

- **REW (Rewind):** Rewinds media playback.
- **STOP:** Stops media playback.
- **PLAY/PAUSE:** Plays or pauses media playback.
- **FF (Fast Forward):** Fast forwards media playback.

4.3 Advanced Functions

- **PRE-CH:** Returns to the previously viewed channel.
- **CH LIST:** Displays the channel list.
- **INFO:** Displays information about the current program or input.
- **P.MODE (Picture Mode):** Cycles through picture modes.
- **S.MODE (Sound Mode):** Cycles through sound modes.
- **P.SIZE (Picture Size):** Adjusts the aspect ratio or picture size.
- **CAPTION:** Toggles closed captions.
- **PIP (Picture-in-Picture):** Activates or controls Picture-in-Picture function.
- **SLEEP:** Sets a sleep timer for the TV.
- **SRS/MTS:** Controls audio settings like SRS TruSurround or Multi-channel Television Sound.



Figure 3: Angled view of the remote control, illustrating its ergonomic shape for comfortable handling.

5. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries or different types of batteries.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

6. TROUBLESHOOTING

If you experience issues with your ECONTROLLY BN59-00599A remote control, please refer to the following common troubleshooting steps:

- **Remote Not Responding:**
 - Ensure the batteries are correctly installed with the proper polarity (+/-).
 - Replace the batteries with fresh AAA alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the effective range and line of sight of the TV.
- **Specific Buttons Not Working:**
 - This may indicate a dirty or worn button contact. If cleaning the remote's surface does not resolve the issue, the remote may require replacement.
- **TV Not Responding to Any Remote:**
 - Ensure the TV itself is powered on and not in standby mode.
 - Try using the physical buttons on the TV to confirm it is operational.

If these steps do not resolve the issue, the remote control may be faulty or incompatible with your specific TV model despite general compatibility. Please re-verify your TV model number.

7. SPECIFICATIONS

Model Number	BN59-00599A
Brand	ECONTROLLY
Connectivity Technology	Infrared (IR)
Compatible Devices	Samsung Televisions
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 0.65 x 2 inches (approx.)
Item Weight	1 ounce (approx.)
Special Feature	Ergonomic Design

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question