

[Manuals.plus](#) /

› [Braun](#) /

› Braun CH3012BK EasyPrep Mini Food Processor Instruction Manual

Braun CH3012

Braun CH3012BK EasyPrep™ Mini Food Processor Instruction Manual

Model: CH3012

Brand: Braun

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your Braun EasyPrep™ Mini Food Processor. Keep this manual for future reference.

- Always unplug the appliance from the power outlet before assembling, disassembling, or cleaning.
- Avoid contact with moving parts. Blades are sharp. Handle with care.
- Do not immerse the motor unit in water or other liquids.
- Ensure the lid is securely locked in place before operating the appliance.
- This appliance is not intended for use by children. Keep out of reach of children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Proposition 65 Warning: This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

WHAT'S INCLUDED

Your Braun CH3012BK EasyPrep™ Mini Food Processor comes with the following components:

- Motor Unit
- 4-Cup Bowl with anti-slip base
- QuadBlade™ Chopping Blade
- Lid with Oil Dispenser Attachment
- Spatula

What's Included



Image: All components of the Braun EasyPrep Mini Food Processor, including the motor unit, bowl, QuadBlade, lid with oil dispenser, and spatula.

SETUP

1. Place the 4-cup bowl onto a stable, flat surface. The anti-slip base will help keep it secure.
2. Carefully place the QuadBlade™ chopping blade onto the central pin inside the bowl. Ensure it sits firmly.
3. Add your ingredients to the bowl. Do not overfill beyond the maximum fill line.
4. Place the lid onto the bowl, aligning the tabs on the lid with the grooves on the bowl. Twist clockwise until it locks securely.
5. Position the motor unit on top of the lid, ensuring the star-shaped drive shaft aligns with the opening in the lid.

6. Plug the appliance into a power outlet.



Image: A hand demonstrating the placement of the motor unit onto the assembled food processor bowl, ready for operation.

OPERATING INSTRUCTIONS

The Braun EasyPrep™ Mini Food Processor features a simple one-push control with two speed settings.

General Operation (Chop, Mince, Puree, Ice Crush)

1. With the appliance assembled and plugged in, place your hand firmly on top of the motor unit.
2. To activate Speed 1 (lower speed, ideal for coarse chopping), press the top of the motor unit down halfway.
3. To activate Speed 2 (higher speed, ideal for fine chopping, pureeing, and ice crushing), press the top of the motor unit down completely.
4. Use short pulses for coarse chopping or hold down for continuous processing until desired consistency is achieved.



Image: Graphic showing the one-push control mechanism on the motor unit for easy operation.

QuadBlade™ Technology

The unique QuadBlade™ design with four layered blades allows for fast and precise food chopping, processing up to 25% more ingredients compared to dual-blade systems. This ensures efficient and even results throughout the bowl.



Image: Close-up of the QuadBlade™ technology, highlighting its four-blade design for enhanced chopping performance.

Making Mayonnaise and Aioli Sauce

To make mayonnaise or aioli, use the oil dispenser attachment. This attachment fits into the lid and allows oil to slowly drip into the mixture while the blades are emulsifying, ensuring a smooth and consistent result.

Quality, Reliability & Lasting Performance



Image: The food processor demonstrating the oil dispenser attachment in use, with a bottle of oil and a prepared sandwich nearby.

Official Product Video: [Braun CH3012BK EasyPrep Mini Food Processor](#)

Your browser does not support the video tag.

Video: An official demonstration of the Braun CH3012BK EasyPrep Mini Food Processor, showcasing its features and ease of use for various food preparation tasks.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your food processor.

- Always unplug the appliance before cleaning.
- The bowl, lid, and chopping blade are dishwasher safe (top rack recommended).
- Alternatively, these parts can be hand washed with warm, soapy water. Rinse thoroughly and dry.

- Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water.
- Use the included spatula to safely remove processed food from the bowl and around the blades.

TROUBLESHOOTING

If you encounter any issues with your Braun EasyPrep™ Mini Food Processor, please refer to the following general tips:

- **Appliance not turning on:** Ensure the motor unit is correctly seated on the lid and the appliance is securely plugged into a working power outlet.
- **Uneven chopping:** For best results, ensure ingredients are cut into similar-sized pieces before processing. Use short pulses and shake the bowl gently if needed to redistribute ingredients.
- **Overheating:** If the motor unit feels hot or stops working, unplug it and allow it to cool down for at least 15-20 minutes before attempting to use it again. Do not continuously operate for extended periods.

SPECIFICATIONS

Brand	Braun
Model Name	EasyPrep™
Product Dimensions	5.51"D x 5.33"W x 10.55"H
Color	Black
Wattage	250 watts
Special Feature	Safety Lock
Bowl Capacity	4 Cups
Number of Speeds	2
Voltage	120 Volts
Power Source	Electrical
Material	Plastic, Stainless Steel
Product Care Instructions	Dishwasher Safe, Hand Wash
Blade Material	Stainless Steel
Item Weight	2.6 Pounds

WARRANTY AND SUPPORT

Your Braun CH3012BK EasyPrep™ Mini Food Processor is covered by a 3-year manufacturer's warranty.

For warranty claims, product support, or additional information, please refer to the contact details provided in the product packaging or visit the official Braun website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question