

OMAIGA B0BGKDYMPF

OMAIGA Home Steam Iron Bundle Set User Manual

Model: B0BGKDYMPF

INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your OMAIGA Home Steam Iron Bundle Set. This set includes one cordless steam iron and one corded steam iron, designed for effective wrinkle removal on various fabric types. Please read this manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always unplug the iron when filling or emptying water, and when not in use.
- Do not leave the iron unattended while it is switched on or connected to power.
- Keep the iron and its cord out of reach of children.
- Do not operate the iron with a damaged cord or plug, or if the iron has been dropped or damaged.
- Use the iron only for its intended purpose.
- Never immerse the iron in water or other liquids.
- Exercise caution when turning the iron upside down, as there may be hot water in the reservoir.
- The iron must be used and rested on a stable, heat-resistant surface.
- Do not touch hot surfaces. Use handles or knobs.
- Only use tap water unless otherwise specified.

PRODUCT OVERVIEW

Your OMAIGA Home Steam Iron Bundle Set includes two distinct irons, each with specific features for versatile ironing needs.

1. OMAIGA Cordless Steam Iron (Black Model)



Image: OMAIGA Cordless Steam Iron (black) on its 360-degree charging base, highlighting key features like ceramic soleplate and powerful steam output.

- **Ceramic Soleplate:** Provides smooth gliding and even heat distribution.
- **360° Charging Base:** Allows for easy docking and detachment from any direction for cord-free ironing.
- **Powerful Steam Output:** Delivers continuous steam and a powerful steam boost for effective wrinkle removal.
- **Fast Heat Up & Recharge:** Minimizes waiting time during ironing sessions.
- **Anti-Calc & Self-Clean Function:** Helps prevent mineral buildup and maintains iron performance.

POWERFUL POWERFUL STEAM OUTPUT



**20g/min Continuous
Steam Up**



**0.8g/press Powerful
Steam Boost**



Image: Close-up of the OMAIGA Cordless Steam Iron's 360-degree charging base, illustrating its easy docking feature and dimensions (11.4" height, 5.6" width).

ANTI-CALC & SELF CLEAN

Prevents limescale build-up and protects clothes from staining



STANDARD STEAM IRON VS OMAIGA CORDLESS IRON

Image: Detailed view of the OMAIGA Cordless Steam Iron's steam functions, showing 20g/min continuous steam and 0.8g/press powerful steam boost.

2. OMAIGA Corded Steam Iron (Purple Model)

Professional Multifunction



Image: Diagram of the OMAIGA Corded Steam Iron (purple), pointing out key components such as the spraying water outlet, ceramic soleplate, variable steam & self-cleaning switch, spraying water button, temperature dial, and 15.21oz water tank.

- **Ceramic Soleplate:** Ensures smooth gliding and efficient heat transfer.
- **15.21oz Water Tank:** Large capacity for extended ironing without frequent refills.
- **Variable Steam & Self-Cleaning Switch:** Allows adjustment of steam output and activates the self-clean function.
- **Spraying Water Button:** Provides a fine mist for stubborn wrinkles.
- **Temperature Dial:** Adjustable thermostat with settings for various fabric types.

- **Steam Shot Trigger:** Delivers a powerful burst of steam.

Remove Wrinkles Efficiently

Get The Perfect Look In Seconds

After Ironing



Before Ironing



Image: Close-up of the OMAIGA Corded Steam Iron's steam distribution, showing 0.8g/press powerful water spray and 35g/min continuous steam output.

SETUP AND PREPARATION

Before First Use:

1. Remove all packaging materials and labels from the iron.
2. Inspect the iron for any damage. Do not use if damaged.
3. For the corded iron, ensure the power cord is untangled. For the cordless iron, place the charging base on a stable surface and plug it into a power outlet.

Filling the Water Tank:

1. Ensure the iron is unplugged (or off its charging base for the cordless model) and cooled down.
2. Open the water tank cover.
3. Fill the water tank with tap water up to the "MAX" fill line. Do not overfill.
4. Close the water tank cover securely to prevent leaks.

Note: The irons are equipped with a silicone seal to minimize water leaks. Using distilled water is recommended in areas with hard water to prevent mineral buildup, though tap water is generally suitable.

OPERATING INSTRUCTIONS

1. Temperature Selection:

Turn the temperature dial to select the appropriate heat setting for your fabric. Always check the garment's care label. If unsure, start with a lower temperature on an inconspicuous area.

5 Settings Adjustable Thermostat

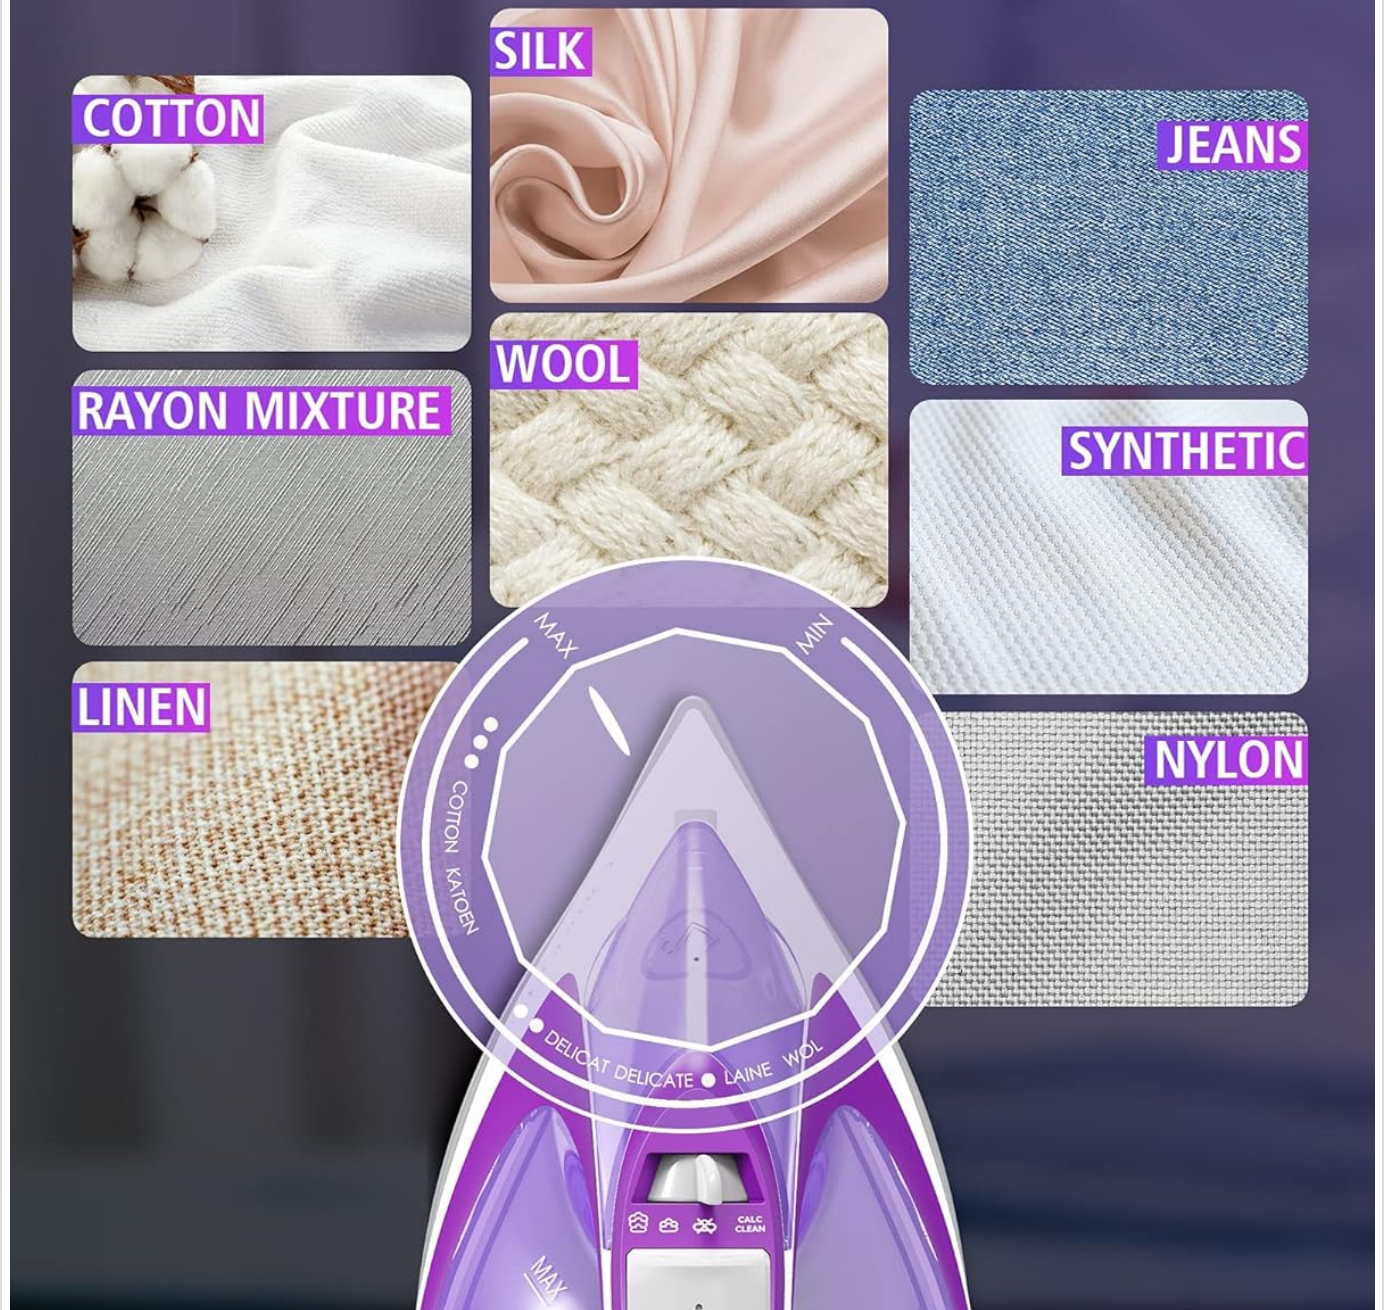


Image: The temperature dial of the OMAIGA Corded Steam Iron, showing 5 adjustable settings for various fabrics including Silk, Cotton, Jeans, Rayon Mixture, Wool, Synthetic, Linen, and Nylon.

- **Low Temperature:** Silk, Nylon, Synthetics
- **Medium Temperature:** Wool, Rayon Mixture
- **High Temperature:** Cotton, Linen, Jeans

2. Ironing Techniques:

Allow the iron to reach the selected temperature before beginning. The indicator light will typically turn off or change color when ready.

- **Dry Ironing:** For delicate fabrics or when steam is not desired, ensure the steam setting is off.
- **Steam Ironing:** Once the iron is hot, select the desired steam level using the variable steam switch. Glide the iron over the fabric.
- **Steam Shot / Burst of Steam:** Press the steam shot trigger for an extra burst of steam to remove stubborn wrinkles. Wait a few seconds between bursts.
- **Water Spray:** Press the water spray button to lightly mist the fabric, aiding in wrinkle removal.
- **Vertical Steaming:** Both irons are suitable for vertical steaming. Hold the iron upright, close to the fabric (curtains, hanging garments), and press the steam shot trigger.
- **Cordless Iron Operation:** Place the cordless iron on its charging base between passes to maintain optimal temperature. The iron will reheat quickly.



 **0.8g/press Powerful Water Spray**

STEAM SHOT TRIGGER

 **35g/min Continuous Steam Up**

Powerful Steam Distribution

Image: A visual comparison showing a wrinkled shirt before ironing and the same shirt smooth and wrinkle-free after being ironed with an OMAIGA iron.

MAINTENANCE AND CARE

1. Self-Clean Function:

Regularly use the self-clean function to flush out mineral deposits and maintain steam performance.

1. Fill the water tank to the MAX line.
2. Set the iron to the highest temperature setting.
3. Once hot, unplug the iron (or remove from base for cordless).
4. Hold the iron horizontally over a sink.
5. Press and hold the self-clean button/switch. Hot water and steam will flush out from the soleplate, carrying impurities.
6. Release the button when the water tank is empty.
7. Move the iron gently to remove any remaining water.
8. Allow the iron to cool completely before storing.

ANTI-CALC & SELF CLEAN

Prevents limescale build-up and protects clothes from staining



Image: A visual representation contrasting a standard steam iron with limescale buildup against a clean OMAIGA Cordless Iron, illustrating the effectiveness of the anti-calc and self-clean features.

2. Cleaning the Soleplate:

- Ensure the iron is unplugged and completely cool.
- Wipe the soleplate with a damp cloth and a non-abrasive cleaner if necessary.
- Do not use abrasive scouring pads or metal cleaners, as these can damage the soleplate.

3. Storage:

- Empty the water tank after each use.
- Allow the iron to cool completely before storing.
- Store the iron upright on its heel rest (corded) or on its charging base (cordless) in a dry, safe place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet faulty; temperature dial set to minimum; cordless iron not on charging base or base not powered.	Check power connection; test outlet with another appliance; adjust temperature dial; ensure cordless iron is correctly docked and base is powered.
No steam or insufficient steam.	Water tank empty; temperature too low for steam; steam switch off; mineral buildup.	Fill water tank; set temperature to steam-appropriate level (usually higher settings); activate steam switch; perform self-clean cycle.
Water leaks from soleplate.	Water tank overfilled; temperature too low for steam (water drips instead of vaporizes); water tank cap not secured.	Do not overfill; ensure iron is hot enough for steam; secure water tank cap.
Iron leaves stains on fabric.	Mineral deposits in water tank/steam vents; dirty soleplate.	Perform self-clean cycle; clean soleplate as per maintenance instructions. Consider using distilled water.

PRODUCT SPECIFICATIONS

- **Brand:** OMAIGA
- **Model:** B0BGKDYPMPF (Bundle Set)
- **Special Feature (Cordless Iron):** Cordless operation with 360° charging base
- **Color:** Purple (Corded Iron), Black (Cordless Iron)
- **Recommended Uses:** Steam Ironing, Dry Ironing, Vertical Steaming
- **Soleplate Material:** Stainless Steel (Ceramic coating)
- **Water Tank Capacity (Corded Iron):** Approximately 15.21 oz
- **Continuous Steam Output (Corded Iron):** 35g/min
- **Continuous Steam Output (Cordless Iron):** 20g/min
- **Steam Boost:** 0.8g/press (both models)
- **Manufacturer:** OMAIGA
- **First Available Date:** June 1, 2023

WARRANTY AND SUPPORT

Your OMAIGA Home Steam Iron Bundle Set comes with a **one-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

For technical consultation or any questions regarding your product, please contact OMAIGA customer support. We provide lifelong technical consultation to ensure your satisfaction.

Please refer to your purchase documentation for specific contact details or visit the official OMAIGA store on Amazon:
[OMAIGA Store](#)



Documents - OMAIGA – B0BGKDYMPPF
no relevant documents