

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [adidas](#) /
- › [adidas Men's ZX 700 HD Shoes GX8940 User Manual](#)

adidas GX8940

adidas Men's ZX 700 HD Shoes User Manual

Model: GX8940

INTRODUCTION

Welcome to the user manual for your new adidas Men's ZX 700 HD Shoes. These shoes are designed for comfort and style, suitable for both athletic activities and casual wear. This manual provides essential information on setup, usage, maintenance, and troubleshooting to ensure optimal performance and longevity of your footwear.



Image: A pair of adidas Men's ZX 700 HD shoes, featuring a collegiate navy upper with acid yellow stripes and sonic aqua accents. The

textured synthetic rubber sole is visible.

SETUP AND FIRST USE

Your adidas ZX 700 HD shoes are ready to wear right out of the box. Follow these simple steps for initial preparation:

1. **Lacing:** Ensure the laces are threaded correctly through all eyelets. Adjust the lacing tension to achieve a snug yet comfortable fit. Avoid overtightening, which can restrict circulation.
2. **Initial Fit Check:** Wear the shoes with the type of socks you typically use. Walk around to assess the fit. Your toes should have a small amount of space at the front, and your heel should feel secure without slipping.
3. **Break-in Period:** While these shoes are designed for immediate comfort, a short break-in period may be beneficial for some individuals. Wear them for shorter durations initially before extended use.



Image: A side profile of the adidas ZX 700 HD shoe, highlighting the lace-up closure system and the distinctive three yellow stripes on the navy upper.

OPERATING AND INTENDED USE

The adidas ZX 700 HD shoes are versatile and suitable for various activities.

- **Casual Wear:** These shoes are ideal for everyday casual use, offering comfort and a classic athletic style.
- **Light Athletic Activities:** While categorized under "Running" for sport type, they are best suited for light running, walking, and general fitness activities. They are not designed for intensive, high-impact sports or specialized performance training.
- **Surface Compatibility:** The synthetic rubber sole provides good traction on most common surfaces. Avoid use on extremely rough or abrasive terrains that could prematurely wear the sole.



Image: The back of the adidas ZX 700 HD shoe, featuring a bright yellow heel pull tab and the blue adidas Trefoil logo on the navy heel counter.

CARE AND MAINTENANCE

Proper care will extend the life and appearance of your adidas ZX 700 HD shoes.

- **Cleaning:**
 - For general dirt, wipe the surface with a damp cloth and mild soap.
 - For stubborn stains, use a soft brush and a specialized shoe cleaner.
 - Do not machine wash or tumble dry, as this can damage the materials and construction.
 - Remove insoles and wash separately if needed.
- **Drying:** Allow shoes to air dry naturally at room temperature. Avoid direct heat sources like radiators or direct sunlight, which can cause material degradation.
- **Storage:** Store shoes in a cool, dry place away from direct sunlight. Using shoe trees can help maintain their shape.
- **Water Resistance:** These shoes are *Not Water Resistant*. Avoid prolonged exposure to wet conditions.



Image: An angled view of the adidas ZX 700 HD shoe, highlighting the combination of mesh fabric and synthetic overlays on the upper, contributing to its design and breathability.

TROUBLESHOOTING

If you encounter any issues with your shoes, consider the following common solutions:

- **Discomfort/Rubbing:**

- Ensure you are wearing appropriate socks.
- Adjust lacing to relieve pressure points.
- Verify correct shoe size.

- **Squeaking Noise:**

- Sometimes caused by insoles rubbing against the shoe's interior. Try removing and reinserting insoles, or applying a small amount of baby powder underneath.
- Ensure shoes are completely dry if recently cleaned.

- **Odor:**

- Allow shoes to air out after each use.
- Use shoe deodorizers or baking soda.
- Wash insoles regularly.

SPECIFICATIONS

Feature	Detail
Model Name	GX8940
Brand	adidas
Department	Men's

Closure Type	Lace-Up
Outer Material	Rubber
Sole Material	Synthetic Rubber
Insole Material	Ethylene Vinyl Acetate (EVA)
Material Fabric	Synthetic and Rubber
Heel Type	No Heel
Shoe Height Map	Low Top
Sport Type	Running (Light/Casual)
Water Resistance Level	Not Water Resistant
Item Weight	3 Pounds (approximate)
Package Dimensions	14 x 9 x 5 inches (approximate)

WARRANTY AND SUPPORT

For specific warranty information and customer support regarding your adidas ZX 700 HD shoes, please refer to the official adidas website or contact adidas customer service directly. Warranty terms and conditions may vary by region and retailer. Keep your proof of purchase for any warranty claims.

Online Support: Visit the official adidas website for FAQs, product information, and contact options.

