

[manuals.plus](#) /

› [Roxicosly](#) /

› [Roxicosly Digital Wooden Alarm Clock Instruction Manual](#)

Roxicosly Digital Wooden Alarm Clock

Roxicosly Digital Wooden Alarm Clock Instruction Manual

Model: Digital Wooden Alarm Clock

INTRODUCTION

Thank you for choosing the Roxicosly Digital Wooden Alarm Clock. This manual provides detailed instructions for setting up, operating, and maintaining your new alarm clock. Please read this manual thoroughly before use to ensure proper functionality and to maximize your experience with its features, including dual alarms, USB charging ports, and temperature/humidity display.



This image displays the Roxicosy Digital Wooden Alarm Clock, highlighting its prominent blue LED time display and the convenience of its integrated USB charging port, shown actively charging a smartphone.

SETUP

1. Power Connection

Connect the provided AC adapter to the DC/Type-C power input port on the back of the alarm clock, then plug the adapter into a standard electrical outlet. The clock will power on and the display will illuminate.

2. Battery Backup Installation

For backup power during outages, install two (2) AAA batteries (not included) into the battery compartment located on the back of the clock. The battery backup preserves time and alarm settings but does not power the display or USB charging ports.

OUTLET ONLY



DC/Type-C Powered Only AC adapter and cord included

MEMORIZED BATTERY BACKUP



Install 2 AAA batteries(not included)
to store time and alarm settings in case of power outage

The image details the power options for the clock, including the DC/Type-C power input and the battery backup compartment, where two AAA batteries (not included) can be installed to preserve settings during power outages.

OPERATING INSTRUCTIONS

1. Setting Time and Date

1. Press the **TIME SET** button to enter time setting mode. The hour digits will flash.
2. Use the **HOUR** and **MINUTE** buttons to adjust the hour and minute.
3. Press **TIME SET** again to confirm and move to the 12/24-hour format setting. Use **HOUR** or **MINUTE** to select.
4. Continue pressing **TIME SET** to cycle through year, month, and day settings, adjusting each with **HOUR** or **MINUTE**.
5. Press **TIME SET** one last time to exit time and date setting mode.

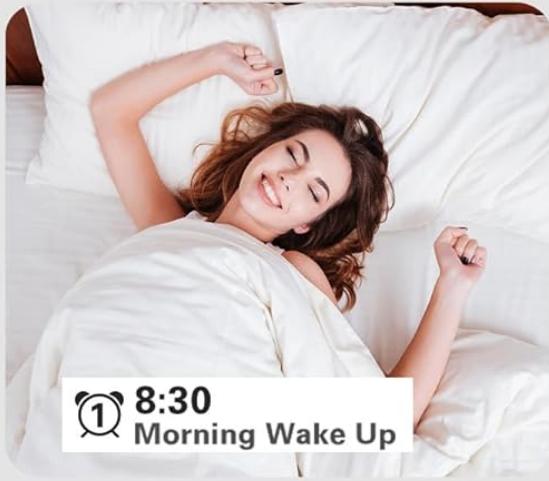
2. Setting Alarms (Alarm 1 & Alarm 2)

The clock supports two independent alarms.

1. Press the **ALARM 1** button to enter Alarm 1 setting mode. The hour digits for Alarm 1 will flash.
2. Use the **HOUR** and **MINUTE** buttons to set the desired alarm time.
3. Press **ALARM 1** again to confirm. The alarm icon will appear on the display, indicating Alarm 1 is active.
4. Repeat the process using the **ALARM 2** button to set and activate Alarm 2.
5. To deactivate an alarm, press its corresponding **ALARM** button until the alarm icon disappears from the display.

Dual Alarm with Snooze Function

Meet your different time need, no longer worry about being late



This image visually explains the dual alarm clock settings and the 9-minute snooze feature. A hand is shown pressing the large snooze button located on the top of the clock.

3. Snooze Function

When an alarm sounds, press the large **SNOOZE/LIGHT** button on the top of the clock. The alarm will pause for 9 minutes and then sound again. This can be repeated multiple times.

4. Display Brightness Adjustment

The LED display has 7 adjustable brightness levels. Press the **DIMMER** button repeatedly to cycle through the brightness levels (Level 1 being the dimmest, Level 7 the brightest) to suit your preference.



This visual guide illustrates the seven distinct brightness levels of the clock's LED display, allowing users to customize visibility from very dim to bright, suitable for various lighting conditions.

5. Alarm Volume Adjustment

The alarm volume can be adjusted to 5 different levels, ranging from 65dB to 120dB. While an alarm is sounding, or during alarm setup, press the **VOLUME** button repeatedly to select your desired volume level.

7-Level Adjustable Volume

From very low for light sleepers to extra loud for heavy sleepers adults.



The image demonstrates the adjustable alarm volume feature, contrasting a lower volume setting (92dB) with a higher one (110dB), indicating the range from gentle to loud for different user preferences.

6. USB Charging Ports

The clock features two USB charging ports on its side. Connect your USB-powered devices (e.g., smartphones, tablets, earbuds) to these ports for convenient charging. These ports are active when the clock is connected to AC power.

Dual USB Charging Ports

Serve as a convenient charging station at bedside



A user is depicted utilizing the dual USB charging ports on the side of the alarm clock to conveniently charge their smartphone, highlighting the clock's functionality as a bedside charging hub.



The image illustrates the clock's dual USB charging capability, with a smartphone and a pair of wireless earbuds connected and charging, demonstrating its utility as a bedside charging station.

7. Temperature and Humidity Display

The clock continuously monitors and displays indoor temperature and humidity. To switch between Celsius (C°) and Fahrenheit (F°) for temperature, press the **C/F** button.

TEMPERATURE HUMIDITY AND DATE DETECT

Keep abreast of changes in indoor temperature and humidity



°F/°C Switchable



This image emphasizes the clock's built-in temperature and humidity sensors, showing the display with current indoor conditions against a backdrop of an outdoor winter scene, suggesting its utility for monitoring indoor climate.



This view shows the alarm clock's comprehensive display, including the current time, date, indoor temperature, and humidity. A smartphone is also visible, connected for charging.

8. Daylight Saving Time (DST)

To activate or deactivate Daylight Saving Time, press and hold the **DST** button. The time will adjust by one hour forward or backward, and a DST indicator will appear/disappear on the display.

MAINTENANCE

To ensure the longevity and optimal performance of your Roxicosly Digital Wooden Alarm Clock, follow these maintenance guidelines:

- **Cleaning:** Wipe the clock's surface with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or chemical sprays, as these can damage the finish and electronic components.
- **Placement:** Place the clock on a stable, flat surface away from direct sunlight, excessive heat, moisture, or strong magnetic fields.
- **Power:** Always use the provided AC adapter. If the clock will not be used for an extended period, disconnect it from the power outlet and remove the backup batteries.

TROUBLESHOOTING

If you encounter any issues with your alarm clock, please refer to the following common problems and solutions:

- **Display is blank:**

- Ensure the AC adapter is securely plugged into both the clock and a working power outlet.
- Check if the power outlet is functional by plugging in another device.

- **Alarm does not sound:**

- Verify that the alarm (Alarm 1 or Alarm 2) is activated (its icon should be visible on the display).
- Check the alarm time to ensure it is set correctly (AM/PM).
- Ensure the alarm volume is not set to the lowest level or muted.

- **USB charging not working:**

- Confirm the clock is connected to AC power, as USB charging does not operate on battery backup.
- Ensure your USB cable is properly connected and not damaged.
- Try charging a different device to rule out an issue with the device or cable.

- **Time/settings reset after power outage:**

- Ensure fresh AAA batteries are installed in the battery backup compartment. The battery backup preserves settings during power interruptions.

- **Incorrect temperature/humidity reading:**

- Ensure the clock is placed in an area with good air circulation, away from direct heat sources or vents.
- Allow some time for the sensors to stabilize after initial setup or relocation.

SPECIFICATIONS

Brand	Roxicosly
Model	Digital Wooden Alarm Clock
Display Type	Digital LED (8.7 inches)
Display Brightness	7 Levels (Dimmable)
Alarm Volume	5 Levels (65dB-120dB)
Alarms	Dual Alarms
Snooze Duration	9 Minutes
Charging Ports	2 USB Charging Ports
Special Features	Temperature & Humidity Detection, DST Function, 12/24h Format
Power Source	Corded Electric (AC Adapter included), Battery Backup (2x AAA, not included)

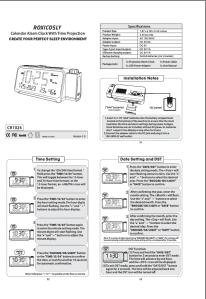
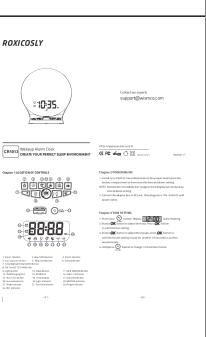
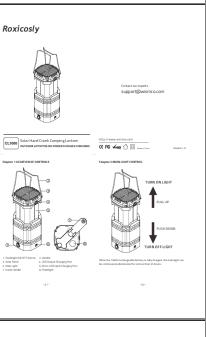
Material	Wood
Color	Black

WARRANTY AND SUPPORT

This Roxicosly Digital Wooden Alarm Clock comes with a standard manufacturer's warranty. For specific warranty details, please refer to the product packaging or contact your retailer. For technical support, troubleshooting assistance beyond this manual, or inquiries regarding your product, please contact Roxicosly customer service through the retailer's platform or the official brand website.

Please retain your purchase receipt as proof of purchase for any warranty claims.

Related Documents - Digital Wooden Alarm Clock

	<p><u>Roxicosly CR1024 Projection Alarm Clock User Manual</u></p> <p>User manual for the Roxicosly CR1024 projection alarm clock. Features include a large display, date, day, temperature, humidity, dual alarms, USB charging, snooze, and backlight. Projects time onto walls and ceilings.</p>
	<p><u>ROXICOSLY CR1013 Wakeup Alarm Clock User Manual - Features & Setup</u></p> <p>Comprehensive user manual for the ROXICOSLY CR1013 Wakeup Alarm Clock. Learn how to set time, alarms, use sunrise simulation, sleep mode, light controls, and USB charging.</p>
	<p><u>Roxicosly CL1000 Solar Hand Crank Camping Lantern User Manual</u></p> <p>User manual for the Roxicosly CL1000 Solar Hand Crank Camping Lantern. Features include LED flashlight, power bank, USB charging, solar charging, and hand crank power. Ideal for outdoor activities and power outages.</p>
	<p><u>NieNie GH9007 Digital Alarm Clock User Manual Features & Specifications</u></p> <p>Discover the NieNie GH9007 digital alarm clock. This user manual details its features including temperature, humidity, week display, dual alarms, snooze, auto-dimmable LED, and 12/24H timer. Learn about its specifications and safety information.</p>

KIENZLE



DIGITALER XXL. WECKER

Bedienungsanleitung

Instruction Manual

Art.No.: 14080

[Kienzle Digital XXL Alarm Clock Instruction Manual](#)

This manual provides instructions for setting up and using the Kienzle Digital XXL Alarm Clock, including features like dual alarm, temperature and humidity display, and manual time setting.