

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Home Master](#) /
- › [Home Master HM-935 450W Stainless Steel Coffee Grinder User Manual](#)

Home Master HM-935

Home Master HM-935 450W Stainless Steel Coffee Grinder User Manual

Model: HM-935

INTRODUCTION

Thank you for choosing the Home Master HM-935 450W Stainless Steel Coffee Grinder. This appliance is designed for efficient grinding of coffee beans, cardamom, nuts, and various spices. To ensure safe and optimal performance, please read this manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not immerse the motor base, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Check the grinding chamber for the presence of foreign objects before use.
- Ensure the lid is securely in place before operating the grinder.
- This appliance is for household use only.

PRODUCT OVERVIEW

The Home Master HM-935 coffee grinder consists of the following main components:

- **Transparent Lid:** Allows visibility during grinding and ensures safety.
- **Stainless Steel Grinding Cup:** Durable and easy to clean, suitable for various ingredients.

- **Stainless Steel Blades:** Efficiently grinds ingredients.
- **Motor Base:** Contains the powerful 450W motor and control knob.
- **Control Knob:** Used to select grinding speed or pulse function.
- **Power Cord:** For connecting to an electrical outlet.



Image 1: Front view of the Home Master HM-935 coffee grinder, showing the red base, stainless steel grinding cup, transparent lid, and control knob.

SETUP

1. **Unpack:** Carefully remove all packaging materials from the grinder.
2. **Clean:** Before first use, wipe the exterior of the motor base with a damp cloth. Wash the stainless steel grinding cup and lid with warm, soapy water, then rinse and dry thoroughly. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the grinder on a stable, flat, and dry surface.
4. **Power Check:** Ensure your electrical outlet voltage (220-240V, 50-60Hz) matches the specifications of the grinder.

OPERATING INSTRUCTIONS

Follow these steps for general operation. Specific grinding times may vary based on desired consistency.

General Grinding Procedure:

1. Ensure the grinder is unplugged before adding ingredients.
2. Add the desired amount of ingredients (e.g., coffee beans, spices, nuts) into the stainless steel grinding cup. Do not overfill; the maximum capacity should not exceed the top of the blades.
3. Place the transparent lid securely onto the grinding cup. Ensure it is properly seated to activate the safety interlock.
4. Plug the power cord into a suitable electrical outlet.
5. Turn the control knob to the desired speed setting (1 or 2) or use the pulse (P) function for short bursts.
6. Grind for short intervals (e.g., 10-15 seconds) and check the consistency. Repeat until the desired fineness is achieved. For best results and to prevent overheating, allow the motor to rest for a few seconds between grinding cycles.
7. Once grinding is complete, turn the control knob to the "0" (off) position and unplug the grinder from the outlet.
8. Carefully remove the lid and pour out the ground ingredients.

Tips for Grinding Coffee:

- For a coarse grind (e.g., French press), grind for approximately 5-10 seconds.
- For a medium grind (e.g., drip coffee makers), grind for approximately 10-15 seconds.
- For a fine grind (e.g., espresso), grind for approximately 15-20 seconds, using short pulses.
- Always grind fresh coffee beans just before brewing for optimal flavor.



Image 2: Side view of the Home Master HM-935 coffee grinder, highlighting the handle on the grinding cup and the power cord storage area.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your grinder.

1. **Always unplug** the grinder from the power outlet before cleaning.
2. **Grinding Cup and Lid:** Remove the grinding cup and lid. Wash them with warm, soapy water. Rinse thoroughly and dry completely before reassembling or storing. These parts are generally dishwasher safe, but hand washing is recommended to preserve their finish.
3. **Motor Base:** Wipe the exterior of the motor base with a soft, damp cloth. Do not use abrasive cleaners or scouring pads. **Never immerse the motor base in water or any other liquid.**
4. **Blades:** Use a small brush or a dry cloth to carefully remove any residual grounds from the blades and inside the grinding cup. Be cautious as the blades are sharp.
5. **Storage:** Store the grinder in a dry place, away from direct sunlight and moisture. The compact design allows for easy storage.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|------------------------------------|--|--|
| Grinder does not turn on. | <ul style="list-style-type: none">• Not plugged in.• Lid not securely closed.• Power outage. | <ul style="list-style-type: none">• Ensure the power cord is firmly plugged into a working outlet.• Check that the lid is correctly and securely placed on the grinding cup.• Verify power to the outlet. |
| Ingredients not grinding properly. | <ul style="list-style-type: none">• Overfilled grinding cup.• Ingredients are too large or hard.• Blades are dull or obstructed. | <ul style="list-style-type: none">• Reduce the amount of ingredients.• Break larger ingredients into smaller pieces if possible.• Clean the grinding cup and blades thoroughly. If blades appear dull, contact customer service. |
| Burning smell during operation. | <ul style="list-style-type: none">• Overheating due to prolonged use.• Motor overload. | <ul style="list-style-type: none">• Immediately turn off and unplug the grinder. Allow it to cool down for at least 30 minutes.• Reduce the load and grind in shorter bursts. |

SPECIFICATIONS

- **Model:** HM-935
- **Power:** 450 Watts
- **Voltage:** 220-240 Volts
- **Frequency:** 50-60 Hz
- **Material:** Stainless Steel (Grinding Cup, Blades), Durable Plastic (Motor Base)
- **Dimensions:** Approximately 15 x 15 x 36 cm
- **Weight:** Approximately 1.97 kg
- **Recommended Use:** Grinding coffee, cardamom, nuts, and spices.



Image 3: Packaging box for the Home Master HM-935 coffee grinder, displaying the brand, model number, and 450 Watts power rating.

WARRANTY AND CUSTOMER SUPPORT

Home Master products are manufactured to high-quality standards. For warranty information, technical support, or service inquiries, please refer to the warranty card included with your purchase or visit the official Home Master website. Please have your model number (HM-935) and purchase date available when contacting support.

You can visit the [Home Master Store on Amazon](#) for more product information.