

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [INSE](#) /

› [INSE S10 Cordless Vacuum Cleaner User Manual](#)

INSE S10

INSE S10 Cordless Stick Vacuum Cleaner User Manual

Model: S10

INTRODUCTION

Thank you for choosing the INSE S10 Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

- Store the appliance indoors in a cool, dry place.

PRODUCT COMPONENTS

Familiarize yourself with the various parts of your INSE S10 vacuum cleaner.



This image displays the INSE S10 cordless vacuum cleaner along with its various attachments, including the main motor, extension wand, floor brush, crevice tools, and wall mount. It shows the vacuum in different configurations, highlighting its versatility.

Was ist inbegriffen



Hauptmotor
(mit HEPA-Filter)



LED-motorisierter
Reinigungskopf



Einziehbares Metallrohr
und Drehgelenk



Wandhalterung



2-in-1-Staubbürste



2x Fugendüse
(eine mit LED-Licht)



Haarreinigungswerkzeug



2x Vorfilter
(einer im Mülleimer)



Benutzerhandbuch
& Benutzerhandbuch



Adapter



This image details the contents of the INSE S10 package, including the main motor with HEPA filter, LED-motorized cleaning head, retractable metal tube, wall mount, 2-in-1 dust brush, two crevice nozzles (one with LED light), hair cleaning tool, two pre-filters, user manual, and adapter.

- **Main Motor (with HEPA Filter):** The core unit containing the motor and dust collection system.
- **LED-Motorized Cleaning Head:** For effective cleaning of various floor types, equipped with LED lights to illuminate dark areas.
- **Retractable Metal Tube:** Allows for adjustable length and flexible cleaning.
- **Wall Mount:** For convenient storage and charging.
- **2-in-1 Dust Brush:** Versatile tool for dusting and upholstery.
- **Crevice Nozzles (2x, one with LED Light):** For reaching tight spaces and corners, with an illuminated option for dark areas.
- **Hair Cleaning Tool:** For removing tangled hair from the brush roll.
- **Pre-filters (2x):** Essential for the multi-stage filtration system.
- **Adapter:** For charging the battery.

SETUP AND ASSEMBLY

Follow these steps to assemble your INSE S10 vacuum cleaner.

1. **Charge the Battery:** Before first use, fully charge the battery. Connect the adapter to the battery and plug it into a power outlet. The indicator lights will show charging status.
2. **Attach the Main Motor:** Connect the main motor unit to the retractable metal tube. Ensure it clicks securely into place.
3. **Attach the Cleaning Head:** Connect the LED-motorized cleaning head to the other end of the retractable metal tube.
4. **Install Dust Cup and Filters:** Ensure the dust cup and all filters (HEPA and pre-filters) are correctly installed in the main motor unit. Refer to the "Maintenance" section for filter installation details.
5. **Wall Mount Installation (Optional):** Choose a suitable location for the wall mount. Secure it to the wall using appropriate hardware (not included). This allows for convenient storage and charging.



This image illustrates the assembly process of the INSE S10, showing how the main motor connects to the extension tube and the floor brush, indicating a straightforward click-in mechanism.

OPERATING INSTRUCTIONS

Learn how to effectively use your INSE S10 vacuum cleaner for various cleaning tasks.

Power On/Off and Suction Modes

- **Instant Cleaning:** Press and hold the trigger to start cleaning. Release the trigger to stop.
- **Continuous Cleaning:** For extended cleaning, press the lock button (usually near the trigger) to engage continuous operation without holding the trigger. Press it again to disengage.
- **Suction Power Adjustment:** The INSE S10 features multiple suction modes (e.g., Standard, Max). Use the mode button on the main unit to cycle through the available power settings. The vacuum remembers your last used mode.



Freihändiger Schlüssel Einhandbedienung

  

Sofortige Reinigung

Halten Sie den Abzug gedrückt, um mit der Schnellreinigung zu beginnen.

  

Setzt die Reinigung fort

Wechseln Sie zum Reinigen in den automatischen Modus, OHNE eine Taste zu halten.

This image demonstrates the one-hand operation feature of the INSE S10, showing how to engage instant cleaning by holding the trigger and how to activate continuous cleaning by pressing a lock button, eliminating the need to constantly hold the trigger.

Waschbar Filter & Vorfilter



This image highlights the three-gear suction power adjustment feature of the INSE S10, showing the control panel with indicator lights for different power levels.

Using Attachments

The INSE S10 comes with various attachments for different cleaning needs:

- **LED-Motorized Cleaning Head:** Ideal for hard floors, carpets, and rugs. The built-in LED lights illuminate dust and debris in dark areas.
- **2-in-1 Dust Brush:** Use the brush for delicate surfaces like keyboards or curtains, and the wider nozzle for upholstery or car seats.
- **Crevice Nozzles:** Perfect for narrow gaps, corners, and edges. The LED crevice nozzle helps clean dark, hard-to-reach spots like under furniture or car interiors.

Mehrzweck-Zubehör



This image showcases the versatility of the INSE S10 with its multi-purpose accessories, including a transparent crevice nozzle with LED for dark spaces, a 2-in-1 brush for upholstery, and a black crevice tool for car interiors.

Licht an der Ecke

Flexibles Design & LED-Frontlichtkopfbürste



This image highlights the flexible design of the INSE S10's cleaning head, showing its ability to swivel 90 degrees vertically and 150 degrees horizontally, along with the integrated LED headlights for improved visibility during cleaning.

Flexible Cleaning

The INSE S10 features a foldable design for easy cleaning under furniture and hard-to-reach areas without bending.

SCHÜTZE DEINE TAILLE

Verpasse keine Ecke



This image demonstrates the foldable design of the INSE S10, allowing the user to clean under low furniture like sofas and beds without needing to bend down, protecting the user's back.

MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the lifespan of your INSE S10 vacuum cleaner.

Emptying the Dust Cup

Empty the dust cup after each use or when the MAX fill line is reached to maintain suction power.

1. Ensure the vacuum is turned off.
2. Press the dust cup release button and remove the dust cup from the main motor unit.
3. Hold the dust cup over a trash bin and press the bottom release latch to open the lid and empty contents.
4. Close the dust cup lid securely.
5. Reattach the dust cup to the main motor unit.

Cleaning Filters

The INSE S10 features a 6-layer filtration system. Clean filters regularly to prevent clogging and maintain strong suction.

Innovatives *6-stufiges* HEPA-Filtrationssystem

80% weniger Saugverlust

HEPA Fängt 0,3-Mikron-Staub auf

Stoffe verarbeiten und Frischluft abgeben

Blockiert feinen sichtbaren Staub

Fallen finden Staubpartikel

Blockieren Sie Haare und gewöhnlichen Staub

Große Partikel trennen

This image illustrates the innovative 6-stage HEPA filtration system of the INSE S10, showing how it captures 0.3-micron dust, processes fabrics, releases fresh air, blocks fine visible dust, traps dust particles, and separates large particles, leading to less suction loss.

- **Pre-filters:** These can be washed with water. Remove them from the dust cup, rinse under running water until clean, and allow them to air dry completely for at least 24 hours before reinstallation.
- **HEPA Filter:** Tap the HEPA filter gently to remove loose dust. Do not wash the HEPA filter with water unless specified by the manufacturer. Replace the HEPA filter periodically (e.g., every 3-6 months, depending on usage).



This image shows the washable filter and pre-filter components of the INSE S10, submerged in water, indicating they can be cleaned by rinsing.

Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris. Use the provided hair cleaning tool to cut and remove any obstructions.

1. Turn off the vacuum and disconnect the cleaning head.
2. Locate the brush roll access latch on the bottom of the cleaning head.
3. Open the latch and remove the brush roll.
4. Use scissors or the hair cleaning tool to cut and remove any tangled hair or fibers.
5. Reinsert the brush roll and secure the latch.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure battery is fully charged and correctly inserted into the main unit.
Low suction power.	Dust cup is full; Filters are clogged; Brush roll is obstructed; Nozzle/tube is blocked.	Empty dust cup. Clean or replace filters. Remove tangled hair/debris from brush roll. Check and clear any blockages in the nozzle or tube.
Brush roll not spinning.	Brush roll is jammed; Cleaning head is not properly attached.	Remove any obstructions from the brush roll. Ensure the cleaning head is securely attached to the tube.
Battery runtime is short.	Battery not fully charged; Using Max suction mode; Battery degradation.	Ensure battery is fully charged before use. Use Standard mode for longer runtime. Consider replacing the battery if it's old and performance has significantly degraded.
Unusual noise.	Blockage in the air path; Damaged component.	Check for and remove any blockages in the dust cup, filters, tube, or cleaning head. If noise persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model	INSE S10
Brand	INSE
Suction Power	Up to 30,000 Pa / 140 AW
Motor Power	350W Brushless Motor
Battery Type	7x2200mAh High-Performance Lithium-ion
Max Runtime	Up to 50 minutes (on lowest setting)
Dust Cup Capacity	1.2 L
Filtration System	6-Layer HEPA Filtration with Cyclone Technology
Noise Level	65 dB
Weight	4.33 Kilograms

Bis zu **30000PA / 140AW** Leistungsstarke Absaugung

- 350 W bürstenloser Motor
- Starke Leistung
- Für die Ewigkeit gebaut



This image highlights the INSE S10's powerful suction of up to 30,000Pa / 140AW, driven by a 350W brushless motor, emphasizing its strong performance and durability.

Hohe Kapazität Weniger Aufladen

	S10 Verbesserte Batterie	Andere Andere Batterie
Anzahl der Lithium-Ionen-Zellen	7-Zellen 	4-Zellen 
Laufzeit	50 Minuten maximal 	30 Minuten maximal 

This image compares the INSE S10's battery capacity and runtime (up to 50 minutes) with other batteries, showing it uses 7 cells compared to 4 cells in typical batteries, leading to longer operation.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included in your product packaging or contact INSE customer service directly.

Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, visit the official INSE website or contact their support team through the contact information provided in your product documentation.

