

[Manuals.plus](#) /

› [Hatteker](#) /

› Hatteker Hair Clipper Beard Trimmer Kit User Manual

Hatteker XK-588

Hatteker 5-in-1 Multi-Functional Grooming Kit User Manual

Model: XK-588

PRODUCT OVERVIEW

The Hatteker 5-in-1 Multi-Functional Grooming Kit is designed for versatile personal grooming, offering precision for beard, hair, nose, and body trimming. This cordless, waterproof device features a digital display and USB fast charging for convenience and efficiency.



Titanium professional detachable blade



5 IN 1



Digital display



Whole body Washable



ON/OFF



Charging directly or with USB charger

Image: Key features of the Hatterker grooming kit, including its titanium professional detachable blade, whole body washable design, 5-in-1 functionality, digital display, and USB charging capability.

Safety Information

For your safety, please adhere to the following guidelines:

- Use only on facial hair or body hair. Do not use on infants or sensitive areas.
- Keep away from water sources when charging.
- Unplug the device when not in use.
- Clean the device according to the instructions provided to avoid skin irritation.
- Avoid looking directly at the cutting blades.
- In case of eye contact, rinse eyes thoroughly with water.
- Discontinue use if skin irritation or discomfort occurs.

What's Included

Your Hatteker grooming kit includes the following components:

- Beard trimmer with blade guard
- Body trimmer head
- Hair trimmer head
- Precision trimmer head
- Nose trimmer head
- Charging dock
- 6 guide combs (1 adjustable comb for precision trimmer: 1-10mm; 4 hair trimmer combs: 6/9/12/15mm; 1 adjustable beard trimmer comb)
- Barber comb
- Styling comb
- Cleaning brush
- Instructions manual



Image: The complete Hattaker 5-in-1 grooming kit, displaying the main trimmer unit, various interchangeable heads, guide combs, charging cable, and cleaning accessories.

SETUP

Initial Charging

Before first use, fully charge the trimmer. Connect the USB charging cable to the charging dock and plug it into a compatible USB power source. Place the trimmer in the charging dock. The digital display will indicate charging status. A full charge takes approximately 1.5 hours and provides up to 60 minutes of cordless use.



Image: The Hattaker trimmer being charged via a USB connection, demonstrating its convenient charging method.

Attaching Trimmer Heads

To attach a trimmer head, align the head with the main unit and press firmly until it clicks into place. To remove, gently pull the head away from the unit.

OPERATING INSTRUCTIONS

Ensure the desired trimmer head and guide comb are securely attached before operation. Press the power button to turn the device on. The digital display will show the remaining battery life.

Using Guide Combs

Select the appropriate guide comb for your desired hair length. For the precision trimmer, use the adjustable comb to set lengths from 1mm to 10mm. For the hair trimmer, choose from 6mm, 9mm, 12mm, or 15mm combs. Attach the comb by sliding it onto the trimmer head until it locks.

Trimming Techniques

- **Beard/Hair Trimming:** Move the trimmer against the direction of hair growth for an even cut. Use the precision trimmer for detailing and shaping.

- **Nose/Ear Trimming:** Gently insert the nose trimmer head into the nostril or ear canal. Move in a circular motion to trim unwanted hair.
- **Body Grooming:** Use the body groomer head for larger areas. For sensitive areas, use a guide comb to prevent direct skin contact.

Multi Grooming Kit



Nose Trimmer



Body Hair Trimmer



Engraving Trimmer



Full Size Trimmer



Wide Hair Trimmer

Image: A visual guide demonstrating the multi-functional uses of the Hatteker grooming kit, including nose trimming, body hair trimming, intricate engraving, full-size beard trimming, and wide hair cutting.

MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and extend the lifespan of your trimmer.

Cleaning

The Hatteker grooming kit features a fully washable design. After each use:

1. Turn off the trimmer and detach the head.
2. Rinse the trimmer head and blades under running water.
3. Use the provided cleaning brush to remove any trapped hairs from the blades and inside the unit.
4. Allow all parts to air dry naturally before reattaching or storing.

5. Apply a small amount of lubricating oil (included) to the blades regularly to maintain smooth operation.

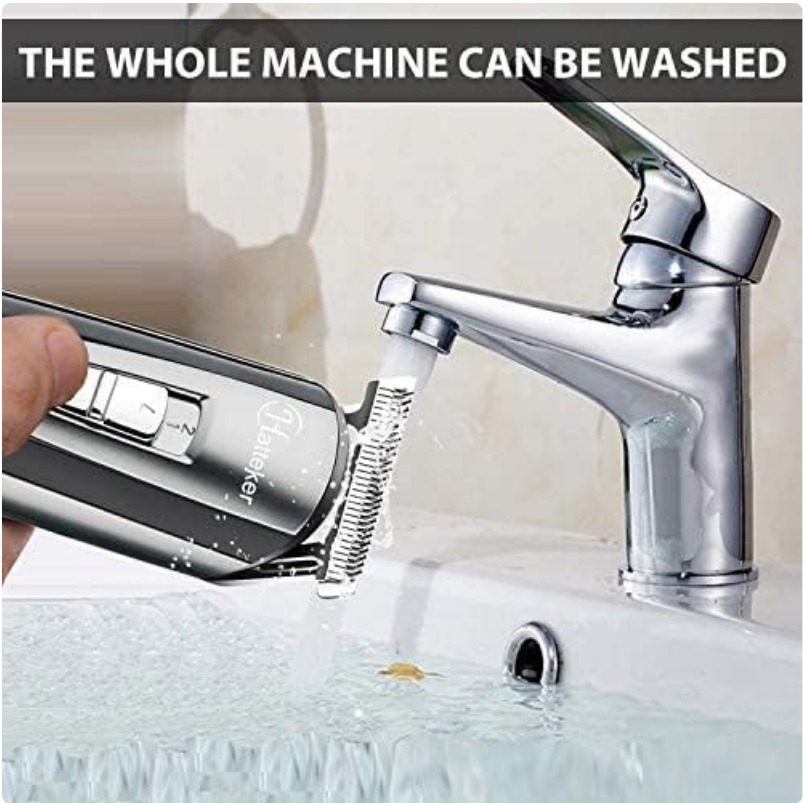


Image: The Hatterker trimmer being cleaned under running water, highlighting its full washability for easy maintenance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Low battery; Device locked.	Charge the trimmer fully. Press and hold the power button for 3 seconds to unlock the device.
Poor trimming performance.	Blades are dull or clogged with hair; Insufficient lubrication.	Clean the blades thoroughly. Apply lubricating oil to the blades. Consider replacing the blade head if dullness persists.
Device makes unusual noise.	Blades are not properly aligned or lubricated.	Ensure the trimmer head is securely attached. Clean and lubricate the blades.

SPECIFICATIONS

- **Brand:** Hatterker
- **Model Number:** XK-588
- **Product Dimensions:** 1.57 x 1.57 x 5.51 inches
- **Item Weight:** 1.19 Pounds (540 Grams)
- **Power Source:** USB Rechargeable
- **Charging Time:** Approximately 1.5 hours
- **Operating Time:** Up to 60 minutes
- **Waterproof:** Yes, whole body washable
- **Hair Type:** All
- **Color:** Black

- **Country of Origin:** China

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Hatteker website. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2024 Hatteker. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question