

[Manuals.plus](#) /

› [ODK](#) /

› ODK 57-Inch Long Dresser TV Stand with Charging Station Instruction Manual

ODK SPCB02010157USDF-1

ODK 57-Inch Long Dresser TV Stand with Charging Station

Instruction Manual

1. INTRODUCTION

Thank you for purchasing the ODK 57-Inch Long Dresser TV Stand with Charging Station. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and efficient use of your new furniture. Please read this manual thoroughly before beginning assembly or use.



Figure 1.1: ODK 57-Inch Long Dresser TV Stand with Charging Station.

2. SAFETY INFORMATION

To prevent injury and damage, please observe the following safety precautions:

- Always follow assembly instructions carefully.
- Do not overload drawers. Distribute weight evenly.
- Ensure the dresser is placed on a flat, stable surface.
- Use the included anti-tip kit to secure the dresser to the wall, especially if children are present. This prevents accidental tipping.



Figure 2.1: Anti-tip kit for wall attachment.

- Keep liquids away from the charging station to prevent electrical hazards.
- Do not attempt to modify the product or its electrical components.

3. PACKAGE CONTENTS

Before assembly, verify that all parts are present and undamaged. Refer to the assembly diagram for identification.

Part	Description	Quantity
Top Board	Wooden surface with charging station cutout	1
Metal Frame	Main support structure	1 set
Fabric Drawers	Collapsible storage drawers with handles	13
Charging Station	Power strip with AC outlets and USB ports	1
Adjustable Feet	Leveling feet for stability	4
Anti-Tip Kit	Wall anchor strap and hardware	1 set
Assembly Hardware	Screws, wrench, etc.	1 set

4. SETUP AND ASSEMBLY

Assembly is straightforward and requires minimal tools. Follow these steps:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble the Metal Frame:** Connect the metal frame pieces according to the included diagram. Ensure all screws are tightened securely.
3. **Attach Adjustable Feet:** Screw the adjustable feet into the bottom of the metal frame. Adjust them as needed to level the dresser on uneven floors.



Figure 4.1: Adjustable feet for stability.

4. **Install the Top Board:** Place the wooden top board onto the assembled metal frame. Secure it using the provided hardware.
5. **Insert Charging Station:** Carefully place the charging station into the designated cutout on the top board. Ensure it sits flush.



Figure 4.2: Integrated charging station with 3 AC outlets, 1 USB, and 1 Type-C port.

6. **Assemble Fabric Drawers:** Unfold each fabric drawer and insert the bottom panel to create a rigid structure.



Figure 4.3: Assembling a fabric drawer by inserting the bottom panel.

7. **Place Drawers:** Slide the assembled fabric drawers into their respective slots in the metal frame.



Large one can hold:

60-80 Socks

15-18 T-shirts

8-11 Jeans



Figure 4.4: The dresser features 13 spacious fabric drawers for organizing various items.

8. **Secure with Anti-Tip Kit:** Attach the anti-tip kit to the back of the dresser and secure it to a wall stud using appropriate hardware. This is crucial for stability and safety.

5. OPERATING INSTRUCTIONS

5.1 Using the Storage Drawers

The dresser features 13 easy-pull fabric drawers designed for efficient organization. To use:

- Grasp the handle firmly to pull out or push in the drawer.

- Distribute items evenly within each drawer to maintain balance and prevent sagging.
- Avoid placing excessively heavy items in the drawers.



Figure 5.1: Ergonomic drawer handle for easy access.

5.2 Utilizing the Charging Station

The integrated charging station provides convenient power access for your electronic devices.

- Plug the dresser's power cord into a standard wall outlet.
- Use the 3 AC outlets for larger electronics like lamps or laptops.
- Use the 1 USB-A port and 1 Type-C port for charging smartphones, tablets, and other USB-powered devices.
- Ensure devices are compatible with the charging station's voltage and current specifications (120V/12A for AC, 5V/2A for USB).

6. MAINTENANCE AND CARE

Proper care will extend the life of your ODK dresser:

- **Cleaning:** Wipe the wooden top surface and metal frame with a dry, soft cloth. For the fabric drawers, spot clean with a damp cloth and mild detergent if necessary, then air dry completely. Do not use harsh chemicals or abrasive cleaners.
- **Drawer Care:** Periodically check the fabric drawers for any signs of wear or damage. Ensure the bottom panels are securely in place.
- **Stability Check:** Regularly inspect all screws and connections to ensure they remain tight. Re-tighten if any looseness is detected.
- **Charging Station:** Keep the charging ports free of dust and debris. Do not expose the charging station to moisture.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dresser is wobbly	Uneven floor; loose connections	Adjust the leveling feet; tighten all assembly screws.
Charging station not working	Not plugged in; power outage; faulty device	Ensure power cord is securely plugged into a live outlet; check household circuit breaker; test with a different device.
Drawers sag or don't slide smoothly	Overloaded; bottom panel not inserted correctly	Reduce weight in drawers; ensure bottom panel is fully inserted and flat.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	ODK
Model Name	13-Drawer TV Stand
Model Number	SPCB02010157USDF-1
Product Dimensions	11.81"D x 57.08"W x 39.76"H
Color	Black and Vintage
Material	Engineered Wood, Metal, Fabric
Number of Drawers	13
Charging Station	3 AC Outlets, 1 USB-A Port, 1 Type-C Port
Power Cord Length	6.6 feet
Item Weight	45.63 Pounds
Assembly Required	Yes
Care Instructions	Wipe with Dry Cloth
UPC	850045085841

Product Dimensions



Figure 8.1: Detailed product dimensions.



Figure 8.2: The dresser is suitable for TVs up to 65 inches.

9. WARRANTY AND SUPPORT

ODK provides dedicated customer service to ensure your satisfaction. For any questions, missing parts, or issues with your product, please contact ODK customer support directly. Refer to your purchase documentation for specific warranty details and contact information.

Contact Information:

Please refer to your purchase receipt or the ODK official website for the most current contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BGPFNL66>

More documents and user manuals: <https://manuals.plus/>