

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PERLESMITH](#) /

› [PERLESMITH Universal Swivel TV Stand Base Instruction Manual for Models PSTVS13 and PSTVS09](#)

PERLESMITH PSTVS13&PSTVS09

PERLESMITH Universal Swivel TV Stand Base User Manual

Models: PSTVS13 & PSTVS09

IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before installation. If you do not understand these instructions or have doubts about the safety of the installation, please contact a qualified installer. Check carefully to ensure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose not explicitly specified by the manufacturer.

- **Weight Capacity:** Do not exceed the maximum weight capacity specified for your TV stand model. Exceeding this limit may result in instability and potential injury.
- **TV Size:** Ensure your TV's size and VESA pattern are compatible with the stand.
- **Stability:** Always ensure the stand is placed on a stable, level surface. Avoid placing the stand near edges where it could be easily knocked over.
- **Children:** Keep children away from the TV stand during assembly. Small parts can be a choking hazard.
- **Tools:** Use appropriate tools as specified in the assembly instructions.

PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, please contact PERLESMITH customer support.

Typical Components Include:

- Base Plate (Tempered Glass or Metal)
- Support Column
- TV Mounting Brackets
- VESA Adapters (if applicable)
- Hardware Kit (various screws, washers, spacers)

- Assembly Tools (e.g., Hex Key)

SETUP AND INSTALLATION

Follow these steps for proper assembly and installation of your PERLESMITH Universal Swivel TV Stand Base.

Step 1: Assemble the Base and Support Column

1. Carefully unbox all components and lay them out on a soft, clean surface to prevent scratches.
2. Attach the support column to the base plate using the provided screws and tools. Ensure all connections are secure.

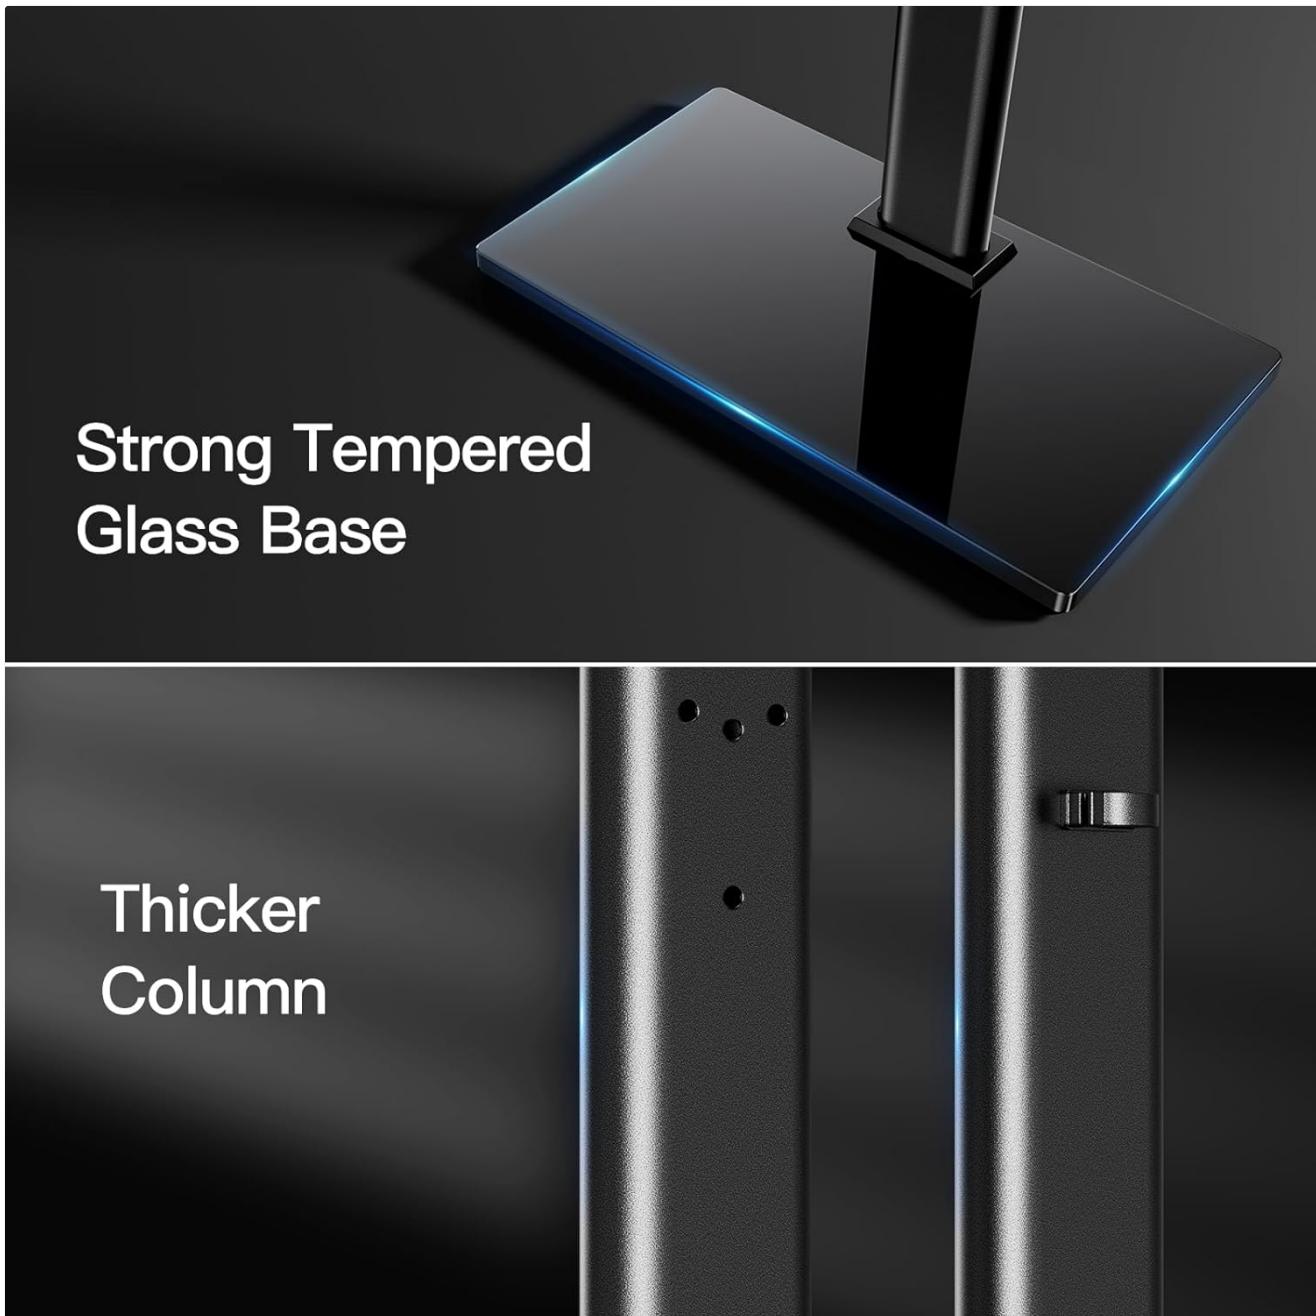


Image: The stand features a strong tempered glass base and a thicker support column for enhanced stability.

Step 2: Attach TV Mounting Brackets to Your Television

1. Identify the VESA mounting holes on the back of your television.
2. Select the appropriate screws, washers, and spacers from the hardware kit that fit your TV's VESA pattern.

3. Attach the vertical TV mounting brackets to the back of your television. Ensure they are level and securely fastened. Do not overtighten.

Step 3: Mount the Television onto the Support Column

1. With assistance, carefully lift your television and hook the attached mounting brackets onto the support column's mounting plate.
2. Secure the TV to the stand using the safety screws or locking mechanisms provided.
3. For model PSTVS13, assembly is designed for ease with fewer bolts required for installation.



Image: PSTVS13 features an easy assembly design, requiring only 4 bolts for fast installation compared to other models.

OPERATING INSTRUCTIONS

Swivel Function

Both PSTVS13 and PSTVS09 models feature a swivel function to optimize your viewing experience.

- Gently grasp the sides of your television and rotate it to the desired angle.

- The stand allows for a swivel range of up to 30 degrees left or right (total 60 degrees).
- Avoid forcing the TV beyond its natural swivel limits.



Image: The TV stand allows for a swivel of up to 30 degrees left or right, providing flexible viewing angles.

Height Adjustment (PSTVS13 Only)

The PSTVS13 model offers multiple height adjustment positions for an elevated view.

- The PSTVS13 provides 9 different height adjustment positions, allowing for a total of 8 inches of vertical movement.
- To adjust the height, you may need to temporarily remove the TV from the stand or loosen specific bolts on the support column (refer to the detailed assembly diagram for your specific model).
- Always ensure the TV is securely re-fastened at the new height.

Taller Pillar, Elevated View

PSTVS13



Image: The PSTVS13 model features a taller pillar design, offering a 15% higher elevated view compared to other stands.

MAINTENANCE

Regular maintenance helps ensure the longevity and safe operation of your TV stand.

- Cleaning:** Use a soft, dry cloth to clean the stand. For stubborn marks on the glass base, a mild glass cleaner can be used, applied to the cloth first, not directly to the stand. Avoid abrasive cleaners or solvents.
- Check Connections:** Periodically check all screws and bolts to ensure they remain tight. Loose connections can compromise stability.
- Inspection:** Inspect the stand for any signs of wear, damage, or corrosion. If any issues are found, discontinue use and contact customer support.

TROUBLESHOOTING

If you encounter issues with your TV stand, refer to the following common problems and solutions.

Problem: TV is not stable or wobbles.

- **Solution:** Ensure all assembly screws are tightened securely. Verify the stand is on a flat, level surface. Check that the TV's weight and VESA pattern are within the stand's specifications.

Problem: TV does not fit the mounting brackets.

- **Solution:** Confirm your TV's VESA pattern (distance between mounting holes) matches the stand's compatibility. Ensure you are using the correct screws and spacers for your TV model.

Problem: Difficulty with swivel function.

- **Solution:** Ensure no cables are obstructing the swivel mechanism. Do not force the TV; the swivel is designed for smooth, controlled movement.

SPECIFICATIONS

Detailed specifications for PERLESMITH Universal Swivel TV Stand Bases.

Feature	PSTVS13	PSTVS09
Compatible TV Sizes	37" - 75"	32" - 60"
Maximum Load Capacity	99 lbs (45 kg)	88 lbs (40 kg)
VESA Compatibility (mm)	200x100, 200x200, 300x200, 300x300, 400x300, 400x400, 600x200, 600x400	100x100, 200x100, 200x200, 200x300, 300x200, 300x300, 300x400, 400x200, 400x300, 400x400
Swivel Range	±30° (60° total)	±30° (60° total)
Height Adjustment	9 positions, 8" total movement	Not applicable (fixed height)
Material	Alloy Steel, Tempered Glass Base	
Color	Black	



Image: PSTVS13 compatibility for 37"-75" TVs, max 99 lbs, and various VESA patterns.

Wide Compatibility

Max Load

88 lbs

VESA Patterns

400x400mm

400x300mm

400x200mm

300x400mm

300x300mm

300x200mm

200x300mm

200x200mm

200x100mm

100x200mm

100x100mm

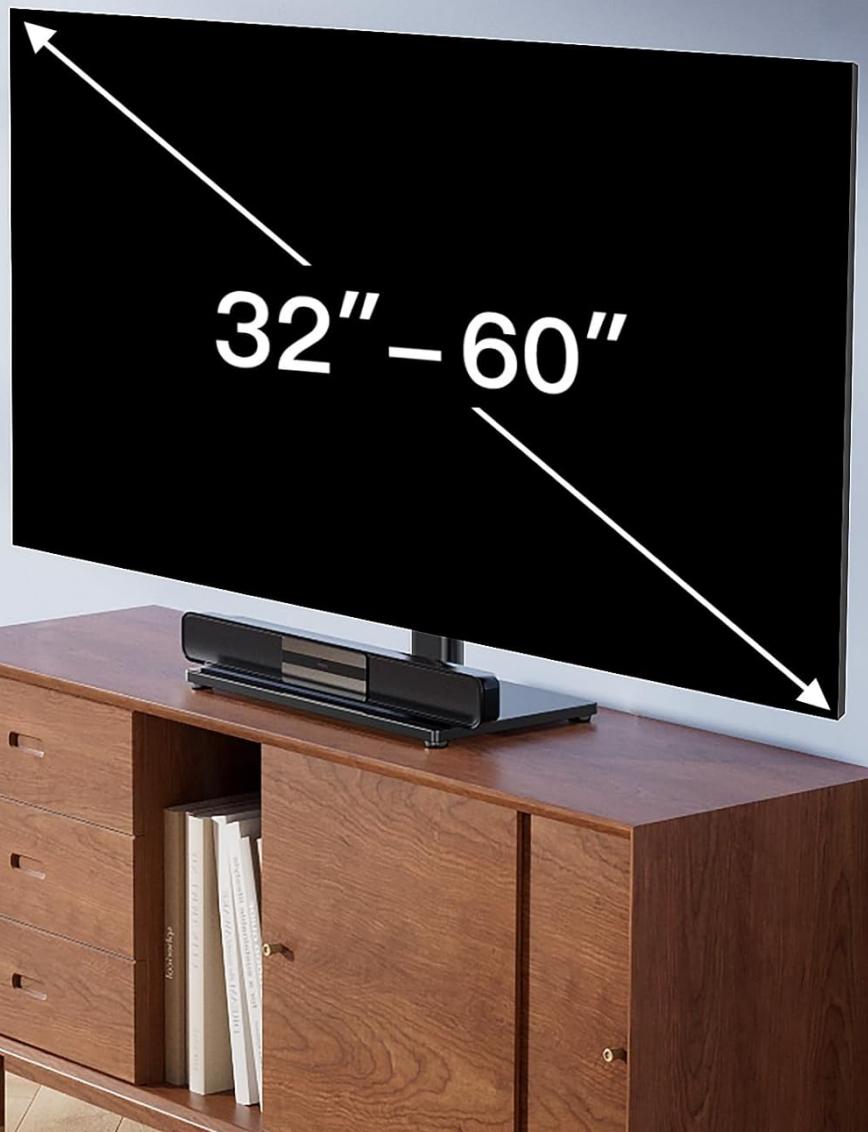


Image: PSTVS09 compatibility for 32"-60" TVs, max 88 lbs, and various VESA patterns.

Sturdy TV Support

Passed

4X

Load Capacity Test



PERLESMITH

Failed

4X

Load Capacity Test



Others

Image: The stand has passed a 4X load capacity test, demonstrating sturdy TV support.

WARRANTY INFORMATION

PERLESMITH products are manufactured with quality and care. This product is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase or visit the official PERLESMITH website for detailed warranty terms and conditions.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact PERLESMITH customer support. Our team is available to help you.

- **Website:** Visit the official PERLESMITH website for FAQs, product information, and contact options.
- **Email:** Refer to your product packaging or the PERLESMITH website for customer service email addresses.
- **Phone:** Contact numbers may be available on the PERLESMITH website or product documentation.

© 2024 PERLESMITH. All rights reserved.