

[manuals.plus](#) /

- › [Andoer](#) /
- › [Andoer 4K Digital Camera Video Camcorder 48MP User Manual](#)

Andoer Andoer 4K Digital Camera Video Camcorder (Model: 8832e0a3-1dc7-46f6-8074-a6a5efc42637)

Andoer 4K Digital Camera Video Camcorder 48MP User Manual

Model: 8832e0a3-1dc7-46f6-8074-a6a5efc42637

INTRODUCTION

This manual provides essential instructions for the safe and effective operation of your Andoer 4K Digital Camera Video Camcorder. Please read this manual thoroughly before use and retain it for future reference.



Image: The Andoer 4K Digital Camera, shown with its 2.4-inch IPS screen displaying a family scene and a 32GB memory card.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Andoer Digital Camera
- 1 x USB Charging Cable
- 1 x Wrist Strap
- 1 x Carry Bag
- 1 x 32GB Memory Card
- 1 x User's Manual (English)

SETUP

1. Battery Installation and Charging

The camera features a built-in lithium battery. Before first use, ensure the battery is fully charged.

1. Connect the camera to a USB power source (e.g., computer, wall adapter) using the provided USB charging cable.
2. The charging indicator light will illuminate. Once charging is complete, the light will typically change

color or turn off.

2. Memory Card Installation

A 32GB memory card is included. The camera supports Class-10 external TF (Micro SD) memory cards up to 128GB.

1. Locate the memory card slot on the camera.
2. Insert the memory card into the slot with the gold contacts facing the correct direction (refer to the diagram on the camera body if available) until it clicks into place.
3. To remove, gently press the card inward until it springs out.

3. Initial Power On

Press and hold the power button (usually marked with a power symbol) for a few seconds until the screen illuminates.

OPERATING INSTRUCTIONS

Basic Controls

Familiarize yourself with the camera's buttons and their functions:

- **Power Button:** Turns the camera on/off.
- **Shutter Button:** Takes photos or starts/stops video recording.
- **W/T Buttons:** Control the 16X digital zoom (W for Wide, T for Telephoto).
- **OK Button:** Confirms selections in menus.
- **Mode (M) Button:** Switches between different shooting modes (e.g., Photo, Video, Playback).
- **Menu Button:** Accesses camera settings.

48 MEGAPIXELS SHOOT A BLOCKBUSTER



Pixel is the basic unit of image display. In the whole image, the pixel can be regarded as a small grid with a single color and can no longer be divided into smaller elements or units. The more pixels in the unit area, the higher the resolution, and the clearer the displayed image

Image: A detailed view of the camera's front, highlighting the lens and the '48 Megapixel' marking, indicating its high-resolution capability.

Photo Mode

To capture still images:

1. Turn on the camera and ensure it is in Photo Mode (indicated on the 2.4-inch IPS screen).
2. Frame your shot using the screen. Use the W/T buttons to adjust the 16X digital zoom.
3. Press the Shutter Button halfway to focus, then fully press to take the picture.

Video Mode

To record videos:

1. Switch to Video Mode using the Mode (M) button.
2. Press the Shutter Button to start recording. A recording indicator will appear on the screen.
3. Press the Shutter Button again to stop recording.

COLLECT MEMORIES AND RECORD A GOOD LIFE

The 4K HD video camera records every interesting thing and shoots your VOG



Image: A hand holding the Andoer camera, displaying a family on a beach on its screen, illustrating its use for capturing memories.

Zoom Function

The camera features 16X digital zoom. Use the 'T' button to zoom in and the 'W' button to zoom out. Digital zoom magnifies the image electronically, which may affect image quality at higher magnifications.

16X ZOOM FOLLOW YOUR HEART



Image: A visual comparison showing the effect of 1x zoom versus 16x digital zoom, demonstrating the camera's magnification capability.

Playback Mode

To review your photos and videos:

1. Switch to Playback Mode using the Mode (M) button.
2. Use the navigation buttons (often integrated with the OK button) to scroll through your media.
3. Press the OK button to view a photo or play a video.

Provide you with a wide field of vision and let you feel the new artistic conception of the big screen



Image: The camera's 2.4-inch IPS screen displaying a vibrant landscape, illustrating the screen size and display quality.

Camera Settings and Features

Access the Menu to adjust various settings:

- **Resolution:** Set photo resolution up to 48MP and video resolution up to 4K.
- **Shooting Modes:** Select from Auto, Sport, Night, Portrait, Landscape, Backlight, Party, Beach, High Sensitivity.
- **White Balance:** Adjust for Auto, Daylight, Cloudy, Fluorescent, Tungsten.
- **Self-Timer:** Options for Off, 2 sec, 5 sec, 10 sec.
- **Anti-Shake:** Digital image stabilization to reduce blur.
- **Face Detect & Smile Capture:** Features to assist in portrait photography.
- **Built-in Flash:** Provides illumination in low-light conditions.
- **Auto Power Off:** Configurable to Off, 1 minute, 3 minutes, 5 minutes, 10 minutes to conserve battery.

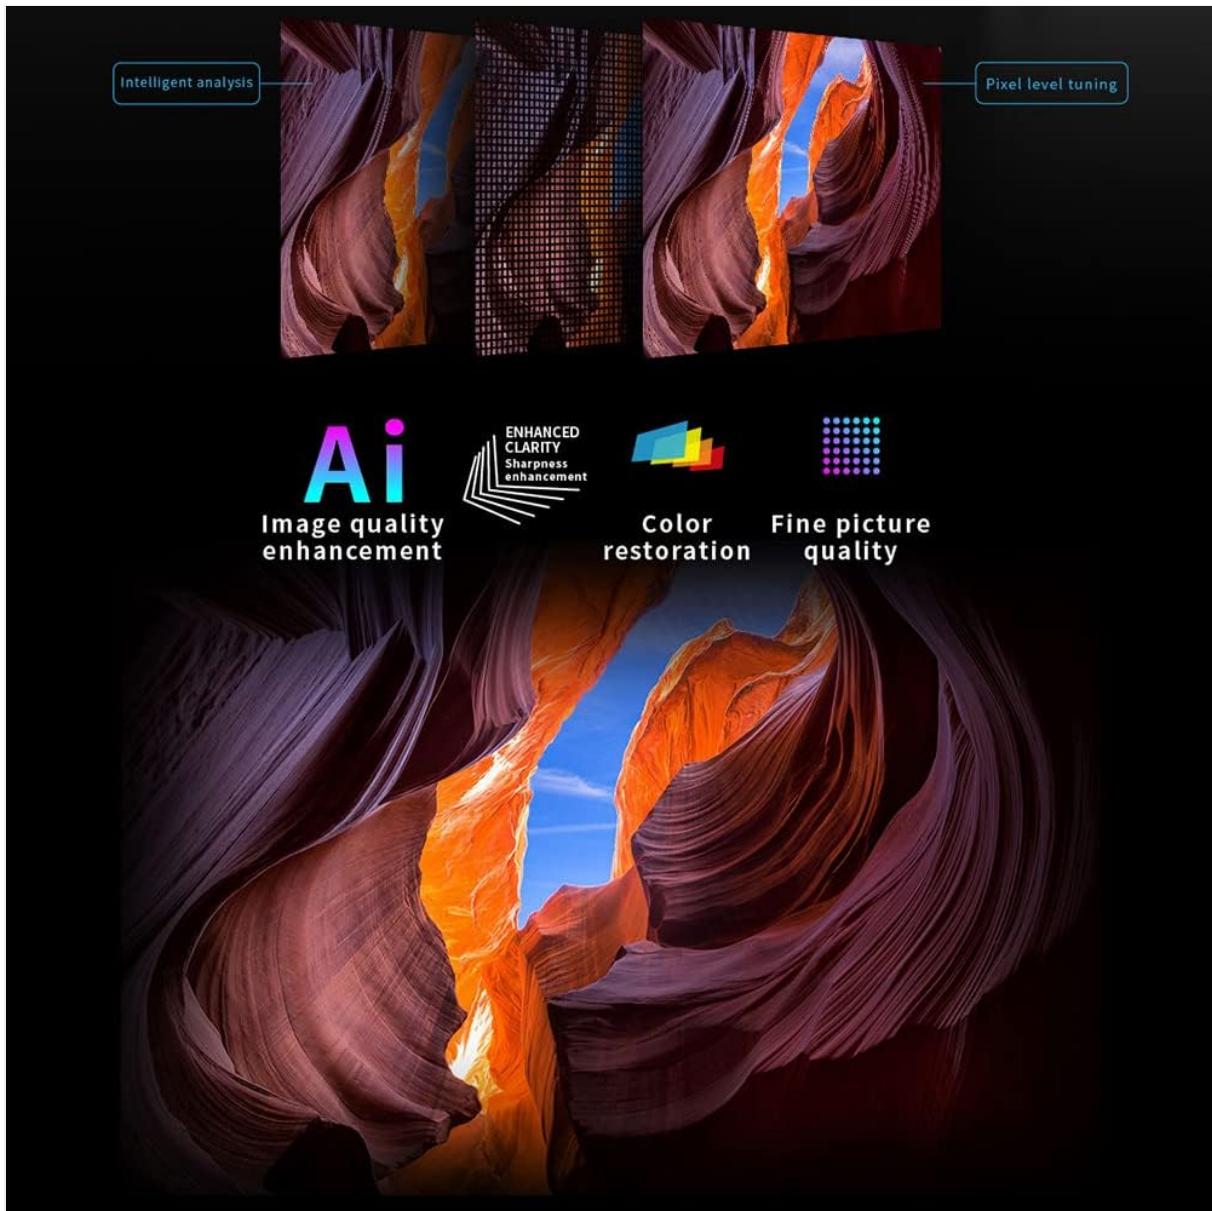


Image: A graphic illustrating the camera's image quality enhancement features, including intelligent analysis, color restoration, and fine picture quality.

MAINTENANCE

Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens and screen, use a specialized lens cleaning cloth and solution. Avoid abrasive materials.

Battery Care

- Avoid fully discharging the battery frequently.
- Charge the battery regularly, even if the camera is not in use for extended periods.

Storage

- Store the camera in a cool, dry place, away from direct sunlight and extreme temperatures.
- Use the provided carry bag for protection during transport.

TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common problems and solutions:

Problem	Possible Solution
Camera does not power on.	Ensure the battery is charged. Connect to a power source and try again.
Memory card error.	Reinsert the memory card. Ensure it is a Class-10 TF card and formatted correctly. Try a different compatible memory card.
Images are blurry.	Ensure the lens is clean. Check lighting conditions. Use the anti-shake function. Hold the camera steady.
Flash not working.	Check flash settings in the menu. Ensure the flash is enabled for the current shooting mode.
Camera freezes or is unresponsive.	Remove and reinsert the battery (if accessible) or press and hold the power button for 10 seconds to force a shutdown.

SPECIFICATIONS

Detailed technical specifications for your Andoer 4K Digital Camera Video Camcorder:

- **Image Sensor:** CMOS Sensor
- **Display:** 2.4 Inch IPS Screen
- **Picture Resolution:** Up to 48MP
- **Video Resolution:** 4K (3840x2160), 2.7K (2688x1520), 1080P (1920x1080), 720P (1280x720)
- **Digital Zoom:** 16X
- **Image Stabilization:** Digital
- **Focus Type:** Auto Focus (Contrast Detection)
- **Storage:** Supports Class-10 TF (Micro SD) card up to 128GB (32GB included)
- **Connectivity:** USB
- **Power Supply:** Built-in Lithium Battery
- **Item Size:** 9.5 * 5.8 * 2.5cm / 3.7 * 2.3 * 1in
- **Item Weight:** 115g / 4.1oz
- **Color:** Black

SAFETY INFORMATION

Warning:

To avoid suffocation hazard, keep this plastic bag away from babies and children.



1 Warning

To avoid suffocation hazard, keep this plastic bag away from babies and children.

2 Warnung

Um Erstickungsgefahr zu vermeiden, halten Sie diese Plastiktüte von Säuglingen und Kindern fern.

3 Avertissement

Pour éviter tout risque d'étouffement, gardez ce sac en plastique hors de portée des nourrissons et des enfants.

4 Advertencia

Para evitar peligro de asfixia, mantenga esta bolsa de plástico fuera del alcance de bebés y niños.

5 Ostrzeżenie

Aby uniknąć ryzyka zadławienia, przechowuj tę plastikową torbę w miejscu niedostępnym dla niemowląt i dzieci.

6 Waarschuwing

Houd deze plastic zak uit de buurt van baby's en kinderen om verstikkingsgevaar te voorkomen.

7 Varning

För att undvika kvävningsrisk, förvara denna plastpåse utom räckhåll för spädbarn och barn.

8 Attenzione

Per evitare il rischio di soffocamento, tenere questo sacchetto di plastica lontano dalla portata di neonati e bambini.

9 Uyarı

Boğulma tehlikesini önlemek için bu plastik torbayı bebeklerden ve çocuklardan uzak tutun.

Image: A warning label in multiple languages advising to keep plastic bags away from children to prevent suffocation.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact your retailer. For technical support or further assistance, please reach out to Andoer customer service through their official website or the contact information provided on your product packaging.