

Upstreman FR17

Upstreman 1.7 Cu.ft Mini Fridge with Freezer (Model FR17) Instruction Manual

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your new Upstreman mini fridge. Keep this manual for future reference. Failure to follow these instructions may result in property damage or personal injury.

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded outlet. Do not use extension cords or ungrounded adapters.
- **Ventilation:** Allow adequate space around the refrigerator for proper ventilation (at least 4 inches on sides and back). Do not block ventilation openings.
- **Flammable Materials:** Do not store explosive substances such as aerosol cans with flammable propellants in this appliance.
- **Cleaning:** Always unplug the refrigerator before cleaning. Use a soft cloth and mild detergent.
- **Children Safety:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. PRODUCT OVERVIEW

The Upstreman 1.7 Cu.ft Mini Fridge with Freezer (Model FR17) is a compact and energy-efficient refrigeration solution designed for small spaces. It features an adjustable thermostat, a low noise level of 38 dB, and a reversible door for flexible placement.

COMPACT SIZE



Image: Upstreman 1.7 Cu.ft Mini Fridge showing its compact dimensions of 18.9"W x 17.7"D x 19.3"H.

Key Features:

- **Compact Design:** Ideal for dorms, offices, bedrooms, or any small area.
- **Adjustable Thermostat:** Temperature range from 33.8°F to 46.4°F.
- **Integrated Freezer:** Small freezer compartment for ice cubes and frozen items.
- **Low Noise Operation:** Operates at a quiet 38 dB, minimizing disturbance.
- **Energy Efficient:** Consumes approximately 0.5 kWh per day, utilizing R600a refrigerant.
- **Reversible Door:** Door can be configured to open from either the left or right side.



Image: Energy Guide label for the Upstreman FR17 Mini Fridge, indicating an estimated yearly energy cost of \$24 and 202 kWh yearly electricity use.

3. SETUP INSTRUCTIONS

3.1 Unpacking

- Remove all packaging materials, including the foam base and adhesive tape.
- Inspect the refrigerator for any damage during transit. If damaged, do not plug it in and contact customer service.

3.2 Placement

- Place the refrigerator on a firm, level surface away from direct sunlight and heat sources (e.g., stoves, heaters).
- Ensure there is at least 4 inches (10 cm) of space on the sides, back, and top for proper air circulation.
- The refrigerator is designed for tabletop installation.



KEEP COOLING ANYWHERE



Image: The Upstream Mini Fridge shown in different environments such as an apartment, office, kitchen, and dorm room, illustrating its versatile placement options.

3.3 Leveling

- Adjust the leveling legs at the bottom of the refrigerator to ensure it is stable and level. This helps reduce vibration and noise.



Image: A close-up view of the adjustable leveling leg on the Upstreman Mini Fridge, highlighting its design for stability.

3.4 Power Connection

- After placement, wait at least 2-4 hours before plugging the appliance into a 115V AC grounded electrical outlet. This allows the refrigerant to settle.

3.5 Door Reversal

The door orientation is reversible. If you need to change the door swing direction, refer to the detailed instructions in the included user manual for the specific steps and tools required.

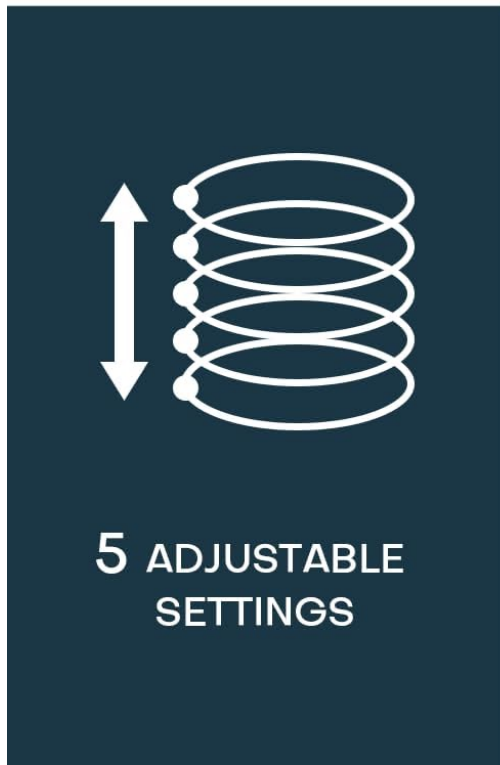


Image: A diagram illustrating the reversible door feature and adjustable settings of the Upstreman Mini Fridge.

Your browser does not support the video tag.

Video: A short video demonstrating the compact size and interior of the Upstreman Mini Fridge, including the freezer compartment and door storage. This video is a preview and is 10 seconds long.


4. OPERATING INSTRUCTIONS

4.1 Temperature Control

The refrigerator features an adjustable thermostat with 5 settings, ranging from 0 (Off) to 5 (Coldest). The recommended operating temperature range is 33.8°F to 46.4°F.

- Turn the thermostat dial to your desired setting. Higher numbers indicate colder temperatures.
- Setting 0 will turn the appliance off.
- Adjust the temperature based on the ambient room temperature and the amount of food stored.

5 TEMPERATURE SETTINGS

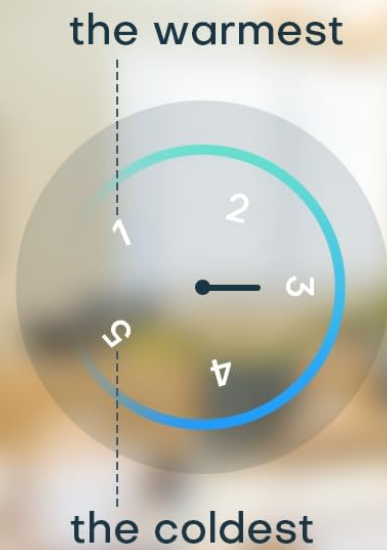

Drink



Fruit



Vegetable



Ice Cube

Image: The Upstream Mini Fridge illustrating its 5 adjustable temperature settings, ranging from the warmest to the coldest, and the internal temperature range of 33.8°F to 46.4°F.

4.2 Freezer Compartment

The mini fridge includes a compact freezer compartment suitable for making ice cubes and storing small frozen items. Note that it is not designed for long-term storage of ice cream or large quantities of frozen goods.

4.3 Shelf Adjustment

The interior shelves can be removed or adjusted to accommodate items of various sizes. Gently lift and pull the shelves out to reposition them.

5. MAINTENANCE

5.1 Cleaning

- **Interior:** Clean the interior regularly with a solution of mild detergent and warm water. Rinse thoroughly and dry with a soft cloth.
- **Exterior:** Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Door Gasket:** Keep the door gasket clean to ensure a proper seal and energy efficiency.

5.2 Defrosting

This refrigerator features a manual defrost system. Frost will accumulate on the freezer compartment walls. Defrost the unit when the frost layer is about 0.2 inches (5 mm) thick.

- Unplug the refrigerator from the power outlet.
- Remove all food items and place them in another cooler.
- Leave the door open to allow the frost to melt naturally. You can place a towel at the bottom to absorb water.
- Do not use sharp objects or heating devices to remove frost, as this can damage the cooling system.
- Once defrosted, clean and dry the interior before plugging it back in.

5.3 Energy Saving Tips

- Avoid placing the refrigerator near heat sources or in direct sunlight.
- Ensure proper ventilation around the unit.
- Do not open the door too frequently or for extended periods.
- Allow hot foods to cool to room temperature before placing them in the refrigerator.



Image: The Upstreman Mini Fridge highlighting its energy-saving feature, with an estimated daily cost of \$0.1.

6. TROUBLESHOOTING GUIDE

If you experience issues with your refrigerator, consult the table below for common problems and solutions. If the problem persists, contact customer support.

| Problem | Possible Cause | Solution |
|--------------------------------|--|--|
| Refrigerator does not operate. | Not plugged in; circuit breaker tripped; temperature control set to "0". | Ensure plug is secure; reset circuit breaker; set temperature control to a higher setting. |

| Problem | Possible Cause | Solution |
|---------------------------------|---|---|
| Temperature is not cold enough. | Door opened too frequently; large amount of warm food added; poor ventilation; temperature control set too low. | Minimize door openings; allow food to cool before storing; ensure adequate clearance; adjust temperature control to a colder setting. |
| Excessive noise. | Refrigerator not level; loose parts; unit touching a wall. | Adjust leveling legs; check for loose components; move unit away from walls. |
| Door does not close properly. | Gasket dirty or damaged; unit not level; shelves/items obstructing closure. | Clean or replace gasket; level the unit; rearrange contents. |



Image: The Upstreman Mini Fridge emphasizing its low noise operation at 38 dB, suitable for quiet environments like bedrooms.

7. SPECIFICATIONS

| Feature | Specification |
|--------------------------------|--------------------------|
| Brand | Upstreman |
| Model Number | FR17 |
| Product Dimensions (D x W x H) | 17.7"D x 19.3"W x 18.9"H |

| Feature | Specification |
|---------------------------|-----------------------|
| Capacity | 1.7 Cubic Feet |
| Fresh Food Capacity | 1.5 Cubic Feet |
| Freezer Capacity | 0.2 Cubic Feet |
| Color | White |
| Installation Type | Tabletop |
| Number of Doors | 1 |
| Defrost System | Manual |
| Voltage | 115 Volts (AC) |
| Annual Energy Consumption | 204 Kilowatt Hours |
| Refrigerant | R-600A |
| Item Weight | 25.08 Pounds |
| Door Orientation | Reversible |
| Included Components | 1.7 Cu.ft Mini Fridge |

8. WARRANTY AND SUPPORT

Upstreman offers a one-year quality and service warranty for this product. For any questions, concerns, or warranty claims, please contact Upstreman customer service. Refer to the contact information provided in your product packaging or on the official Upstreman website.

Your browser does not support the video tag.

Video: An official seller video titled "Learn About Upstreman Mini Fridge with Freezer," providing an overview of the product's features and benefits.