

## COOKTRON B0BGS7VL2B

# COOKTRON Portable 2-Burner Induction Cooktop with Removable Griddle

Model: B0BGS7VL2B | Brand: COOKTRON

## 1. SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance to ensure safe and efficient operation. Keep this manual for future reference.

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded outlet. Do not use if the power cord is damaged.
- **Surface Temperature:** The cooktop surface and griddle pan can remain hot after cooking. Allow to cool before touching or cleaning.
- **Cookware Compatibility:** Only use induction-compatible cookware. Incompatible cookware will result in an E0 error code and the unit will not heat.
- **Child Lock:** Utilize the child lock feature to prevent accidental operation.
- **Water Exposure:** Do not submerge the main induction cooktop unit in water. Clean only with a damp cloth. The griddle pan can be separated and washed.
- **Damage:** Do not use the appliance if the glass surface is cracked or damaged. Disconnect power immediately.
- **Ventilation:** Ensure proper ventilation around the unit during operation.

## 2. PRODUCT OVERVIEW

The COOKTRON Portable 2-Burner Induction Cooktop offers versatile cooking options with its 2-in-1 design, functioning as both a dual induction cooktop and a smokeless cast iron griddle grill. It features independent controls for each cooking zone.

### Components

- Main Induction Cooktop Unit (1800W total)
- Removable Cast Iron Griddle Pan

- Griddle Lid



Figure 2.1: Main unit with removable griddle pan and lid.

The main unit houses two induction burners, each with independent controls. The removable cast iron griddle pan fits securely over both burners, allowing for simultaneous grilling. A lid is provided for the griddle pan to enhance cooking and reduce splatter.

# 2-IN-1 INDUCTION COOKTOP & GRILL WITH 1800W HIGH POWER

Induction Cooker Induction Cooker  
and Cast Iron Grill Pan

BBQ Grill Cast Iron Grill Panfast  
Heating With No Oil Smoke



Figure 2.2: The cooktop functions as a 2-in-1 induction cooker and grill, powered by 1800W.

## 3. SETUP

1. Unpack all components from the packaging.
2. Place the main induction cooktop unit on a stable, flat, and heat-resistant surface. Ensure adequate space for ventilation around the unit.
3. If using the griddle, place the removable cast iron griddle pan securely onto the cooktop. It is designed to fit over both induction zones.
4. Plug the power cord into a standard 120V electrical outlet.

## 4. OPERATING INSTRUCTIONS

### 4.1 Basic Operation

- **Power On/Off:** Press the power button to turn the unit on or off.
- **Cookware Detection:** The unit will display an 'E0' error code if no compatible cookware is placed

on the burner within 30 seconds of activation, or if incompatible cookware is used. The burners will not heat until compatible cookware is detected.

- **Child Lock:** Press and hold the child lock button for 3 seconds to lock or unlock the control panel.

## 4.2 Temperature and Power Settings

The cooktop features independent controls for each burner, allowing for different power or temperature settings simultaneously.

- **Power Levels:** Choose from 9 power levels, ranging from 400W to 1100W (in 100W increments).
- **Temperature Levels:** Select from 5 temperature levels, ranging from 248°F to 410°F (in 36°F increments).
- **Adjustment:** Use the dedicated knobs for each burner to adjust power or temperature settings.
- **Timer:** Use the timer function to set cooking durations. The unit will automatically shut off once the timer expires.



Figure 4.1: Control panel showing temperature and power settings for each burner.

## 4.3 Using the Removable Griddle Pan

The cast iron griddle provides excellent heat retention and distribution, ideal for frying pancakes, sausages, steaks, and eggs.

- Place the griddle pan directly onto the induction cooktop. Ensure it is properly seated over both

heating zones.

- Use the independent controls to set the desired temperature or power for grilling.
- The griddle is designed to be smokeless, reducing smoke by 95% for a healthier cooking environment.
- Use the provided lid to cover the griddle during cooking to maintain heat and reduce splatter.



Figure 4.2: The smokeless griddle pan reduces oil smoke during cooking.

#### 4.4 Using as a Dual Induction Cooktop

Remove the griddle pan to use the unit as a standard dual induction cooktop with your own compatible pots and pans.

- Place induction-compatible cookware directly onto the marked cooking zones.
- Adjust power or temperature settings independently for each zone using the respective knobs.



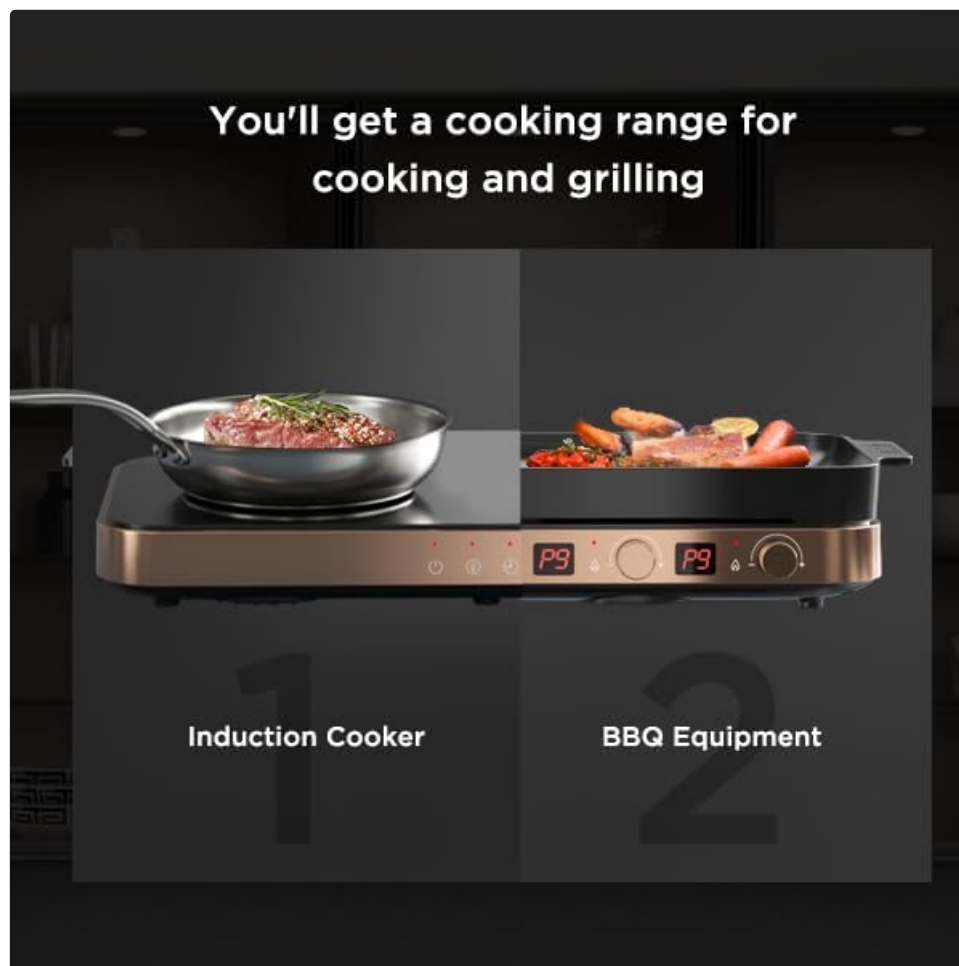


Figure 4.3: The unit can be used as an induction cooker or with the BBQ griddle.

## 5. COOKWARE COMPATIBILITY

Induction cooktops require cookware with magnetic properties. To test if your cookware is compatible, place a magnet on the bottom. If the magnet sticks, the cookware is compatible.

- **Compatible Materials:** Steel cast iron, enameled cast iron, magnetic stainless steel.
- **Incompatible Materials:** Glass, ceramic, copper, aluminum (unless specifically designed for induction with a magnetic base).

# Choosing the Right Cookware for Induction



Figure 5.1: Visual guide for choosing compatible and incompatible cookware for induction.

## 6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your cooktop.

- **Cooktop Unit:** The high-quality smooth glass surface can be easily cleaned with a damp cloth. Do not submerge the main unit in water or place it in a dishwasher.
- **Griddle Pan:** The removable cast iron griddle pan has a non-toxic, non-stick coating. It can be washed with soap and water. Allow the griddle pan to cool completely before handling or cleaning to prevent burns.
- **Storage:** Ensure the unit is clean and dry before storing.



Figure 6.1: The smooth cooktop surface is easy to clean with a damp cloth.

## 7. TROUBLESHOOTING

- **E0 Error Code:** This indicates that no compatible cookware is detected on the burner. Place an induction-compatible pot or pan on the cooking zone.
- **E2 Error Code:** This typically indicates internal overheating. Disconnect the unit from power and allow it to cool down before attempting to use it again. Ensure proper ventilation.
- **Unit Not Heating:** Verify that the unit is plugged in, powered on, and compatible cookware is correctly placed on the burner. Check for any error codes displayed.

## 8. SPECIFICATIONS

- **Brand:** COOKTRON
- **Model:** B0BGS7VL2B
- **Power:** 1800 Watts (total)
- **Heating Elements:** 2 (Induction Burners)
- **Controls Type:** Knob
- **Material:** Cast Iron (Griddle), Glass (Cooktop Surface)




- **Product Dimensions:** 21.5"D x 11.6"W x 8.46"H
- **Item Weight:** 14.42 pounds
- **Special Features:** Electric, Temperature Control, Child Lock



Figure 8.1: Detailed dimensions of the cooktop and griddle components.

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product. Contact the manufacturer directly for assistance with any issues or inquiries.

<p><b>Beginner Guidance:</b> How to enjoy your induction cooker with some useful tips</p> <p>1. Please read the safety instructions carefully in this user manual. For safety, the cooker will be automatically shut off when the power has been on for 2 hours or continuous use for 2 hours or more. or continuous use for 2 hours or more. or continuous use for 2 hours or more.</p> <p>2. Please read the safety instructions carefully in this user manual. For safety, the cooker will be automatically shut off when the power has been on for 2 hours or continuous use for 2 hours or more. or continuous use for 2 hours or more. or continuous use for 2 hours or more.</p> <p>3. Please read the safety instructions carefully in this user manual. For safety, the cooker will be automatically shut off when the power has been on for 2 hours or continuous use for 2 hours or more. or continuous use for 2 hours or more. or continuous use for 2 hours or more.</p> <p>4. Please read the safety instructions carefully in this user manual. For safety, the cooker will be automatically shut off when the power has been on for 2 hours or continuous use for 2 hours or more. or continuous use for 2 hours or more. or continuous use for 2 hours or more.</p> <p>5. Please read the safety instructions carefully in this user manual. For safety, the cooker will be automatically shut off when the power has been on for 2 hours or continuous use for 2 hours or more. or continuous use for 2 hours or more. or continuous use for 2 hours or more.</p>	<p><a href="#">COOKTRON Induction Cooker Beginner's Guide: Tips for Safe and Efficient Use</a></p> <p>Comprehensive beginner's guide for COOKTRON induction cooktops, covering cookware compatibility, power requirements, fan operation, safety warnings, and usage tips for models like AAMUS-CT-FS-IC312 and AAMUS-CT-FS-IC321-3.</p>
<p><b>COOKTRON®</b></p> <p>User Manual Single Induction Cooker</p>  <p>Model: FS-IC321-3</p> <p>Thank you for purchasing this product. Please read the manual carefully before using and keep it for future reference.</p>	<p><a href="#">COOKTRON FS-IC321-3 Single Induction Cooker User Manual</a></p> <p>User manual for the COOKTRON FS-IC321-3 Single Induction Cooker, providing instructions on operation, features, safety precautions, troubleshooting, and maintenance.</p>