

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Teka](#) /

› [Teka Dishwasher Door Latch Replacement Part LP7 840 - Installation and Maintenance Manual](#)

Teka LP7 840 BLANC, LP7 400 BLANC, LP7 811 INOX, MLP 800 INOX (Compatible Dishwasher Models); Part Number: 81782909 (Original)

Teka Dishwasher Door Latch Replacement Part LP7 840 - Installation and Maintenance Manual

1. INTRODUCTION

This manual provides essential information for the installation, maintenance, and troubleshooting of the original Teka dishwasher door latch replacement part. This component is crucial for the proper and safe operation of your dishwasher, ensuring the door remains securely closed during cycles. Please read these instructions carefully before proceeding with any installation or maintenance.

2. PRODUCT OVERVIEW

The product is an original replacement door latch mechanism for specific Teka dishwasher models. It is designed to restore the secure closing function of your dishwasher door, which is vital for preventing leaks and ensuring efficient operation. The latch assembly typically consists of a plastic housing, a spring mechanism, and a hook or catch that engages with the dishwasher frame.

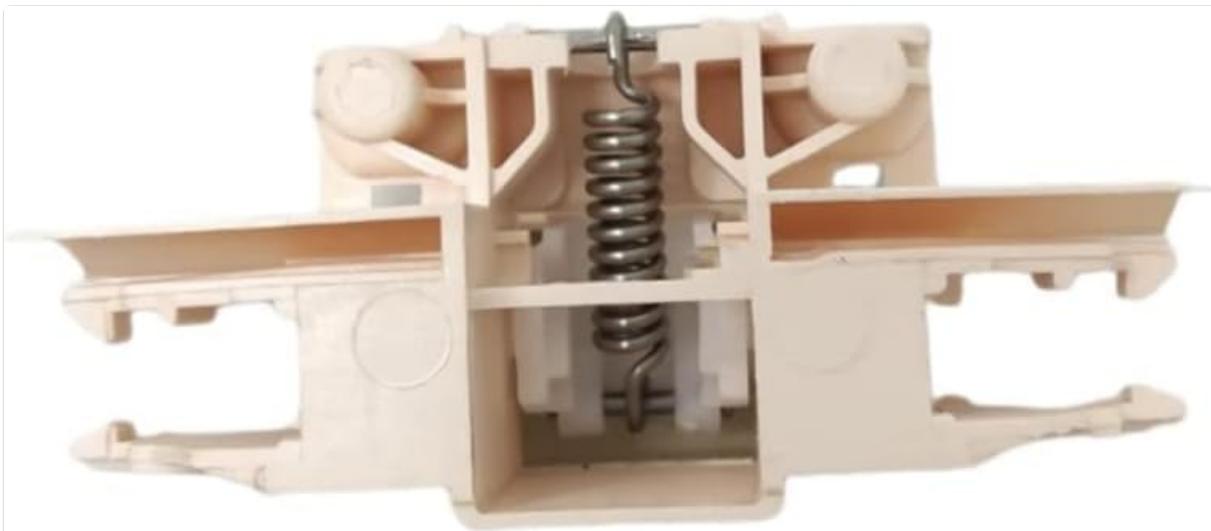


Figure 1: Image of the Teka dishwasher door latch replacement part. This component is a beige-colored plastic assembly featuring an internal metal spring and hook mechanism, designed to secure the dishwasher door during operation.

3. COMPATIBILITY

This original replacement door latch (Original Code: 81782909, Manufacturer Reference: 218780027) is compatible with the following Teka dishwasher models:

- LP7 840 BLANC
- LP7 400 BLANC
- LP7 811 INOX
- MLP 800 INOX

Always verify your dishwasher's model number and the original part number to ensure correct compatibility before purchasing and installing this replacement part.

4. SAFETY INFORMATION

Before attempting any repair or replacement, observe the following safety precautions:

- **Disconnect Power:** Always unplug the dishwasher from the electrical outlet or turn off the circuit breaker before beginning any work.
- **Water Supply:** Turn off the water supply to the dishwasher.
- **Personal Protective Equipment:** Wear appropriate safety gear, such as gloves, to protect your hands.
- **Professional Assistance:** If you are unsure about any step or lack the necessary tools/experience, it is recommended to consult a qualified appliance technician.

5. INSTALLATION INSTRUCTIONS

The following steps provide a general guide for replacing a dishwasher door latch. Specific procedures may vary slightly depending on your exact dishwasher model. Refer to your dishwasher's service manual for detailed instructions if available.

1. **Prepare the Dishwasher:** Ensure the dishwasher is disconnected from power and water supply. Open the dishwasher door.
2. **Access the Latch:** The door latch is typically located at the top center of the dishwasher door. You may need to remove the inner door panel to access the latch mechanism. This usually involves removing screws around the perimeter of the inner door panel.
3. **Disconnect Wiring:** Carefully disconnect any electrical wires connected to the old latch mechanism. Note their positions or take a photo for reassembly.
4. **Remove Old Latch:** Unscrew and remove the old door latch assembly from its mounting.
5. **Install New Latch:** Position the new replacement latch in the same location as the old one. Secure it with the screws.
6. **Reconnect Wiring:** Reconnect the electrical wires to the new latch, ensuring they are securely attached.
7. **Reassemble Door:** Reattach the inner door panel, ensuring all screws are tightened properly.
8. **Test Operation:** Close the dishwasher door to ensure the new latch engages correctly. Reconnect power and water, then run a short test cycle to check for proper door closure and absence of leaks.

6. MAINTENANCE

To ensure the longevity and proper function of your dishwasher door latch, consider the following maintenance tips:

- **Regular Cleaning:** Periodically inspect the latch area for food debris or residue. Clean with a damp cloth and mild detergent if necessary.
- **Avoid Force:** Do not force the dishwasher door open or closed. If it's sticking, investigate the cause rather than applying excessive force, which can damage the latch.
- **Inspect for Wear:** Occasionally check the latch mechanism for signs of wear, cracks, or loose components. Address any issues promptly.

7. TROUBLESHOOTING

If you experience issues with your dishwasher door latch, consult the table below for common problems and potential solutions:


Problem	Possible Cause	Solution
Door does not latch securely	Misalignment, worn latch, or obstruction	Check for obstructions. Inspect latch for damage. Adjust door alignment if possible. Replace latch if worn.
Dishwasher does not start	Door not fully closed/latched (safety switch)	Ensure door is firmly closed until the latch engages. Inspect latch switch for proper function.
Door opens during cycle	Faulty latch mechanism	The latch is likely failing and requires replacement.

8. SPECIFICATIONS

Specification	Detail
Product Type	Dishwasher Door Latch Replacement Part
Brand (Dishwasher)	Teka
Original Code	81782909
Manufacturer Reference	218780027
Compatible Models	LP7 840 BLANC, LP7 400 BLANC, LP7 811 INOX, MLP 800 INOX
Manufacturer (Part Supplier)	ALL4SALE

9. WARRANTY AND SUPPORT

Information regarding specific warranty terms for this replacement part is not provided in the product details. For warranty claims or technical support, please contact the seller, ALL4SALE, or refer to the documentation that accompanied your original purchase. Availability of spare parts information is also not explicitly stated, but as this is a replacement part, it is generally available through the supplier.

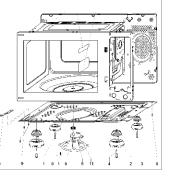 <p>INSTRUKCJA OBSŁUGI Piekarnik HLB, HLB P PL www.teka.com</p>	<p>Teka HLB & HLB P Ovens: User Manual and Operation Guide</p> <p>Comprehensive user manual for Teka HLB and HLB P ovens, covering operation, functions, cleaning (Hydroclean, Pyrolytic), safety, and energy efficiency. Includes detailed instructions for control panel, programming, and maintenance.</p>
 <p>LAVAJILLAS TEKA Manual de instrucciones DW8 57 FI 12 cubiertos</p>	<p>Teka DW8 57 FI Dishwasher User Manual</p> <p>Comprehensive user manual for the Teka DW8 57 FI dishwasher, covering installation, operation, maintenance, troubleshooting, and technical specifications. Includes safety instructions, quick start guide, program details, and error code explanations.</p>
 <p>User Manual DFS 76850 SS DFS 76850 WH EN www.teka.com</p>	<p>Teka DFS 76850 SS/WH Dishwasher User Manual</p> <p>Comprehensive user manual for the Teka DFS 76850 SS and DFS 76850 WH dishwashers, covering installation, operation, maintenance, safety, and troubleshooting for optimal kitchen appliance performance.</p>
 <p>TEKA TMW.18BI Exploded Diagram and Parts List</p>	<p>Teka TMW.18BI Microwave Exploded Diagram and Parts List</p> <p>Detailed exploded view and parts identification for the Teka TMW.18BI microwave oven, providing a visual guide to its components for service and repair purposes.</p>
 <p>User Manual LP8 810 EU/LP8 810 EU SS ES www.teka.com</p>	<p>Manual de Usuario TEKA LP8 810 EU/LP8 810 EU SS: Guía Completa de Uso y Mantenimiento</p> <p>Descubra cómo utilizar y mantener su lavavajillas TEKA LP8 810 EU/LP8 810 EU SS con este manual de usuario detallado. Incluye instrucciones de seguridad, funcionamiento, instalación y solución de problemas.</p>



[TEKA Dishwasher User Manual: DFI 76950, 46700, 46900, 46950, 46950 XL](#)

Comprehensive user manual for TEKA dishwashers (DFI 76950, DFI 46700, DFI 46900, DFI 46950, DFI 46950 XL) covering installation, operation, safety, maintenance, and troubleshooting.