#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Cecotec /
- > Cecotec DrumFit WayHome 1600 Obelia Ultraflex Pro Treadmill User Manual

# Cecotec DrumFit WayHome 1600 Obelia Ultraflex Pro

# Cecotec DrumFit WayHome 1600 Obelia Ultraflex Pro Treadmill User Manual

Model: DrumFit WayHome 1600 Obelia Ultraflex Pro (07081)

## 1. Introduction

Thank you for choosing the Cecotec DrumFit WayHome 1600 Obelia Ultraflex Pro Treadmill. This manual provides essential information for the safe assembly, operation, and maintenance of your new fitness equipment. Please read all instructions carefully before use to ensure proper function and to prevent injury.

#### 2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- · Read all instructions in this manual before operating the treadmill.
- Keep children and pets away from the treadmill during operation.
- Place the treadmill on a flat, stable surface with adequate clearance around it.
- · Wear appropriate exercise clothing and athletic shoes. Avoid loose clothing that could get caught.
- If you experience pain, dizziness, or shortness of breath, stop exercising immediately and consult a physician.
- Do not use the treadmill if it is damaged or malfunctioning.
- Unplug the treadmill from the power outlet when not in use or before cleaning and maintenance.

#### 3. Product Overview and Features

The Cecotec DrumFit WayHome 1600 Obelia Ultraflex Pro is a foldable treadmill designed for home use, offering a range of features for effective cardiovascular training.

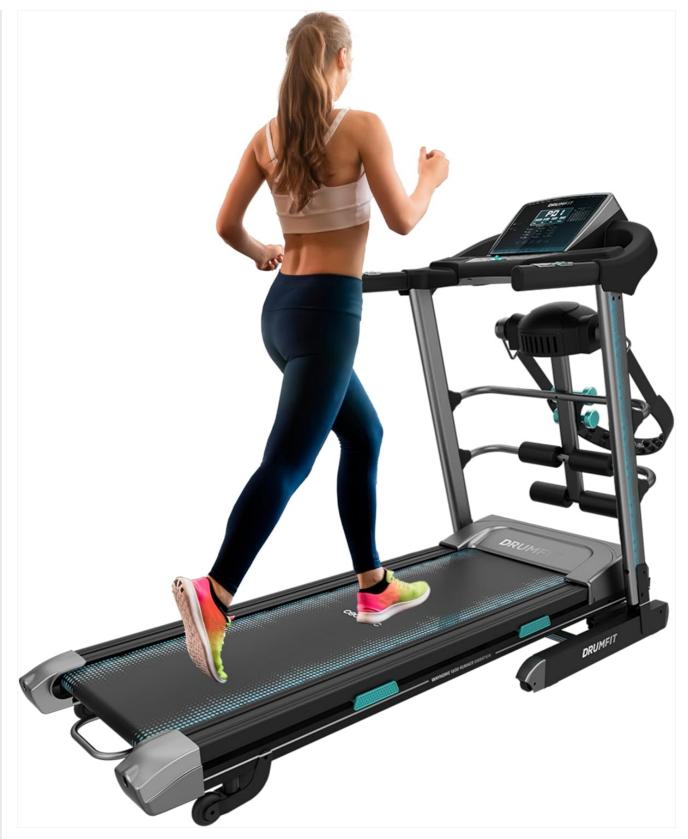


Image 3.1: Cecotec DrumFit WayHome 1600 Obelia Ultraflex Pro Treadmill in use.

# **Key Features:**

- Powerful Motor: Equipped with a 1500 W / 2 CV motor for consistent performance.
- Adjustable Speed: Speed range from 1 Km/h up to 16 Km/h.
- Automatic Tilt System: Motorized incline system simulating real inclines up to 15%.
- Spacious Running Surface: A generous 130 x 42 cm running area for comfortable workouts.
- UltraFlex System: Advanced cushioning system with 10 elastomers to reduce impact.
- Control Panel with LCD Display: Shows speed, time, distance, calories consumed, pulse, and scan function.

Includes mobile and tablet support.

- Training System: Features 12 predefined programs and 4 preset operating modes (speed/incline).
- Integrated Accessories: Includes a FatSlim vibrator massage belt, a set of dumbbells, bottle holder, USB charging connector, speakers, and tablet support.
- Functional Exercise Support: A support with pads for performing additional functional exercises.

## 4. SETUP AND ASSEMBLY

The treadmill is designed for straightforward assembly. All necessary tools are included.

# **Assembly Steps:**

- 1. Unpack all components and ensure all parts are present according to the packing list.
- 2. Place the main frame on a clear, level surface.
- 3. Attach the uprights and console assembly to the main frame using the provided screws and tools.
- 4. Connect any necessary cables as indicated in the assembly diagram (refer to the separate assembly guide if provided).
- 5. Secure the handrails and any additional accessories like the massage belt support.
- 6. Ensure all screws are tightened securely before first use.

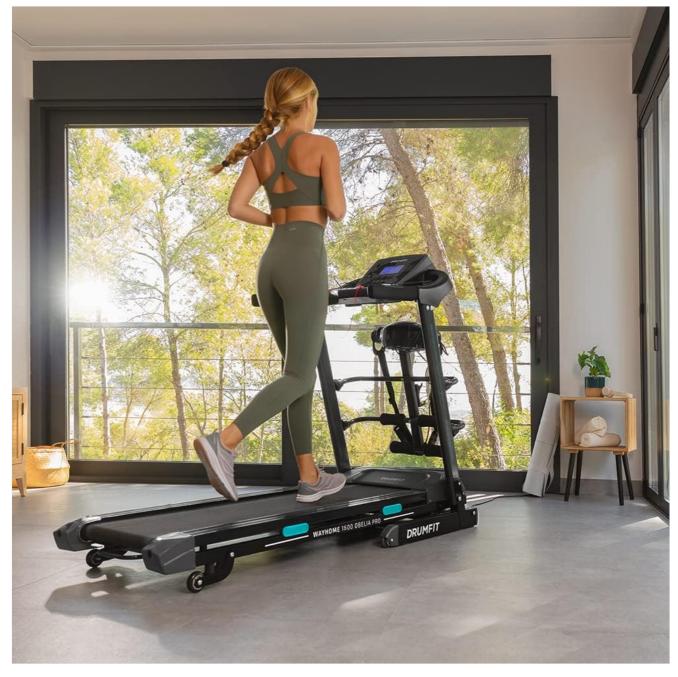


Image 4.1: Treadmill in a home environment, demonstrating its compact design.

## 5. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and its functions before starting your workout.

## **Control Panel Functions:**

- Start/Stop: Initiates or pauses the treadmill belt.
- **Speed** +/-: Adjusts the running speed.
- Incline +/-: Adjusts the motorized incline level.
- Program (P): Selects from 12 predefined workout programs.
- Mode (M): Switches between 4 preset operating modes (e.g., manual, target time, target distance, target calories).
- Scan: Cycles through display metrics (speed, time, distance, calories, pulse).
- Pulse Sensors: Integrated into the handrails to monitor heart rate.

# **Using the Massage Belt:**

The FatSlim vibrator massage belt can be attached to the designated support for additional exercise benefits. Ensure the treadmill is stable and you are holding the handles if using the massage belt during treadmill operation.

## 6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your treadmill.

- Cleaning: Wipe down the treadmill surfaces with a damp cloth after each use. Avoid abrasive cleaners.
- **Lubrication:** Periodically lubricate the running belt according to the instructions provided with the lubricant (usually every few months depending on usage).
- **Belt Tension and Alignment:** Check the running belt tension and alignment regularly. Adjust if necessary using the provided tools and instructions.
- **Storage:** When not in use, the treadmill can be folded for compact storage. Ensure it is securely locked in the folded position.

## 7. TROUBLESHOOTING

If you encounter any issues with your treadmill, refer to the following common troubleshooting steps.

Problem	Possible Cause	Solution
Treadmill does not start	Power cord not plugged in; Safety key not in place; Circuit breaker tripped.	Ensure power cord is securely plugged in; Insert safety key; Reset circuit breaker.
Running belt slips or hesitates	Belt too loose; Belt needs lubrication.	Adjust belt tension; Lubricate running belt.
Unusual noise during operation	Loose components; Motor or belt issue.	Check and tighten all visible screws; If noise persists, contact customer support.
Incline not working	Incline motor issue; Cable connection.	Check cable connections; If issue persists, contact customer support.

### 8. Specifications

• Brand: Cecotec

• Model Number: 07081

• **Product Dimensions (Unfolded):** Approximately 176.3 cm (Length) x 78 cm (Width) x 28 cm (Height, folded dimensions are different)

Product Weight: 62 kg Material: Carbon steel

• Maximum Speed: 16 Km/h

• Motor Power: 1500 W / 2 CV

• Running Surface: 130 x 42 cm

Incline System: Motorized, up to 15%
Special Features: Adjustable, Foldable

## 9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Cecotec website. Keep your proof of purchase for any warranty claims.

[gen\_bottom\_of\_page]

### Related Documents - DrumFit WayHome 1600 Obelia Ultraflex Pro



#### Cecotec Drumfit Wayhome 1600 Runner Sprint Treadmill User Manual

Comprehensive user manual for the Cecotec Drumfit Wayhome 1600 Runner Sprint foldable treadmill, covering safety instructions, assembly, operation, maintenance, and troubleshooting.



#### Cecotec DrumFit WayHome 1800 Runner Sprint Treadmill User Manual

Comprehensive user manual for the Cecotec DrumFit WayHome 1800 Runner Sprint foldable treadmill, covering safety instructions, assembly, operation, maintenance, and technical specifications.



#### Manual de Instrucciones Cecotec DrumFit WayHome 1500 Sprint Cinta de Correr

Manual completo de instrucciones para la cinta de correr plegable Cecotec DrumFit WayHome 1500 Sprint. Incluye guía de montaje, operación, mantenimiento, seguridad y especificaciones técnicas.



#### Manual de Instrucciones Cecotec Drumfit AB Fit Pro: Guía Completa

Descubre el manual de instrucciones completo para la rueda abdominal Cecotec Drumfit AB Fit Pro. Aprende a montar, usar de forma segura y mantener tu equipo de fitness para obtener resultados óptimos en tu entrenamiento central.



#### Cecotec Drumfit HomeGym 2000 Double: Manual de Instrucciones y Guía de Ejercicio

Manual completo para el Cecotec Drumfit HomeGym 2000 Double. Incluye instrucciones de montaje, seguridad, mantenimiento y ejercicios. Ideal para entrenamiento de fuerza en casa.



# Manual de Instrucciones Cecotec DrumFit Indoor 15000 Magnetic Connected

Descubra cómo montar, usar y mantener su bicicleta indoor Cecotec DrumFit Indoor 15000 Magnetic Connected con este manual de instrucciones completo. Incluye especificaciones técnicas, consejos de seguridad y conectividad Bluetooth.