

Manuals.plus /

› ICE-WATCH /

› Ice-Watch ICE digit Digital Watch User Manual

ICE-WATCH 021275

Ice-Watch ICE digit Digital Watch User Manual

Model: 021275
Brand: ICE-WATCH

INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your Ice-Watch ICE digit digital watch, model 021275. Designed for durability and ease of use, this watch features a lightweight silicone case and strap, and is water-resistant up to 10 ATM, making it suitable for various activities including swimming and showering.





Figure 1: Front view of the Ice-Watch ICE digit digital watch. This image displays the watch's digital display, the pink silicone strap, and the four control buttons located on the sides of the watch face.

PRODUCT FEATURES

- **Compact Design:** Small 35mm silicone case with a comfortable plastic strap.
- **Water Resistance:** Water-resistant up to 10 ATM (100 meters), suitable for immersion and water sports like swimming, but not for diving.
- **Digital Display:** Clear digital time display.
- **Included Accessories:** Comes with an instruction manual and a presentation box.
- **Collection:** Part of the ICE digit collection.

SETUP

Initial Activation

Your Ice-Watch ICE digit watch is typically ready for use upon receipt. If the display is blank, press any button to activate it. The watch comes with a pre-installed battery.

Setting Time and Date

1. Press the **MODE** button (bottom left) repeatedly until the time display starts flashing, indicating it is in setting mode.

2. Use the **RESET** button (top left) to select the hour, minute, or other setting parameters (e.g., 12/24-hour format).
3. Use the **ST/STP** button (top right) to adjust the selected value (e.g., increment the hour or minute).
4. Continue pressing **RESET** and **ST/STP** to set the year, month, and day.
5. Once all settings are correct, press the **MODE** button again to exit the setting mode and return to the normal time display.



Figure 2: Angled view of the watch, highlighting the button layout. The buttons are labeled **MODE**, **RESET**, **ST/STP**, and **LIGHT**, which are used for various functions including time setting.

OPERATING INSTRUCTIONS

Button Functions

- **MODE Button (Bottom Left):** Cycles through different display modes: Time, Date, Alarm, Stopwatch. Also used to enter and exit setting modes.
- **RESET Button (Top Left):** Used to reset the stopwatch, select parameters in setting mode, or adjust certain values.
- **ST/STP Button (Top Right):** Used to start/stop the stopwatch, or increment values in setting mode.

- **LIGHT Button (Bottom Right):** Activates the backlight for a few seconds to illuminate the display in low light conditions.

Using the Stopwatch

1. Press the **MODE** button until the stopwatch display appears (usually "00:00:00").
2. Press the **ST/STP** button to start the stopwatch.
3. Press **ST/STP** again to pause the stopwatch.
4. Press the **RESET** button to reset the stopwatch to zero.
5. Press the **MODE** button to return to the time display.

Setting the Alarm

1. Press the **MODE** button until the alarm display appears (e.g., "AL 0:00").
2. Press the **RESET** button to select the hour or minute to set.
3. Use the **ST/STP** button to adjust the selected value.
4. Press **MODE** to confirm and exit the alarm setting.
5. To turn the alarm on/off, while in alarm mode, press the **ST/STP** button. An alarm icon will appear/disappear on the display.

MAINTENANCE

Cleaning Your Watch

To clean your Ice-Watch ICE digit, use a soft, damp cloth. For stubborn dirt, a mild soap solution can be used. Rinse thoroughly with clean water and dry with a soft, lint-free cloth. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the watch's case and strap.

Water Resistance (10 ATM)

Your watch is water-resistant up to 10 ATM (100 meters). This means it is suitable for showering, bathing, swimming, and snorkeling. It is not designed for high-impact water sports or diving. To maintain water resistance, ensure all buttons are not pressed while the watch is submerged in water. Avoid exposing the watch to extreme temperature changes, as this can affect the seals.



Figure 3: Side profile of the watch. This view illustrates the watch's slim design and the robust construction of the silicone case and strap, contributing to its water resistance.

Battery Replacement

The watch is powered by a Lithium metal battery. When the display becomes dim or stops functioning, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance. Attempting to replace the battery yourself may void the warranty and compromise the watch's water resistance.



Figure 4: Rear view of the watch. The stainless steel case back is visible, engraved with the model reference (021275) and water resistance rating (100M), indicating its durability.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or depleted battery.	Replace the battery (recommended by a professional).
Time is incorrect.	Time not set correctly or accidental button press.	Refer to "Setting Time and Date" section to re-adjust.
Buttons are unresponsive.	Temporary software glitch or low battery.	Try pressing all buttons firmly. If issue persists, consider battery replacement.
Water inside the display.	Compromised water resistance due to impact, age, or improper battery replacement.	Immediately take the watch to a professional watch repair service. Do not attempt to dry it yourself.

SPECIFICATIONS

Feature	Detail
Model Number	021275
Case Material	Silicone
Strap Material	Plastic
Case Dimensions	Small (35mm)
Water Resistance	10 ATM (100 meters)
Battery Type	1 Lithium metal (included)
Package Dimensions	8.7 x 7.2 x 7.2 cm; 28 grams
Manufacturer	Ice-Watch

WARRANTY AND SUPPORT

Your Ice-Watch ICE digit digital watch is covered by the manufacturer's standard warranty against defects in materials and workmanship. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or warranty claims, please contact the authorized Ice-Watch service center or the retailer from whom you purchased the watch. Keep your proof of purchase for warranty validation.

For more information, you may visit the official Ice-Watch website or contact their customer service department.