

ICE-WATCH 021277

Ice-Watch ICE Digit Gold Metallic Watch - Model 021277 User Manual

Comprehensive instructions for setup, operation, and maintenance.

[Introduction](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. INTRODUCTION

This manual provides instructions for the Ice-Watch ICE Digit Gold Metallic watch, model 021277. This digital watch features a silicone case and plastic strap, a digital display, chronograph, backlight, and is water-resistant up to 10 ATM.



Image 1.1: Front view of the Ice-Watch ICE Digit Gold Metallic watch, model 021277. The digital display shows the time and day of the week. Buttons are visible on the sides for various functions.

2. SETUP

2.1 Initial Power On

The watch comes with a pre-installed LR44 battery. If the display is blank, press any button to activate it. If the display remains blank, the battery may need replacement (refer to Section 4.2).

2.2 Setting Time and Date

The watch typically has four buttons: MODE, RESET, ST/STP, and LIGHT. The exact button functions for setting may vary slightly, but generally follow these steps:

1. Press the **MODE** button repeatedly until the time setting mode is activated. This is usually indicated by flashing digits (hours or minutes).
2. Use the **RESET** or **ST/STP** button to adjust the flashing digits (increase or decrease the value).
3. Press **MODE** again to cycle through hours, minutes, year, month, and day settings.
4. Repeat step 2 to set each value.
5. Once all settings are correct, press **MODE** to exit the setting mode and return to the normal time display.



Image 2.1: Side view of the watch, highlighting the buttons used for setting time and accessing functions.

3. OPERATION

3.1 Time Display

In normal mode, the watch displays the current time (hours, minutes, seconds) and the day of the week. Some models may also show the date.

3.2 Chronograph (Stopwatch) Function

To use the chronograph:

1. Press the **MODE** button until the chronograph display appears (usually showing "00:00:00").
2. Press the **ST/STP** button to start the stopwatch.
3. Press **ST/STP** again to pause the stopwatch.
4. To resume, press **ST/STP**.
5. To reset the stopwatch to zero, press the **RESET** button while the stopwatch is paused.
6. Press **MODE** to return to the normal time display.

3.3 Backlight Function

To illuminate the display in low-light conditions, press the **LIGHT** button. The backlight will typically stay on for a few seconds.

3.4 Water Resistance (10 ATM)

This watch is water-resistant up to 10 ATM (100 meters). This means it is suitable for swimming, showering, and water sports. It is **not** suitable for scuba diving. Avoid operating buttons while the watch is submerged to prevent water ingress.

4. MAINTENANCE

4.1 Cleaning

Clean the watch regularly with a soft, damp cloth. For the silicone strap, mild soap and water can be used. Avoid harsh chemicals or abrasive materials that could damage the watch or strap.

4.2 Battery Replacement

The watch uses one LR44 battery. When the display becomes dim or stops functioning, the battery may need replacement. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and maintain water resistance. Attempting to replace the battery yourself may void the warranty and compromise water resistance.



Image 4.1: Rear view of the watch, showing the stainless steel caseback where the battery compartment is located.

4.3 Water Resistance Care

To maintain the watch's water resistance, ensure the crown (if present, though not applicable for this digital model) and buttons are not operated while the watch is wet or submerged. Avoid exposing the watch to

extreme temperature changes, which can affect the seals.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or depleted battery.	Replace the LR44 battery (refer to Section 4.2).
Time/Date cannot be set.	Incorrect button sequence or watch is in another mode.	Ensure you are in the correct setting mode by pressing the MODE button. Refer to Section 2.2.
Buttons are unresponsive.	Temporary software glitch or low battery.	Try pressing all buttons firmly. If unresponsive, consider battery replacement.
Water inside the watch.	Seals compromised or buttons operated underwater.	Immediately take the watch to a professional watch repair service. Do not attempt to dry it yourself.

6. SPECIFICATIONS

- **Model Number:** 021277
- **Display Type:** Digital
- **Movement Type:** Quartz
- **Case Material:** Silicone
- **Case Diameter:** 35 Millimeters (Small)
- **Case Thickness:** 10 Millimeters
- **Band Material:** Plastic
- **Band Width:** 20 Millimeters
- **Clasp Type:** Simple Deployant Clasp (Boucle)
- **Dial Window Material:** Mineral
- **Water Resistance Depth:** 100 Meters (10 ATM)
- **Special Features:** Chronograph, Backlight
- **Power Source:** Battery Powered (1 x LR44, included)
- **Item Weight:** 79 Grams
- **Country of Origin:** China

7. WARRANTY & SUPPORT

7.1 Warranty Information

Warranty details for your Ice-Watch ICE Digit Gold Metallic watch are typically provided with the product packaging or can be found on the official Ice-Watch website. Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For further assistance, technical support, or inquiries regarding your watch, please visit the official Ice-Watch website or contact their customer service department. You can find contact information on their website: www.ice-watch.com

