

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ICE-WATCH](#) /

› [Ice-Watch ICE Digit Navy Yellow Digital Watch User Manual](#)

ICE-WATCH 021274

ICE-WATCH ICE Digit Navy Yellow Digital Watch User Manual

Model: 021274

Brand: ICE-WATCH

INTRODUCTION

Welcome to the user manual for your new Ice-Watch ICE Digit Navy Yellow digital watch. This watch is designed for ease of use and durability, featuring a digital time display and a comfortable silicone strap. It is suitable for daily wear, including activities involving water, thanks to its robust water resistance. This manual provides essential information on setting up, operating, maintaining, and troubleshooting your watch.

PRODUCT OVERVIEW



Image 1: Front View. This image displays the front of the Ice-Watch ICE Digit Navy Yellow. It features a blue case and strap with a bright yellow inner bezel.

surrounding the digital display. The display shows the time, day, and a small icon indicating an active alarm. Buttons labeled 'RESET', 'MODE', 'ST/STP', and 'LIGHT' are visible around the bezel.



Image 2: Side View (Strap). This image shows the watch from a slight angle, highlighting the blue silicone strap and the yellow buckle. The strap has multiple holes for adjustment and a textured surface. The digital display is visible, showing 'WE' for Wednesday and the time '12:00'.



Image 3: Side Profile View. This image provides a direct side view of the watch case, emphasizing its slim profile. Two yellow control buttons are visible on the left side of the watch case, corresponding to the 'MODE' and 'RESET' functions.



Image 4: Back View. This image shows the stainless steel case back of the watch. Engravings include 'STAINLESS STEEL CASEBACK', 'WWW.ICE-WATCH.COM', 'REF: 021274', 'ICE WATCH', 'Made in PRC/China', and '100M', indicating its water resistance.

Key Features:

- Digital time display for clear readability.
- Durable silicone case and strap for comfort and resilience.
- Water resistance up to 10 ATM (100 meters), suitable for showering and swimming.
- Features include time, date, alarm, stopwatch, and backlight.
- Designed for children, combining lightness and softness.

SETUP

Initial Time and Date Setting:

1. **Activate the Watch:** If the display is off, press any button to activate it.
2. **Enter Setting Mode:** Press the **MODE** button repeatedly until the time setting (e.g., hours flashing) is displayed.
3. **Adjust Values:** Use the **RESET** button to increase the flashing value (hours, minutes, year, month, day).
4. **Navigate Settings:** Press the **MODE** button to move to the next setting field (e.g., from hours to minutes).
5. **Exit Setting Mode:** Once all settings are adjusted, press the **MODE** button again to return to the normal time display.

OPERATING INSTRUCTIONS

Button Functions:

- **MODE Button:** Cycles through different display modes (Time, Date, Alarm, Stopwatch). Also used to navigate between setting fields.
- **RESET Button:** Used to adjust values when in setting mode. In stopwatch mode, it resets the timer.

- **ST/STP Button:** (Start/Stop) Used to start and stop the stopwatch function.
- **LIGHT Button:** Activates the backlight for a few seconds to illuminate the display in low-light conditions.

Using the Stopwatch:

1. Press the **MODE** button until the stopwatch display appears (usually '00:00:00').
2. Press the **ST/STP** button to start the stopwatch.
3. Press the **ST/STP** button again to pause/stop the stopwatch.
4. Press the **RESET** button to clear the stopwatch to zero.

Setting the Alarm:

1. Press the **MODE** button until the alarm setting display appears (often indicated by an alarm icon or 'AL').
2. Use the **RESET** button to adjust the alarm hour.
3. Press the **MODE** button to move to the alarm minute setting.
4. Use the **RESET** button to adjust the alarm minute.
5. Press **MODE** again to exit alarm setting. There may be an additional step to turn the alarm ON/OFF, often indicated by a small icon on the display.

MAINTENANCE

Cleaning:

To clean your watch, wipe it gently with a soft, damp cloth. For silicone parts, mild soap and water can be used. Avoid harsh chemicals or abrasive materials, as these can damage the watch's finish or seals.

Battery Replacement:

The watch uses a standard watch battery. When the display becomes dim or stops functioning, the battery may need replacement. It is recommended to have the battery replaced by a professional watch technician to ensure the water resistance seal is properly maintained.

Water Resistance (10 ATM / 100 Meters):

Your Ice-Watch is water resistant up to 10 ATM (100 meters). This means it is suitable for showering, swimming, and snorkeling. However, it is not recommended for high-impact water sports or diving. Do not operate the buttons while the watch is submerged in water, as this can compromise the water resistance.

TROUBLESHOOTING

- **Display is blank:** The battery may be depleted. Replace the battery.
- **Time is incorrect:** Follow the 'Initial Time and Date Setting' instructions to reset the time.
- **Alarm sounds unexpectedly or cannot be turned off:** Ensure you have correctly followed the alarm setting instructions to disable it. If the issue persists, a full reset of the watch (if available, consult a professional) or battery replacement might be necessary.
- **Watch fogged up internally:** This indicates a breach in the water resistance. Avoid further water exposure and seek professional repair immediately.

SPECIFICATIONS

Feature	Detail
Model Number	021274
Brand	ICE-WATCH
Display Type	Digital
Case Material	Silicone / Plastic
Strap Material	Silicone
Water Resistance	10 ATM (100 Meters)
Department	Boy's
Package Dimensions	8.6 x 7.1 x 7 cm
Item Weight	79 g

WARRANTY AND SUPPORT

For information regarding warranty coverage and customer support, please refer to the documentation included with your purchase or visit the official ICE-WATCH website. Keep your proof of purchase for any warranty claims.