

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [hPlay](#) /

› hPlay Gummy GC04B Portable CD Player Boombox User Manual

## hPlay GC04B-K

# hPlay Gummy GC04B Portable CD Player Boombox

User Instruction Manual

## 1. INTRODUCTION

Thank you for purchasing the hPlay Gummy GC04B Portable CD Player Boombox. This device offers a versatile audio experience with CD, FM radio, Bluetooth, USB, and AUX-in capabilities. Designed for ease of use and portability, it delivers clear stereo sound for various listening environments. Please read this manual carefully to ensure proper operation and to maximize your enjoyment of the product.

## 2. PRODUCT FEATURES

- **Intuitive Design:** Features large buttons and a backlit LCD display for effortless navigation.
- **Compact & Stylish:** Seamlessly complements modern interiors and is versatile for home, shop, or on-the-go use.
- **Crystal-Clear Stereo Sound:** Equipped with dual premium 2.5" front-firing speakers.
- **CD Playback:** Supports CD, CD-R/RW, and audiobooks with shuffle, repeat, and program functions.
- **FM Radio:** Built-in digital FM tuner with 30 station presets and an upgraded FM antenna for improved reception.
- **Bluetooth Connectivity:** Seamlessly connect phones, tablets, or other Bluetooth-enabled devices for wireless streaming.
- **USB Playback:** Play MP3 or WMA music files from USB flash drives (up to 128 GB, FAT32 format only).
- **Auxiliary Input:** 3.5mm aux-in port for wired music connectivity.
- **Headphone Jack:** For private listening.
- **Resume Function:** Picks up playback right where you left off.
- **Dual Power Options:** Operates via AC power (included cord) or 6 x C-size dry batteries (not included).

## 3. PACKAGE CONTENTS

- hPlay Gummy GC04B Portable CD Player Boombox

- AC Power Cord

## 4. SAFETY INFORMATION

---

Please read and follow these safety guidelines to prevent injury or damage to the device:

- Do not expose the unit to rain or moisture.
- Do not block any ventilation openings.
- Ensure proper power supply (AC or specified batteries).
- Avoid placing the unit near heat sources or direct sunlight.
- Do not disassemble the unit; refer servicing to qualified personnel.
- Keep out of reach of small children.

## 5. SETUP

---

### 5.1 Powering the Device

The hPlay Gummy GC04B can be powered by either AC power or batteries.

#### **AC Power Operation:**

1. Insert the included AC power cord into the AC IN jack on the back of the unit.
2. Plug the other end of the AC power cord into a standard 100-240V AC, 50/60Hz wall outlet.

#### **Battery Operation:**

For portable use, the unit requires 6 x C-size (R14) dry batteries (not included). Alkaline batteries are recommended for optimal performance.

1. Open the battery compartment cover located on the bottom of the unit.
2. Insert 6 C-size batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
3. Close the battery compartment cover securely.

# PORTABILITY

Powered by included AC cord or 6 C-size batteries(Not Included)



Image: The hPlay Gummy GC04B Boombox demonstrating its portability and dual power options (AC cord and C-size batteries).

## 5.2 Adjusting the FM Antenna

For optimal FM radio reception, extend and adjust the telescopic FM antenna located on the top of the unit. Reposition the antenna as needed to improve signal clarity.

## 6. OPERATING INSTRUCTIONS

### 6.1 Controls Overview

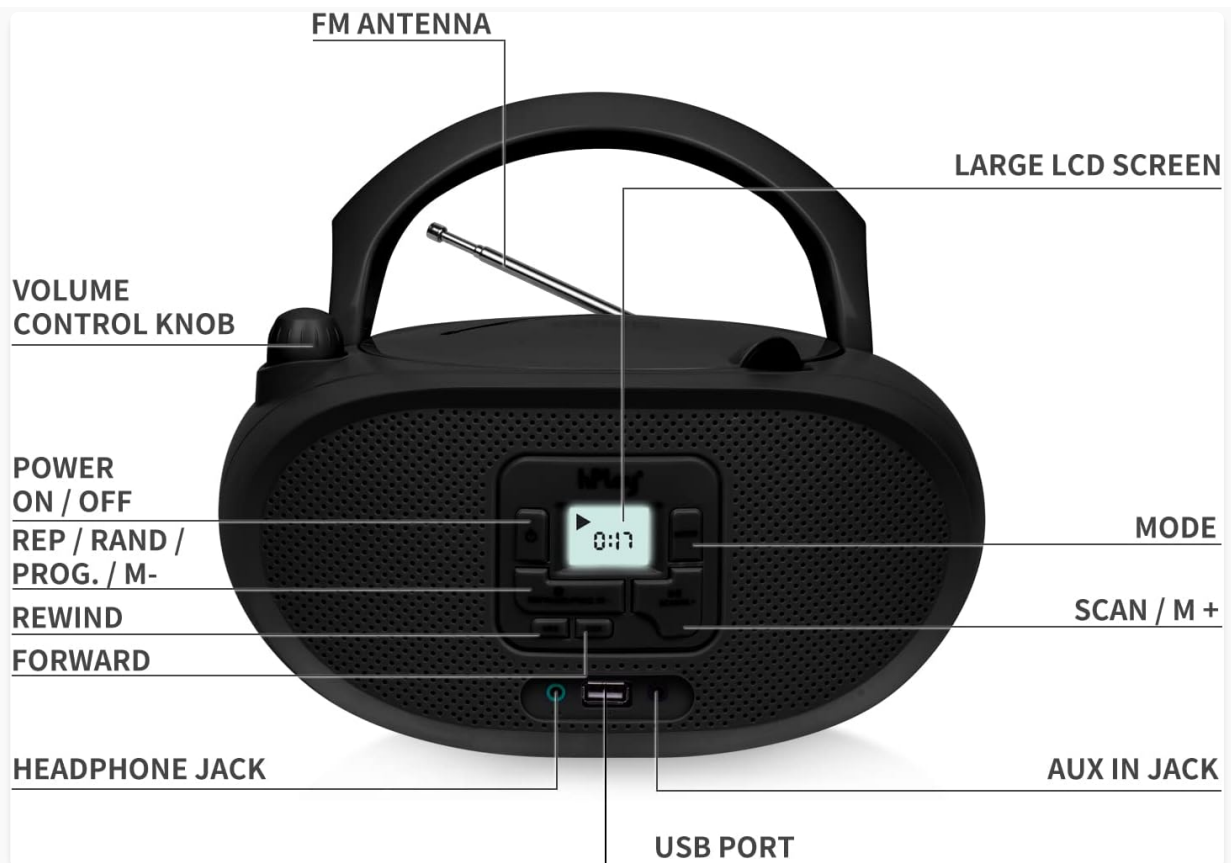


Image: A detailed diagram labeling the various controls and ports on the hPlay Gummy GC04B Boombox, including the FM antenna, volume control knob, LCD screen, power button, function button, mode button, scan/M+ button, play/pause button, stop button, repeat/random/program/M- button, rewind/forward buttons, headphone jack, USB port, and AUX in jack.

- **POWER Button:** Turns the unit ON/OFF.
- **FUNCTION Button:** Cycles through different modes (CD, FM, Bluetooth, USB, AUX).
- **VOLUME Control Knob:** Adjusts the audio output level.
- **LCD Display:** Shows current mode, track number, time, and radio frequency.
- **PLAY/PAUSE Button (▶ |||):** Plays or pauses playback.
- **STOP Button (■):** Stops playback.
- **REWIND/FORWARD Buttons (◀◀ / ▶▶):** Skips tracks or fast-forwards/rewinds within a track.
- **MODE Button:** Selects playback modes (e.g., repeat one, repeat all, random).
- **SCAN/M+ Button:** Scans for FM stations or saves/recalls presets.
- **REP/RAND/PROG/M- Button:** Selects repeat/random playback or programs CD tracks/recalls FM presets.

## 6.2 CD Playback

1. Press the **POWER** button to turn on the unit.
2. Press the **FUNCTION** button repeatedly until "CD" mode is selected on the LCD display.
3. Open the CD compartment cover by gently lifting it.
4. Place a CD (CD, CD-R/RW) onto the spindle with the label side facing up.
5. Close the CD compartment cover firmly. The unit will read the disc and display the total number of tracks.
6. Press the **PLAY/PAUSE** button (▶ |||) to start playback.
7. Use the **REWIND/FORWARD** buttons (◀◀ / ▶▶) to skip tracks.
8. Press the **STOP** button (■) to stop playback.

# CD-R / CD-RW CD PLAYER

Enjoy pure beauty of music



Image: A child enjoying music from the hPlay Gummy GC04B CD Player, highlighting its CD-R/CD-RW playback capability.

## 6.3 FM Radio Operation

1. Press the **POWER** button to turn on the unit.
2. Press the **FUNCTION** button repeatedly until "FM" mode is selected on the LCD display.
3. Extend the FM antenna for better reception.
4. To auto-scan and save stations: Press and hold the **SCAN/M+** button. The radio will automatically scan and save available FM stations.
5. To manually tune: Use the **REWIND/FORWARD** buttons (◀◀ / ▶▶) to fine-tune the frequency.
6. To recall saved presets: Use the **REP/RAND/PROG/M-** button to cycle through saved stations.

## 6.4 Bluetooth Mode

1. Press the **POWER** button to turn on the unit.
2. Press the **FUNCTION** button repeatedly until "BT" (Bluetooth) mode is selected on the LCD display. The unit will enter pairing mode, indicated by a flashing Bluetooth icon.
3. Enable Bluetooth on your external device (smartphone, tablet, etc.) and search for available devices.
4. Select "hPlay GC04B" from the list of devices to pair.
5. Once paired, the Bluetooth icon on the LCD display will stop flashing. You can now stream audio

wirelessly from your device.

## 6.5 USB Playback

1. Press the **POWER** button to turn on the unit.
2. Insert a USB flash drive (FAT32 format, max 128GB) into the USB port on the front of the unit.
3. Press the **FUNCTION** button repeatedly until "USB" mode is selected on the LCD display.
4. The unit will automatically begin playing MP3 or WMA files from the USB drive.
5. Use the **PLAY/PAUSE** (▶ ||), **STOP** (■), and **REWIND/FORWARD** (◀◀ / ▶▶) buttons to control playback.

## 6.6 AUX-in Playback

1. Press the **POWER** button to turn on the unit.
2. Connect one end of a 3.5mm audio cable (not included) to the AUX IN jack on the front of the unit.
3. Connect the other end of the audio cable to the headphone jack or audio output of your external device (e.g., smartphone, MP3 player).
4. Press the **FUNCTION** button repeatedly until "AUX" mode is selected on the LCD display.
5. Control playback and volume directly from your external device.

## 6.7 Headphone Jack

For private listening, plug any standard 3.5mm headphones (not included) into the HEADPHONE jack on the front of the unit. The internal speakers will automatically mute when headphones are connected.

## 7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- **CD Lens Care:** If the CD lens gets dirty, use a commercially available CD lens cleaner.
- **Storage:** If the unit will not be used for an extended period, remove the batteries to prevent leakage and store it in a cool, dry place.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC cord not properly connected; Batteries drained or incorrectly inserted.	Check AC cord connection; Replace batteries or ensure correct polarity.
CD not playing / Skipping	CD is dirty, scratched, or inserted incorrectly; Disc format not supported.	Clean or replace CD; Ensure CD is inserted label-side up; Use supported CD formats (CD, CD-R/RW).
Poor FM reception	Antenna not extended or adjusted; Weak signal area.	Fully extend and reposition the FM antenna; Try moving the unit to a different location.

Problem	Possible Cause	Solution
Bluetooth not connecting	Unit not in Bluetooth mode; Device not in pairing mode; Too far from unit.	Ensure unit is in BT mode; Put your device in pairing mode; Move device closer to the boombox (within 30 ft).
USB not playing	USB drive not formatted to FAT32; Unsupported file types; USB drive capacity too large.	Ensure USB is FAT32; Use MP3/WMA files; Max 128GB USB drive.

## 9. SPECIFICATIONS

Feature	Detail
Brand	hPlay
Model Number	GC04B-K
Product Dimensions (L x W x H)	9.8 x 9.2 x 4.8 inches
Item Weight	3.56 pounds
Connectivity Technology	Bluetooth
Speaker Type	Stereo
Power Source	AC (100-240 VAC, 50/60 Hz) or 6 x C-size Batteries (6 VDC)
USB Support	Up to 128 GB, FAT32 format (exFAT/NTFS not supported)

## 10. WARRANTY AND SUPPORT

hPlay products are designed for quality and reliability. For any questions, technical support, or warranty claims, please refer to the contact information provided with your purchase or visit the official hPlay website. Please retain your proof of purchase for warranty purposes.