

Lefant M210 Pro

Lefant M210 Pro Robot Vacuum Cleaner User Manual

Model: M210 Pro | Brand: Lefant

1. INTRODUCTION

The Lefant M210 Pro Robot Vacuum Cleaner is designed to simplify your home cleaning routine. This super-thin, quiet, and self-charging robotic vacuum offers powerful 2200Pa suction, making it ideal for picking up debris, pet hair, and dirt on various floor types. It features Wi-Fi and APP control, voice assistant compatibility (Alexa/Google Assistant), and multiple cleaning modes for efficient and convenient operation.



Image 1: Lefant M210 Pro Robot Vacuum Cleaner with charging station and mobile app interface.

2. PRODUCT COMPONENTS

The following components are included in your Lefant M210 Pro package:

- 1 Lefant M210 Pro Robotic Vacuum Cleaner
- 1 Charging Dock
- 1 19V/0.6A Adapter
- 2 HEPA Filters (1 pre-installed, 1 spare)
- 2 Side Brushes (1 set pre-installed, 1 set spare)
- 1 Cleaning Tool
- User Manual

3. SETUP

3.1 Charging Dock Placement

Place the charging dock against a wall in an open area. Ensure there is at least 0.5 meters (1.6 feet) of clear space on both sides of the dock and 1.5 meters (4.9 feet) in front of it. Plug the adapter into the charging dock and then into a power outlet.

3.2 Initial Charging

Before first use, fully charge the robot vacuum. Place the robot on the charging dock, ensuring the charging contacts align. The indicator light on the robot will show charging status. A full charge typically takes 4-5 hours.

3.3 Attaching Side Brushes

Snap the side brushes onto the posts on the bottom of the robot until they click into place.

3.4 App Download and Connection

Download the 'Lefant' App from your mobile device's app store. The M210 Pro supports Bluetooth + Wi-Fi distribution network for faster connection. Ensure your Wi-Fi network is 2.4GHz.

1. Download the Lefant App.
2. Open the App and select 'Add equipment'.
3. Turn on your phone's Bluetooth.
4. Turn the robot's blue button switch to 'I' and press and hold the start button for 6 seconds.
5. The App will automatically detect the M210 Pro and guide you through the connection process.
6. Ensure connection to a 2.4GHz Wi-Fi network.
7. Wait for the robot to pair successfully.



Image 2: Visual guide for connecting the Lefant M210 Pro to the mobile application.

3.5 Voice Assistant Connection (Alexa/Google Assistant)

The Lefant M210 Pro is compatible with Amazon Alexa and Google Assistant for convenient voice control.

1. Open the 'Lefant' App and navigate to 'Mine' -> 'Voice third-party'.
2. Access the service.
3. Record your voice account and password.
4. Open the 'Alexa' App -> 'More' -> 'Skills & Games'.
5. Search for 'Smart Life'.
6. Click 'ENABLE TO USE'.
7. Select your region and enter the voice account password.
8. Wait for Alexa to connect successfully.



Image 3: Visual guide for connecting the Lefant M210 Pro to Amazon Alexa.

4. OPERATING INSTRUCTIONS

4.1 Starting/Pausing Cleaning

- **Manual Start:** Press the power button on the robot once to start cleaning. Press again to pause.
- **App Control:** Use the Lefant App to start, pause, or stop cleaning.
- **Voice Control:** Use voice commands via Alexa or Google Assistant (e.g., "Alexa, ask Lefant Robot to Clean").

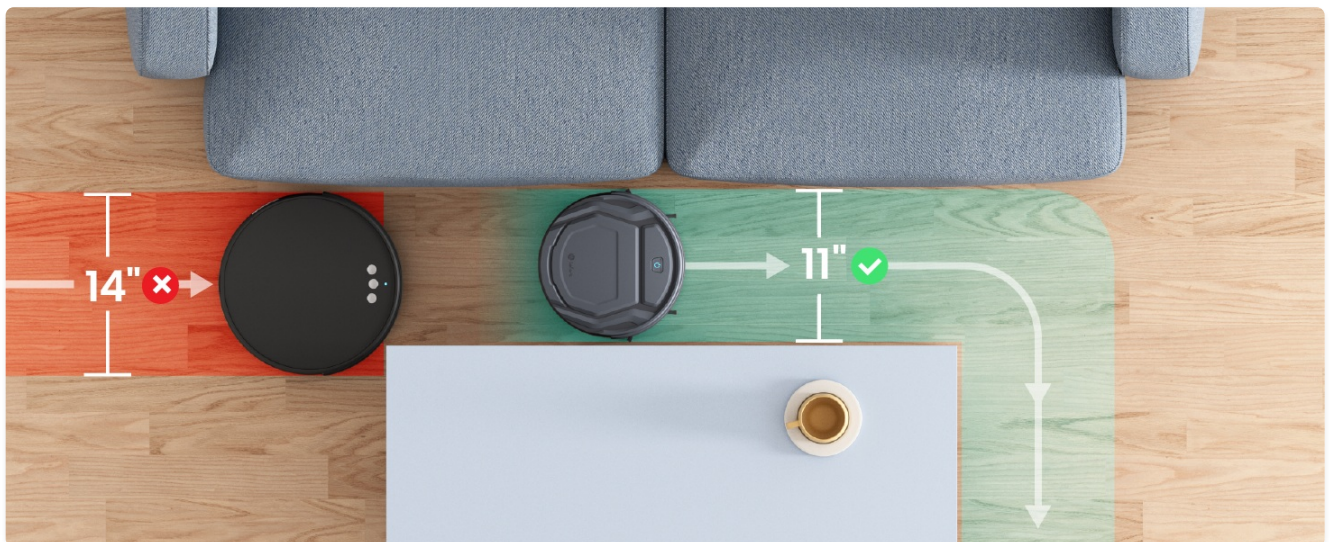 


Image 4: Controlling the robot vacuum using the Lefant mobile application.

4.2 Cleaning Modes

The M210 Pro offers six cleaning modes, selectable via the Lefant App:

- **Arranged Cleaning (Zigzag Route):** Cleans in an efficient zigzag pattern.
- **Random Cleaning:** Cleans randomly, suitable for smaller areas.
- **Fixed-point Cleaning:** Concentrates cleaning on a specific spot.
- **Wall Cleaning (Edge Mode):** Cleans along the edges of walls and furniture.
- **Timed Cleaning:** Schedules cleaning sessions for specific times.
- **Manually Controlling the Direction:** Direct the robot using the app's remote control feature.

Multiple Cleaning Modes to Meet Your Needs

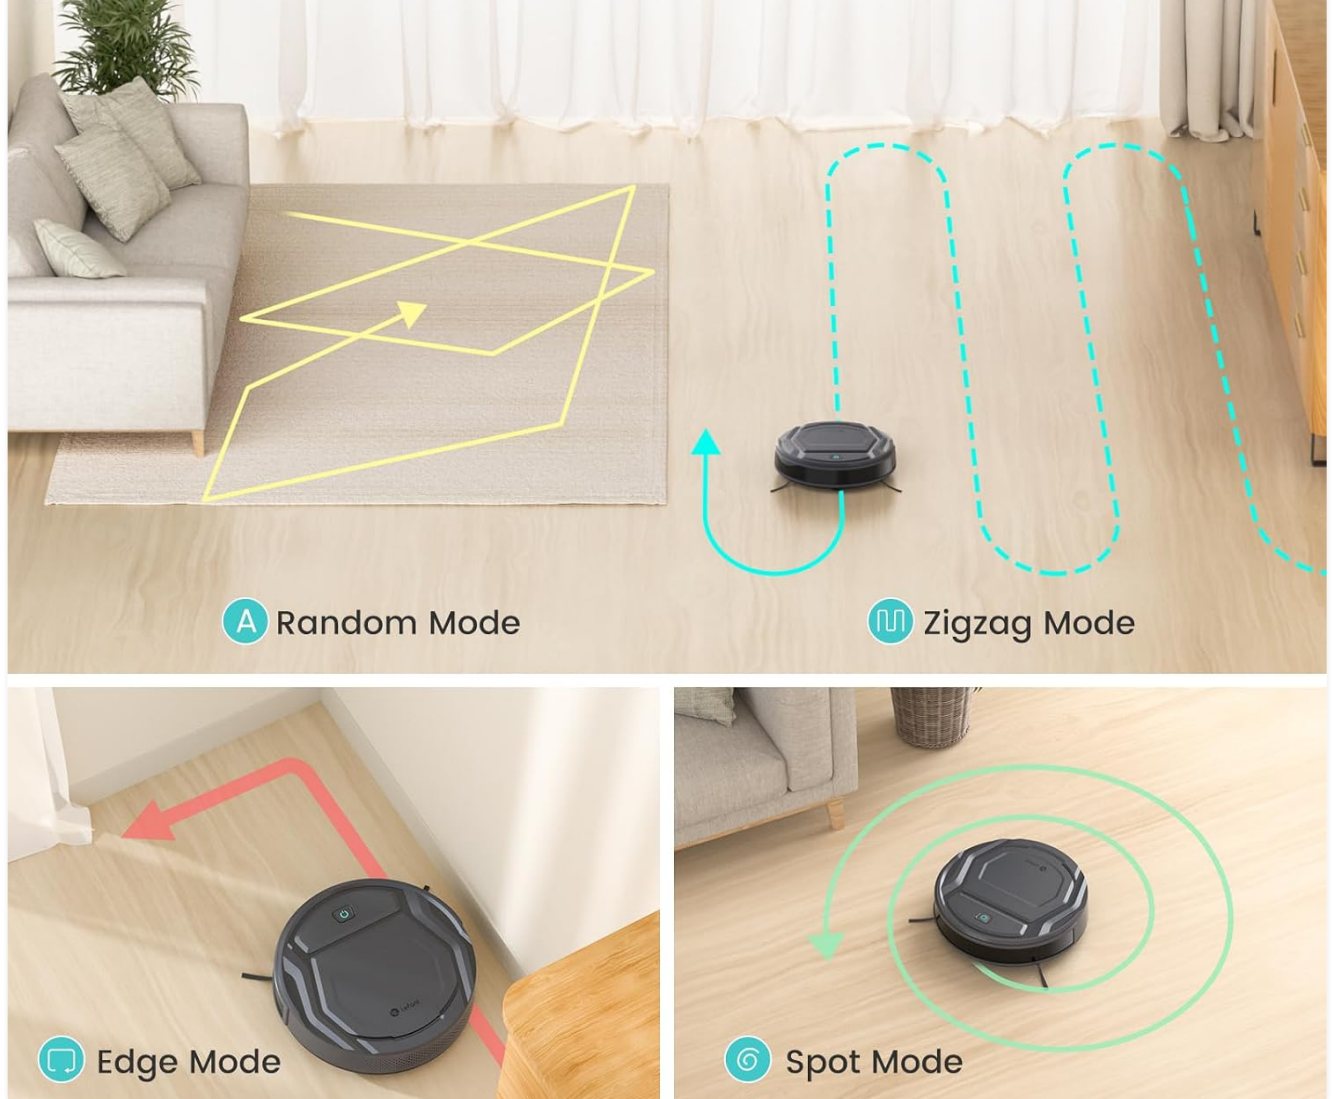 


Image 5: Illustration of the various cleaning modes available for the M210 Pro.

4.3 Suction Levels

Adjust suction power via the app to suit your cleaning needs:

- **Quiet Mode:** 1000Pa (56dB)
- **Standard Mode:** 1800Pa (58dB)
- **Powerful Mode:** 2200Pa (60dB)



Image 6: The robot vacuum's suction power levels and corresponding noise output.

4.4 Auto-Recharging

The robot vacuum can run for up to 120 minutes on a single charge. It will automatically return to its charging base when cleaning is finished or when the battery level is low.



Image 7: The robot vacuum's auto-recharging function.

4.5 Obstacle Avoidance and Anti-Drop

Equipped with upgraded FreeMove Technology 3.0 and built-in infrared sensors, the M210 Pro effectively avoids obstacles and prevents falls from stairs or ledges.



Image 8: The robot vacuum's obstacle avoidance capabilities.

Suction Port Without Tangles vs Tangled Roller Brush

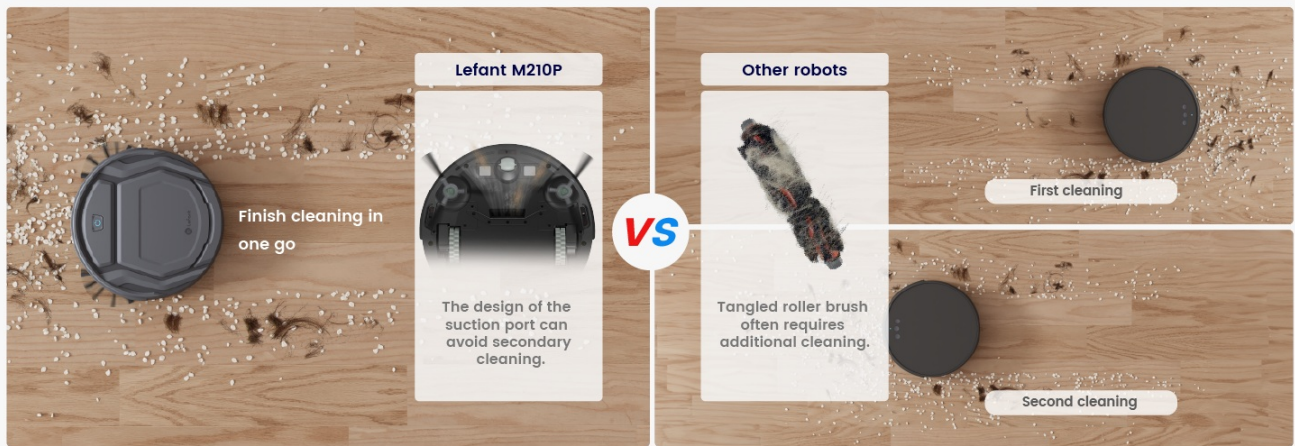 


Image 9: The robot vacuum's anti-drop sensors preventing falls.

4.6 Pet Hair Optimization

The unique inlet design prevents clogging, even with significant pet hair, making it highly effective for households with pets.

No Entanglement Any More



Image 10: The M210 Pro's anti-entanglement design for pet hair.

5. MAINTENANCE

5.1 Dustbin Emptying

The 500ml dustbin is easily accessible for emptying. Simply open the top cover, remove the dustbin, and dispose of collected debris. Regular emptying ensures optimal suction performance.

5.2 Brush and Filter Cleaning

Regularly inspect and clean the side brushes and HEPA filters to maintain cleaning efficiency. Use the provided cleaning tool to remove any tangled hair or debris.

6. TROUBLESHOOTING

If the robot encounters an issue, it may emit an audible alert or display a message in the Lefant App. Refer to the

App's message center for specific troubleshooting steps. Common issues include:

- Robot stuck: Clear any obstacles around the robot.
- Low battery: Robot will automatically return to the charging dock.
- Dustbin full: Empty the dustbin.
- Brushes tangled: Clean the side brushes.

7. SPECIFICATIONS

- **Brand:** Lefant
- **Model Name:** M210 Pro
- **Special Features:** Boost-Intellect Technology, Edge Cleaning, Obstacle Avoidance, Pet Hair Pick Up, Scheduling
- **Color:** Dim Gray
- **Product Dimensions:** 11"L x 11"W x 2.99"H
- **Filter Type:** Cartridge
- **Battery Life:** 120 minutes
- **Cleaning Path Width:** 13 Inches
- **Voltage:** 14.8 Volts (DC)
- **Capacity (Dustbin):** 500 Milliliters
- **Power Source:** Battery Powered
- **Control Method:** App, Voice
- **Compatible Devices:** Amazon Echo, Google Home, Smartphones
- **Item model number:** M210 Pro
- **UPC:** 632793986669

8. OFFICIAL PRODUCT VIDEOS

Lefant M210 Pro is Your Ultimate Dust-Busting Companion

Your browser does not support the video tag.
Video 1: An overview of the Lefant M210 Pro's features and cleaning capabilities.

Lefant M210 Pro Simplifying Your Cleaning Routine

Your browser does not support the video tag.
Video 2: Demonstrates how the M210 Pro simplifies daily cleaning tasks.

How to download and register Lefant APP?

Your browser does not support the video tag.
Video 3: Step-by-step guide on downloading and registering the Lefant App.

How to quickly connect Lefant M210 Pro APP using Bluetooth?

Your browser does not support the video tag.
Video 4: Instructions for connecting the Lefant M210 Pro to the App via Bluetooth.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question