

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Zoop](#) /
- › [Zoop Digital Watch WZP16021PP01 User Manual](#)

Zoop WZP16021PP01

Zoop Digital Watch User Manual

Model: WZP16021PP01

1. INTRODUCTION

Thank you for choosing the Zoop Digital Watch, Model WZP16021PP01. This watch is designed for children, offering a range of practical features in a durable and water-resistant design. This manual provides detailed instructions on how to set up, operate, and maintain your watch.

Please read this manual carefully to ensure proper use and to maximize the lifespan of your watch.





Image 1.1: Front view of the Zoop Digital Watch WZP16021PP01.

2. WATCH COMPONENTS AND BUTTON FUNCTIONS

Familiarize yourself with the watch's buttons and their primary functions:

- **ADJ (Adjust) Button:** Used to enter setting modes and confirm selections.
- **MODE Button:** Used to cycle through different display modes (Time, Alarm, Stopwatch).
- **START/STOP Button:** Used to start/stop functions like the stopwatch or to increment values during setting.
- **LIGHT Button:** Activates the electric backlight for visibility in low light conditions.



Image 2.1: Side view showing the watch buttons.

3. SETUP AND INITIAL CONFIGURATION

3.1. Setting Time and Date

1. From the normal time display, press the **MODE** button repeatedly until the seconds start flashing. This indicates you are in time setting mode.
2. Press the **START/STOP** button to increment the flashing value (seconds, minutes, hours, month, date, day of week).
3. Press the **ADJ** button to move to the next setting parameter.
4. Continue pressing **START/STOP** to adjust the value and **ADJ** to move to the next parameter until all settings (seconds, minutes, hours, month, date, day of week) are correct.
5. Once all settings are complete, press the **MODE** button to exit the setting mode and return to the normal time display.

3.2. 12/24 Hour Format Selection

While in the time setting mode (seconds flashing), press the **LIGHT** button to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

4. OPERATING FUNCTIONS

4.1. Alarm Function

1. From the normal time display, press the **MODE** button once to enter the Alarm mode. The alarm time will be displayed.
2. Press the **ADJ** button to make the alarm hours flash.
3. Use the **START/STOP** button to adjust the alarm hour.
4. Press **ADJ** again to make the alarm minutes flash.
5. Use the **START/STOP** button to adjust the alarm minutes.
6. Press **MODE** to exit the alarm setting mode.
7. To turn the alarm ON/OFF, press the **START/STOP** button while in Alarm mode (without flashing). An alarm icon will appear/disappear.

4.2. Stopwatch Function

1. From the normal time display, press the **MODE** button twice to enter the Stopwatch mode. The display will show "00:00:00".
2. Press the **START/STOP** button to start the stopwatch.
3. Press the **START/STOP** button again to pause the stopwatch.
4. To resume, press **START/STOP** again.
5. To reset the stopwatch to zero, press the **ADJ** button while the stopwatch is paused.
6. Press **MODE** to exit the Stopwatch mode.

4.3. Hourly Chime

To activate or deactivate the hourly chime, navigate to the normal time display. Press and hold the **MODE** button, then press the **START/STOP** button. A chime icon will appear/disappear, indicating the status of the hourly chime.

4.4. Backlight

Press the **LIGHT** button at any time to illuminate the display for a few seconds.

5. MAINTENANCE AND CARE

5.1. Water Resistance

This watch is water-resistant up to 50 meters (5 ATM). This means it is suitable for everyday use, showering, and swimming in shallow water. It is *not* suitable for diving or high-pressure water activities. Do not operate buttons while the watch is wet or submerged.

5.2. Cleaning

Clean the watch case and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish.

5.3. Battery Replacement

The watch uses one Lithium Polymer battery (included). When the display becomes dim or stops functioning, the battery may need replacement. Battery replacement should be performed by a qualified watch technician to ensure water resistance is maintained.

6. TROUBLESHOOTING

- **Display is blank:** Check if the battery needs replacement.
- **Time is incorrect:** Follow the instructions in Section 3.1 to reset the time and date.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though this model does not feature one). If the issue persists, a battery replacement or professional inspection may be required.
- **Water inside the watch:** Immediately take the watch to a professional for inspection and repair to prevent further damage.

7. SPECIFICATIONS

Feature	Detail
Brand	Zoop
Model Name	WZP16021PP01
ASIN	B0BGXT9BBC
Display Type	Digital
Movement	Quartz
Power Source	Battery Powered (1 Lithium Polymer battery included)
Water Resistance Depth	50 meters (5 ATM)
Case Material Type	Plastic
Watch Glass Material Type	Acrylic
Case Diameter	34.5 millimeters
Case Thickness	10 millimeters
Band Material Type	Silicone
Band Color	Black
Band Width	15 millimeters
Band Length	23 centimeters (total length)
Clasp Type	Pin Buckle
Item Weight	81.96 grams
Product Dimensions	14 x 7 x 10 cm
Age Range Description	Child
Manufacturer	Titan Co Ltd No
First Available Date	January 18, 2023



Image 7.1: Watch case size measurement.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your purchase or contact the retailer where the watch was purchased. Keep your proof of purchase for any warranty claims.