

HURRISE HURRISEtfuw9rx31c2058-01

HURRISE 12V Portable Travel Rice Cooker Instruction Manual

Model: HURRISEtfuw9rx31c2058-01

1. SAFETY INFORMATION

Please read all instructions carefully before using the HURRISE 12V Portable Travel Rice Cooker. Retain this manual for future reference.

- Ensure the voltage rating of the appliance (12V) matches your vehicle's power supply.
- Do not immerse the main unit of the rice cooker in water or any other liquid.
- Always unplug the appliance from the power source before cleaning or when not in use.
- Keep the appliance out of reach of children.
- Use only the provided power cord and accessories.
- The product is made of food-grade PP material, ensuring no harmful substances are produced during heating.
- Exercise caution when handling hot food or steam.

2. PRODUCT OVERVIEW

The HURRISE 12V Portable Travel Rice Cooker is designed for convenience, allowing you to cook, heat, and keep food warm while on the go. Its compact size and 12V compatibility make it ideal for car use, travel, or as an electric lunch box.

Key Features:

- **Dual Use Design:** Suitable for both home and car (12V) use.
- **Food-Grade Safety:** Constructed from food-grade PP material.
- **Double Safety Buckle:** Ensures secure sealing to prevent leakage and maintain food temperature.
- **Easy to Clean:** Features a non-stick coating for convenient cleaning.
- **Versatile Cooking:** Capable of cooking rice, eggs, and warming various dishes.

Package Contents:

- 1 x Electric Rice Cooker Unit
- 1 x 12V Car Power Adapter
- 1 x Measuring Cup
- 1 x Spoon
- 1 x Steam Plate (heart-shaped)
- 1 x User Manual (this document)



Image: The HURRISE 12V Portable Travel Rice Cooker shown with its complete set of accessories, including the measuring cup, spoon, 12V car adapter, and steam plate.

Your browser does not support the video tag.

Video: This video demonstrates the unboxing of the HURRISE 12V Portable Travel Rice Cooker, showcasing all included components and their initial setup.

3. SPECIFICATIONS

Brand	HURRISE
Model Name	12v,small rice cooker
Model Number	HURRISEtfuw9rx31c2058-01
Capacity	1 Liters
Power Source	Corded Electric (12V Car Adapter)
Voltage	12 Volts
Wattage	100 watts
Material	Stainless Steel (Inner Pot), ABS + PP (Shell)
Lid Material	Stainless Steel
Color	White
Product Dimensions	Approx. 15.7 x 15.7 x 15.5 cm / 6.2 x 6.2 x 6.1 inches
Cooking Time	About 30 minutes (for 2 cups of rice)



Image: A visual representation of the HURRISE 12V Portable Travel Rice Cooker's dimensions, showing its compact size.

4. INITIAL SETUP

1. **Unpack:** Carefully remove all components from the packaging. Check that all items listed under 'Package Contents' are present and undamaged.
2. **Install Fuse (if necessary):** The 12V car adapter may include a replaceable fuse. Ensure it is correctly installed in the adapter.
3. **Familiarize with Controls:** Locate the power input port at the bottom of the unit and the control buttons on the front. The buttons typically include 'Cook' and 'Keep Warm' functions.



Image: A close-up view of the rice cooker's control panel, highlighting the 'Cook' and 'Keep Warm' buttons and indicator lights.



Double safety buckle for well sealing
Avoids water leakage and keeps the food warm.

Image: Detail of the double safety buckle, designed to secure the lid and prevent spills during travel.

5. OPERATING INSTRUCTIONS

5.1 Cooking Rice

1. Use the provided measuring cup to measure the desired amount of rice. Rinse the rice thoroughly.
2. Place the rinsed rice into the inner pot. Add water according to the rice-to-water ratio (typically 1:1.5 for white rice, or as per rice packaging instructions).
3. Place the inner pot into the main unit. Close the lid securely using the double safety buckles.
4. Connect the 12V car power adapter to the rice cooker's power input port, then plug the adapter into your vehicle's 12V power outlet.
5. Press the 'Cook' button. The indicator light will illuminate, signifying that cooking has started.
6. Once cooking is complete (approximately 30 minutes for 2 cups of rice), the cooker will automatically switch to the 'Keep Warm' mode.
7. Allow the rice to rest for 5-10 minutes in 'Keep Warm' mode before serving for best results.

5.2 Steaming Food

1. Add a small amount of water to the bottom of the inner pot (below the steam plate level).

2. Place the steam plate into the inner pot. Arrange your food (e.g., vegetables, eggs) on the steam plate.
3. Close the lid securely.
4. Connect the 12V car power adapter.
5. Press the 'Cook' button to begin steaming. The cooking time will vary depending on the type and quantity of food.
6. Once steaming is complete, the cooker will switch to 'Keep Warm' mode. Carefully remove the lid and food.



Image: The portable rice cooker shown alongside various prepared meals, demonstrating its capability to cook rice, soup, and other dishes.



Image: A person pressing the integrated button on the rice cooker while it is placed in a car, illustrating its ease of use in a travel setting.



Image: The rice cooker with its lid open, showing the heart-shaped steam plate placed inside the inner pot, ready for steaming.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your rice cooker.

1. **Unplug:** Always ensure the rice cooker is unplugged from the power source and has cooled down completely before cleaning.
2. **Clean Inner Pot and Steam Plate:** The inner pot and steam plate have a non-stick coating. Wash them with warm, soapy water using a soft sponge or cloth. Rinse thoroughly and dry completely.
3. **Clean Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
4. **Clean Lid:** The lid can be wiped clean with a damp cloth. Ensure no food particles are lodged in the sealing mechanism.
5. **Storage:** Store the rice cooker in a dry, cool place when not in use.

7. TROUBLESHOOTING

If you encounter any issues with your rice cooker, please refer to the following common problems and solutions:

- **Appliance does not turn on:**

- Check if the 12V car adapter is securely plugged into both the rice cooker and the vehicle's power outlet.
- Verify that the vehicle's 12V power outlet is functioning correctly.
- Inspect the fuse in the 12V car adapter. Replace if blown.

- **Food not cooking properly:**

- Ensure the correct rice-to-water ratio is used.
- Check that the lid is securely closed with the safety buckles engaged.
- Confirm the 'Cook' button was pressed and the indicator light is on.

- **Lid not sealing:**

- Ensure the inner pot is correctly seated within the main unit.
- Check for any food debris or obstructions preventing the lid from closing properly.
- Engage both double safety buckles firmly.

If the problem persists after checking these points, please contact customer support.

8. WARRANTY AND SUPPORT

This HURRISE product is covered by a manufacturer's warranty against defects in materials and workmanship under normal use. Please refer to your purchase documentation for specific warranty terms and duration.

For technical support, troubleshooting assistance, or warranty claims, please contact the retailer or HURRISE customer service through the contact information provided at the time of purchase.

Please have your model number (HURRISEtfuw9rx31c2058-01) and proof of purchase ready when contacting support.