

[Manuals.plus](#) /

> [HP](#) /

> HP Laptop 15s fq5059ne User Manual

HP 15s-fq5059ne

HP Laptop 15s fq5059ne User Manual

Model: 15s-fq5059ne (79T34EA)

INTRODUCTION

This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your HP Laptop 15s fq5059ne. Please read this manual thoroughly to ensure optimal performance and longevity of your device.

The HP Laptop 15s fq5059ne is a portable and efficient computing device designed for everyday tasks. It features a 15.6-inch HD display, powered by a 12th Gen Intel Core i3 processor, 8GB of RAM, and a 256GB Solid State Drive, running on Windows 11 Home.

SETUP

1. Unboxing and Initial Inspection

Carefully remove the laptop and all accessories from the packaging. Verify that all components are present:

- HP Laptop 15s fq5059ne
- AC Power Adapter and Power Cord
- Documentation (this manual, warranty information)

Inspect the laptop for any visible damage. If any damage is found, contact your retailer immediately.

2. Connecting to Power

Before first use, ensure the laptop is fully charged. Connect the AC power adapter to the laptop's power port and then plug the power cord into a wall outlet.



Image: The HP Laptop 15s fq5059ne displaying the Windows 11 desktop, illustrating the overall appearance of the device.

3. Initial Boot and Windows Setup

Press the power button to turn on the laptop. Follow the on-screen instructions to complete the Windows 11 Home setup process. This includes:

1. Selecting your region and keyboard layout.
2. Connecting to a Wi-Fi network.
3. Signing in with or creating a Microsoft account.
4. Setting up a PIN or password.
5. Reviewing privacy settings.

Allow the system to complete any initial updates before proceeding with regular use.

OPERATING YOUR LAPTOP

1. Keyboard and Touchpad Usage

The laptop features a full-size keyboard and a precision touchpad. Use the touchpad for navigation, clicking, and multi-touch gestures. Refer to Windows settings for customizing touchpad gestures.



Image: An angled view of the HP Laptop 15s fq5059ne, highlighting the keyboard layout and the display.

2. Connecting Peripherals

Your HP Laptop 15s fq5059ne is equipped with various ports for connecting external devices:

- **USB Ports:** Connect USB devices such as external hard drives, mice, or keyboards. The laptop has 3 USB 3.0 ports.
- **HDMI Port:** Connect to an external monitor or TV for extended display.
- **Headphone/Microphone Combo Jack:** For audio input/output.
- **SD Card Reader:** Insert SD cards for data transfer.



Image: A close-up view of the left side of the HP Laptop 15s fq5059ne, showing the SD card slot, headphone jack, USB-C port, and HDMI port.



Image: A close-up view of the right side of the HP Laptop 15s fq5059ne, showing the power input and two USB-A ports.

3. Battery Management

The laptop is equipped with a Lithium Ion battery. To maximize battery life:

- Adjust screen brightness.
- Close unused applications.
- Utilize Windows power saving modes.
- Avoid extreme temperatures.

The laptop supports HP Fast Charge technology for quick recharging.

1. Software Updates

Regularly check for and install Windows updates and HP driver updates to ensure system stability, security, and optimal performance.

2. Cleaning Your Laptop

- Use a soft, lint-free cloth to clean the screen and exterior.
- For stubborn marks, slightly dampen the cloth with water or a screen cleaner.
- Avoid spraying liquids directly onto the laptop.
- Use compressed air to clear dust from keyboard keys and vents.

3. Storage Management

Periodically review and delete unnecessary files to free up storage space on the 256GB SSD. Consider using cloud storage for large files.

TROUBLESHOOTING

Problem	Possible Solution
Laptop does not power on.	Ensure the power adapter is securely connected and the outlet is functional. Try a different power outlet. If battery is low, allow it to charge for a few minutes before attempting to power on.
Screen is blank or black.	Check screen brightness settings. Connect to an external monitor to verify if the issue is with the laptop's display or graphics driver. Restart the laptop.
Wi-Fi connection issues.	Restart your router and modem. Check Wi-Fi settings on the laptop to ensure Wi-Fi is enabled and connected to the correct network. Update network drivers.
Slow performance.	Close unnecessary applications. Check for background processes consuming high resources. Ensure sufficient free storage space. Run a virus scan.

For more complex issues, refer to the HP support website or contact customer service.

SPECIFICATIONS

Feature	Detail
Brand	HP
Model Name	15s-fq5059ne
Item Model Number	79T34EA

Feature	Detail
Screen Size	15.6 inches
Screen Resolution	1366 x 768 pixels (HD)
Processor Brand	Intel
Processor Type	Core i3 (12th Gen)
Processor Speed	4.4 GHz
RAM Size	8 GB DDR4
Hard Drive Size	256 GB SSD
Graphics Card	Integrated Intel Graphics
Operating System	Windows 11 Home
Color	Sliver
Battery Life (Average)	8.5 Hours
Item Weight	2.48 Kilograms
USB Ports	3 x USB 3.0

WARRANTY AND SUPPORT

Warranty Information

This product comes with a 1-Year Seller Warranty. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, refer to the documentation included with your product or visit the official HP support website.

Customer Support

For technical assistance, driver downloads, or service requests, please visit the official HP support website or contact HP customer service. You can find contact information on the HP website or in your product documentation.

HP Support Website: support.hp.com