

[manuals.plus](#) /

› [Soundcore](#) /

› [Soundcore Rave Neo 2 Portable Speaker User Manual](#)

Soundcore A33A1

Soundcore Rave Neo 2 Portable Speaker User Manual

Model: A33A1



1. INTRODUCTION

The Soundcore Rave Neo 2 is a portable speaker designed to deliver powerful stereo sound with dynamic light effects. It features IPX7 waterproofing, allowing it to float on water, and offers extended playtime. Advanced features include PartyCast 2.0 for multi-speaker synchronization and customizable audio settings via the Soundcore App.



Figure 1: Front view of the Soundcore Rave Neo 2 Portable Speaker, showcasing its speaker grille and integrated light rings.

2. WHAT'S IN THE BOX

- Soundcore Rave Neo 2 Portable Speaker
- USB-C Charging Cable
- Quick Start Guide / User Manual

3. CONTROLS AND FEATURES

Top Panel Controls

- **Power Button:** Press to power on/off.
- **Bluetooth Button:** Press to enter Bluetooth pairing mode.
- **Volume Up/Down:** Adjusts the speaker's master volume.
- **Play/Pause Button:** Controls media playback.
- **Track Skip Buttons:** Skips to the previous or next track.
- **BassUp Button:** Enhances bass output.
- **Light Show Button:** Cycles through various light modes.
- **AI Vocal Removal Button:** Reduces or removes vocals from a playing track for karaoke.
- **Reverb Knob:** Adjusts the reverb effect for connected microphones.
- **Microphone Volume Knob:** Adjusts the volume of connected microphones.

Rear Panel Ports

- **USB-C Charging Port:** For charging the speaker.
- **AUX In Port:** For wired audio input from external devices.
- **Microphone Input (6.35mm):** For connecting wired microphones.



Figure 2: The Soundcore Rave Neo 2 demonstrating its portability with a built-in carry strap.

4. SETUP

4.1 Charging the Speaker

Before first use, fully charge the speaker using the provided USB-C cable and a compatible power adapter (not included). The battery indicator lights will show charging progress.

4.2 Bluetooth Pairing

1. Power on the Rave Neo 2. The Bluetooth indicator will flash blue.
2. On your device, enable Bluetooth and select "Soundcore Rave Neo 2" from the list of available devices.
3. Once connected, the Bluetooth indicator will turn solid blue.

4.3 PartyCast 2.0 Pairing

To connect multiple Rave Neo 2 speakers for synchronized audio and light show:

1. Connect one Rave Neo 2 speaker to your device via Bluetooth (this will be the primary speaker).

2. Power on the secondary Rave Neo 2 speakers.
3. On the primary speaker, press and hold the PartyCast button for 2 seconds. The PartyCast indicator will flash white.
4. On the secondary speakers, press the PartyCast button. They will connect to the primary speaker automatically.



Figure 3: Multiple Soundcore Rave Neo 2 speakers synchronized via PartyCast 2.0, creating a larger audio and light experience.

5. OPERATING INSTRUCTIONS

5.1 Audio Playback

Once connected via Bluetooth or AUX, simply start playing audio from your device. Use the volume controls on the speaker or your device to adjust the sound level. Press the BassUp button for enhanced low-frequency response.

80W OF STEREO SOUND



Figure 4: The Soundcore Rave Neo 2 delivering 80W stereo sound in an outdoor setting.

5.2 Light Show Customization

Press the Light Show button on the top panel to cycle through different lighting modes. For more advanced customization, including patterns and colors, download and use the Soundcore App.

IN SYNC WITH PARTYCAST 2.0



Figure 5: The Soundcore Rave Neo 2 displaying its vibrant light show feature in a low-light environment.

5.3 AI Vocal Removal

The AI Vocal Removal feature allows you to reduce or eliminate the vocal track from a song, making it suitable for karaoke. Press the AI Vocal Removal button on the top panel to activate this feature. You can adjust the intensity of vocal removal using the Soundcore App.

5.4 Soundcore App

Download the Soundcore App from your device's app store to unlock additional features and customization options, including:

- Customizable EQ settings.
- Advanced light show controls.
- Switching between Indoor and Outdoor sound modes.
- Firmware updates.

FLOAT WITH WATERPROOF PROTECTION



Figure 6: A user interacting with the Soundcore App on a smartphone to control the speaker's settings.

6. MAINTENANCE

6.1 Cleaning

Wipe the speaker with a soft, damp cloth. Do not use any abrasive cleaners or solvents. Ensure all port covers are securely closed before cleaning or exposing to water.

6.2 Waterproofing (IPX7)

The Rave Neo 2 is IPX7 waterproof, meaning it can withstand immersion in water up to 1 meter for 30 minutes. Ensure the charging port cover is fully sealed before exposing the speaker to water. The speaker is designed to float on water.

LIGHT UP YOUR BEATS



Figure 7: The Soundcore Rave Neo 2 speaker floating on the surface of water, demonstrating its IPX7 waterproof capability.

6.3 Storage

Store the speaker in a cool, dry place away from extreme temperatures and direct sunlight. If storing for an extended period, charge the battery every 3 months to maintain its lifespan.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker is not in pairing mode or already connected.	Ensure speaker is in pairing mode (flashing blue light). Disconnect from other devices. Clear Bluetooth history on your device.

Problem	Possible Cause	Solution
No sound.	Volume too low; incorrect input source.	Increase volume on speaker and device. Check if correct input (Bluetooth/AUX) is selected.
PartyCast not connecting.	Speakers are too far apart or not in PartyCast mode.	Ensure speakers are within range. Follow PartyCast pairing steps carefully.

8. SPECIFICATIONS

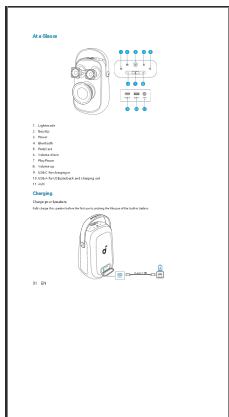
- Model Name:** A33A1
- Speaker Type:** Outdoor
- Connectivity Technology:** Bluetooth, USB
- Audio Output Mode:** Stereo
- Speaker Maximum Output Power:** 80 Watts
- Battery Life:** 18 Hours
- Waterproof Rating:** IPX7
- Product Dimensions:** 7.8"D x 6.06"W x 11.77"H
- Item Weight:** 1.27 ounces (approx. 36 grams)
- Maximum Range:** 15 Meters
- Control Method:** App Control
- Manufacturer:** Anker

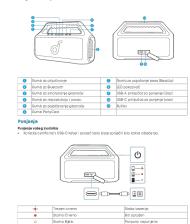
9. WARRANTY AND SUPPORT

Soundcore products come with a limited manufacturer's warranty. For detailed warranty information, product registration, or technical support, please visit the official Soundcore website or contact their customer service. Contact information can typically be found in the product packaging or on the Soundcore support page. For further assistance, please refer to the Soundcore support website: [Soundcore Support](#)

© 2025 Soundcore. All rights reserved.

Related Documents - A33A1

	<p>Soundcore Rave Neo 2 Portable Bluetooth Speaker User Manual</p> <p>Comprehensive guide to the Soundcore Rave Neo 2 portable Bluetooth speaker, covering setup, features like Bluetooth, TWS, PartyCast, AUX/USB modes, button controls, light effects, app integration, and specifications.</p>
--	--

 Soundcore Rave Neo 2 User Manual	<p>Comprehensive user manual for the Soundcore Rave Neo 2 portable Bluetooth speaker, covering setup, features, operation, and specifications. Learn how to connect, use TWS and PartyCast modes, and customize your audio experience.</p>
 Soundcore Rave Neo 2 SE User Manual	<p>Comprehensive user manual for the Soundcore Rave Neo 2 SE portable Bluetooth speaker, covering charging, connectivity, features, and specifications.</p>
 Soundcore Rave Neo 2 Quick Start Guide: Setup, Features, and Specifications	<p>Comprehensive quick start guide for the Soundcore Rave Neo 2 portable Bluetooth speaker. Learn how to set up, pair devices, use TWS and PartyCast features, and find technical specifications and support.</p>
 Soundcore Rave Party 2 Portable Speaker: Quick Start Guide and Features	<p>Comprehensive guide to the Soundcore Rave Party 2 portable speaker, covering setup, Bluetooth pairing, TWS connectivity, PartyCast, controls, technical specifications, and customer support. Model A3399.</p>
 soundcore Boom 2 Prijenosni Bluetooth Zvučnik - Korisnički Priručnik	<p>Detaljan korisnički priručnik za soundcore Boom 2 prijenosni Bluetooth zvučnik. Upute za punjenje, povezivanje, TWS, PartyCast, aplikaciju i tehničke specifikacije.</p>

Documents - Soundcore – A33A1



[pdf] User Manual

A33A1 Rave Neo 2 Manual 121 131 Инструкция Soundcore руководство пользователя a33a1 rave neo manual teamplush by 2024 11 |||

Aplicativo Soundcore Baixe o aplicativo Soundcore para aprimorar a sua experincia. Informaes de produto: Verifique o nome do produto e a verso de software ou consulte o manual do usurio. Atualizao de firmware: Voc ser informado depois que a nova verso do firmware for detectada ao conectar o alto-falante ao aplicativo. Status da bateria: Indic o nível de carga restante da bateria do seu alto-falante. Controle de volume: ajuste o nível de volume pelo aplicativo sem pressionar botões no alto-falante.

Configurações de EQ: h 6 configurações de EQ a sua disposição no aplicativo para otimizar a sua experincia de ouvinte. Escolha entre: Estar musicas, Ambiente, Som ambiente, Modo EO normal, Som ambiente, Som ambiente, Voz. Voces se destaca mais claramente de outros sons do ambiente.

- Turbo de Agudos: Altas freqüencias são elevadas.
- Falante: Ajuste o somamento de sons de alta e baixa freqüencia.
- Personalizado: personalizar a configuração de EQ conforme suas preferencias no app.
- Aumentar os graves: Ative o aumento de graves para aprimorar o som de baixa freqüencia.

Defina o tempo para desligamento automtico: ajuste o tempo para desligamento automtico (5/10/20/60 minutos, o padrão é de 20 minutos). A caixa de som desligara automaticamente depois do periodo definido.

Mensagem de voz: silencie ou restaura a mensagem de voz ao ligar/desligar.

lang:pt score:36 filesize: 594.89 K page_count: 11 document date: 2024-11-15



[Soundcore Rave Neo 2 Quick Start Guide: Setup, Features, and Specifications](#)

Comprehensive quick start guide for the Soundcore Rave Neo 2 portable Bluetooth speaker. Learn how to set up, pair devices, use TWS and PartyCast features, and find technical specifications and support.

lang:en score:36 filesize: 577.44 K page_count: 2 document date: 2022-12-05



[pdf] User Manual Installation Guide Warranty Accessories

Anker Soundcore Rave Neo 2 Bluetooth Japan A33A1Safety Ip ankerjapan hubfs aoso manual |||

Anker Innovations Limited. All rights reserved. Soundcore and the Soundcore logo are trademarks of Anker Innovations Limited, registered in the United States and other countries. Model: **A33A1** 5100500XXXX V01 Important Safety Information 1. Please read this user manual carefully and save it for...

lang:en score:34 filesize: 2.88 M page_count: 68 document date: 2022-05-17



[pdf] User Manual Installation Guide Warranty Accessories

User Manual2 Anker Innovations Limited A33A1 2AOKB 2AOKBA33A1 a33a1

Anker Innovations Limited. All rights reserved. Soundcore and the Soundcore logo are trademarks of Anker Innovations Limited, registered in the United States and other countries. Model: **A33A1** 51005003429 V01 Important Safety Information 1. Please read this user manual carefully and save it for f...

lang:en score:33 filesize: 2.84 M page_count: 34 document date: 2022-06-07

EU & UK Declaration of Conformity

Version V1.0

Name of the Manufacturer	Amber Innovations Limited
Address of the Manufacturer	Room 1301-10, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon, Hong Kong
Name of the Product	Grounded Range Neo 2
Trade Mark	Soundcore
Model No.	A33A1

We declare under our responsibility that the above-mentioned product complies with the following recognized directives and standards, applicable as of the date below:

Standards	
EN 62368-1:2014+A11:2017	
IEC 62368-1:2014	
IEC 62368-20:2017	
EN 62368-20:2017	
ETSI EN 300-221-2	
ETSI EN 300-219-1 V2.2	
ETSI EN 300-148-17 V0.2.3	
EN 62311:2008+A1:2010	
EN 62022:2019/A11:2020	
EN 60065:2017/A11:2020	
EN 62311-2:2017	
IEC 62311-14:2013 + ETSI 62311-4:2013+A1:2017 / IEC 62311-2:2017 / IEC 62311-4:2015 + ETSI 62311-4:2015 + ETSI 62311-2:2017	
IEC 62311-15:2017	

Drawings

Radio Equipment Regulation (EU) 2017/1157 (EU 2019/986) as amended by (EU) 2019/986
 (EU) 2020/1320 (EU) 2020/1321 (EU) 2020/1322
 2014/50/EU & 2014/51/EU & 2014/52/EU

I represent and warrant that I am a designated person of the manufacturer. It is my responsibility to be familiar with the relevant harmonized standard(s) and the requirements of the Declaration of Conformity. I declare that the Declaration of Conformity and the information I have provided in support of the safety and performance of the product(s) is true and accurate and do not contain any false or misleading information.

Title	Competent manager	Position	Competence
Name	David Gu	Date:	2022-01-16
City:	Beijing	Signature:	



Soundcore Rave Neo 2 SE User Manual

Comprehensive user manual for the Soundcore Rave Neo 2 SE portable Bluetooth speaker, covering charging, connectivity, features, and specifications.

lang:en score:25 filesize: 2.93 M page_count: 20 document date: 2023-04-06

[\[pdf\]](#) User Manual Quick Start Guide

51005003447 Soundcore Speaker A33A1 EU Offline QSG 80x80mm V1 20220607 User Manual Anker Innovations Limited 2AOKB 2AOKBA33A1 a33a1

■ ■

lang:en score:21 filesize: 4.85 M page_count: 2 document_date: 2022-06-07

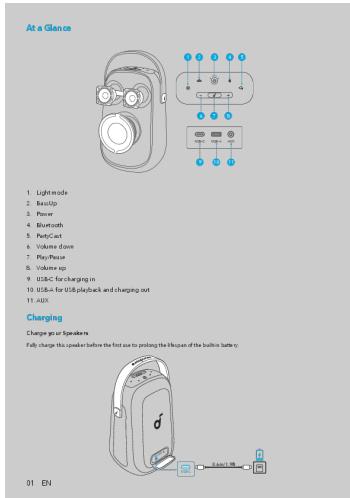


[\[pdf\] Declaration of Conformity](#)

Dostálová Karolína Praha Music Center ANKER SOUNDCORE RAVE NEO 2 A33A1 CZ Návod k použití 482 89 KB Party reproduktor Anker SoundCore Rave Neo černý KASA cz doc 5901636 kasa document 6 3 |||

A_SC_RAVE_NEO2_CZ SOUNDCORE RAVE NEO 2 Nvod k pouzit Pehled 1. Svtele rezim 2. BassUp 3. Power 4. Bluetooth 5. PartyCast 6. Snzen hlasitosti 7.

Pehrt/pozastavit 8. Zvsen hlasitosti 9. USB-C pro nabjen 10. USB-A pro pehrvn a nabjen z USB 11. AUX Nabjen Nabjen reproduktor Ped prvnym pouzitm tento rep... lang:hr score:20 filesize: 482.89 K page_count: 8 document date: 2023-09-23



[Soundcore Rave Neo 2 Portable Bluetooth Speaker User Manual](#)

Comprehensive guide to the Soundcore Rave Neo 2 portable Bluetooth speaker, covering setup, features like Bluetooth, TWS, PartyCast, AUX/USB modes, button controls, light effects, app integration, and specifications.

lang:en score:18 filesize: 1.26 M page_count: 7 document date: 2025-08-20



[\[pdf\] Quick Start Guide Declaration of Conformity](#)

51005003428 Soundcore Speaker A33A1 QSG 80x80mm V1 20220602 Outline Rave Neo 2 Návod k použití CZ 1 51 MB Party reproduktor Anker SoundCore černý KASA cz doc 5901640 kasa document 0 4 6 |||

...

lang:en score:11 filesize: 1.51 M page_count: 2 document date: 2022-06-08