

[manuals.plus](#) /› [Lenovo](#) /› [Lenovo Digital Pen 2 \(Model 4X81H95633\) User Manual](#)

Lenovo 4X81H95633

Lenovo Digital Pen 2 (Model 4X81H95633) User Manual

INTRODUCTION

This manual provides comprehensive instructions for the Lenovo Digital Pen 2 (Model 4X81H95633). This active pen is engineered to enhance your interaction with compatible devices, offering a natural and precise writing, drawing, and navigation experience. Please read this manual thoroughly to ensure proper use and maintenance of your digital pen.



The Lenovo Digital Pen 2 features a fine tip for precise input and two customizable buttons on its side for quick access to functions.

WHAT'S IN THE Box

Verify that all items are present in your package:

- Lenovo Digital Pen 2 (Model 4X81H95633)
- 1 x AAAA Battery (may be pre-installed or separate)

SETUP

1. Battery Installation

The Lenovo Digital Pen 2 requires one AAAA battery for operation. If the battery is not pre-installed, follow these steps:

1. Unscrew the top cap of the pen by turning it counter-clockwise.
2. Insert one AAAA battery with the positive (+) end facing towards the pen tip.
3. Screw the top cap back on clockwise until it is securely fastened.

2. Initial Connection

The pen is designed to connect automatically to compatible Lenovo devices. For first-time use or if you encounter connection issues, follow these guidelines:

1. Ensure that Bluetooth is enabled on your compatible device.
2. Navigate to your device's pen settings or Bluetooth settings.
3. Follow any on-screen prompts to pair the Lenovo Digital Pen 2 with your device.

OPERATING INSTRUCTIONS

Basic Usage

The pen facilitates natural writing, drawing, and precise navigation on your device's screen. Simply touch the pen tip to the screen to interact with applications and the operating system.

Side Button Functions

The Lenovo Digital Pen 2 is equipped with two side buttons. Their functions can typically be customized through your device's pen settings. Common default functions include:

- **Upper Button:** Often defaults to right-click functionality or an eraser tool.
- **Lower Button:** Commonly used for selection or as a lasso tool.

Pressure Sensitivity

The pen supports pressure sensitivity, which allows for varied line thickness and opacity in compatible applications. The output will change based on how firmly you press the pen tip against the screen.

MAINTENANCE

Cleaning the Pen

To clean the pen body, gently wipe it with a soft, dry, lint-free cloth. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the pen's finish or internal components.

Replacing the Pen Tip

The pen tip may wear down with regular use. Replacement tips are available separately. To replace the tip:

1. Gently pull the old tip straight out from the pen using a tip removal tool (if included with replacement tips) or a pair of tweezers.
2. Insert a new tip straight into the pen until it is firmly seated and flush with the pen body.

Battery Replacement

If the pen's performance degrades or it stops responding, the AAAA battery may need to be replaced. Follow the "Battery Installation" steps outlined in the Setup section of this manual.

TROUBLESHOOTING

Pen Not Responding

- Ensure the AAAA battery is correctly installed and has sufficient charge. Replace the battery if necessary.
- Verify that the pen is properly paired with your device via the Bluetooth settings.
- Restart your device to refresh the connection.
- Check the pen tip for any physical damage or wear that might prevent proper contact.

Inaccurate Tracking or Jitter

- Ensure your device's screen is clean and free of dust, smudges, or debris.
- Check for potential electromagnetic interference from other electronic devices nearby.
- Update your device's drivers or operating system to the latest version.

Buttons Not Functioning

- Check your device's pen settings to ensure the buttons are configured as desired.
- Confirm that the pen is properly connected and communicating with your device.

SPECIFICATIONS

Feature	Detail
Model Number	4X81H95633
Dimensions	5.5 x 0.4 x 0.4 inches
Weight	0.64 ounces
Battery Type	1 x AAAA (included)
Type	Active Digital Pen
Color	Gray

WARRANTY INFORMATION

The Lenovo Digital Pen 2 is covered by a standard manufacturer's warranty. For detailed warranty terms, conditions, and duration specific to your region, please refer to the warranty card included with your purchase or visit the official Lenovo support website.

SUPPORT

For further assistance, technical support, or to inquire about replacement parts and accessories, please visit the official Lenovo support website or contact Lenovo customer service. You can find comprehensive resources and contact information at support.lenovo.com.