

[manuals.plus](#) /› [Polaroid](#) /› **Polaroid P4 Music Player Instruction Manual****Polaroid P4**

# Polaroid P4 Music Player Instruction Manual

Model: P4 (9093)

## INTRODUCTION

The Polaroid P4 Music Player is a powerful wireless Bluetooth speaker designed to deliver rich sound in large rooms. It features Bluetooth 5.1 connectivity, dual stereo pairing capabilities, and integration with the Polaroid Music App for enhanced control and access to curated music channels. This manual provides essential information for setting up, operating, and maintaining your P4 Music Player.



Image: Front view of the Polaroid P4 Music Player in black, showcasing its oval design and speaker grilles.

## WHAT'S IN THE BOX

Upon unboxing your Polaroid P4 Music Player, verify that all the following components are included:

- Polaroid P4 Music Player
- USB-C Charging Cable (1m)
- Quick Start Guide
- Safety & Compliance Leaflet

## PRODUCT OVERVIEW

### Controls and Ports

Familiarize yourself with the various controls and connection ports on your Polaroid P4 Music Player for optimal use.



Image: Top view of the Polaroid P4 Music Player, highlighting the control panel with buttons and the volume dial.

- **Power Button:** Located on the top, typically red. Press and hold to power on/off.
- **Play/Pause Button:** Standard playback control.
- **Skip/Previous Track Buttons:** Navigate through your music.
- **Volume Dial:** Analog dial for precise volume adjustment.
- **Heart Button:** Used with the Polaroid Music App to save favorite songs.
- **USB-C Port:** For charging the device.
- **3.5mm AUX IN:** For wired audio connection.

## SETUP

### 1. Charging the Speaker

Before initial use, fully charge your Polaroid P4 Music Player. The device contains a built-in Lithium Ion battery.

1. Connect the provided USB-C charging cable to the USB-C port on the speaker.
2. Connect the other end of the USB-C cable to a compatible USB power adapter (not included). For optimal charging, a Power Delivery (PD) compatible charger is recommended.
3. The charging indicator will illuminate. A full charge takes approximately 7 hours.

### 2. Power On/Off

- To power on, press and hold the Power button until the display activates.
- To power off, press and hold the Power button again until the display turns off.

### 3. Bluetooth Pairing

Connect your P4 Music Player to a Bluetooth-enabled device (smartphone, tablet, laptop) to stream audio wirelessly.

1. Ensure the speaker is powered on.
2. The speaker will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth icon on the display.
3. On your device, navigate to Bluetooth settings and select "Polaroid P4" from the list of available devices.
4. Once connected, the Bluetooth icon on the speaker's display will become solid. The wireless range is up to 30 feet (approximately 9 meters).

### 4. Polaroid Music App

Enhance your experience by downloading the Polaroid Music App, available for iOS and Android devices.

# Polaroid Music App

The Polaroid Music app gives you access to Polaroid Radio and thousands of internet radio stations, allowing you to get the most of your speaker.

The app lets you favorite any songs you love while listening to internet radio. Our built-in Shazam music recognition will match the music and add it to your "Songs" list.

Switch between stations directly on your speaker and like songs, all without touching your phone.

[GET IT ON Google Play](#)  
[Download on the App Store](#)



Image: A smartphone displaying the Polaroid Music App interface, positioned next to the Polaroid P4 Music Player.

- Download the app from the Apple App Store or Google Play Store.
- The app allows you to control the speaker, access Polaroid Radio (a free curated internet radio service), and manage your music channels.

## OPERATING INSTRUCTIONS

### Basic Playback

- **Play/Pause:** Press the Play/Pause button once.
- **Adjust Volume:** Rotate the analog volume dial clockwise to increase volume, counter-clockwise to decrease.
- **Skip Tracks:** Use the Skip/Previous Track buttons to navigate.
- **AUX Input:** Connect an audio device directly using a 3.5mm audio cable (not included) to the AUX IN port.

### Stereo Pairing (Dual Speaker Mode)

For an immersive audio experience, you can pair two Polaroid P4 speakers together to create a stereo sound system.

1. Ensure both Polaroid P4 speakers are powered on and not connected to any other Bluetooth device.
2. Follow the instructions in the Polaroid Music App to initiate stereo pairing between the two speakers.
3. Once paired, one speaker will act as the left channel and the other as the right channel.

### Using the Polaroid Music App

- **Polaroid Radio:** Access and browse various curated internet radio stations directly through the app.
- **Save Songs:** Use the Heart button on the speaker or within the app to save favorite songs. The app uses built-in Shazam music recognition to identify and add tracks to your "Songs" list.
- **Channel Switching:** Easily switch between music channels using the app or the analog dial on the

speaker.

## MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use abrasive cleaners or solvents.
- Water Resistance:** The Polaroid P4 is NOT waterproof. Avoid exposure to water or excessive moisture.
- Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in constant use.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Connect the speaker to a power source using the USB-C cable and allow it to charge for several hours. Ensure your charger is a Power Delivery (PD) compatible type.
No sound from the speaker.	Volume is too low; device not paired; incorrect input source.	Increase the speaker's volume. Ensure your device is successfully paired via Bluetooth or connected via AUX. Check the audio output settings on your connected device.
Bluetooth pairing fails.	Speaker is already paired; device is out of range; Bluetooth on device is off.	Ensure the speaker is in pairing mode. Turn off Bluetooth on other nearby devices. Move your device closer to the speaker. Turn Bluetooth off and on again on your device.
Stereo pairing not working.	Incorrect pairing procedure; speakers too far apart.	Refer to the Polaroid Music App for detailed stereo pairing instructions. Ensure both speakers are within close proximity.

## SPECIFICATIONS

Model Name	Polaroid Music Player
Model Number	9093
Speaker Type	Coaxial
Special Feature	Stereo Pairing
Connectivity Technology	Auxiliary, Bluetooth, USB
Wireless Communication	Bluetooth 5.1
Maximum Range	30 Feet (approx. 9 meters)

<b>Power Source</b>	Battery Powered (1 Lithium Ion battery included)
<b>Charging Time</b>	7 Hours
<b>Playback Time</b>	Up to 15 hours
<b>Speaker Maximum Output Power</b>	60 Watts
<b>Product Dimensions (D x W x H)</b>	3.54" x 13.4" x 8.66" (90mm x 340mm x 220mm)
<b>Item Weight</b>	5.92 pounds (2.68 kg)
<b>Water Resistance Level</b>	Not Water Resistant
<b>Control Method</b>	App, Manual Controls

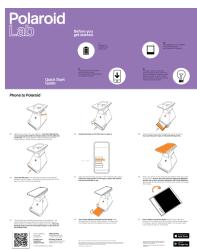
## WARRANTY AND SUPPORT

The Polaroid P4 Music Player comes with a Limited Warranty. Please refer to the included Safety & Compliance Leaflet for detailed warranty terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please visit the official Polaroid support website or contact their customer service department. Contact information can typically be found on the Polaroid website or in the product packaging.

## Related Documents - P4

	<p><a href="#"><u>Polaroid P3 Music Player User Manual</u></a></p> <p>User manual for the Polaroid P3 Music Player, detailing features, setup, connectivity, and operation. Learn how to connect, play music, and use advanced features like Bluetooth and stereo pairing.</p>
	<p><a href="#"><u>Polaroid P3 Music Player Quick Start Guide</u></a></p> <p>A concise guide to setting up and using the Polaroid P3 Music Player, covering charging, power on, Bluetooth connectivity, and stereo pairing.</p>

	<p><a href="#"><b>Polaroid P2 Music Player Quick Start Guide</b></a></p> <p>This quick start guide provides essential information for setting up and using your Polaroid P2 Music Player, covering charging, power, Bluetooth connectivity, app integration, and stereo pairing.</p>
	<p><a href="#"><b>Polaroid P2 Music Player User Manual</b></a></p> <p>User manual for the Polaroid P2 Music Player, detailing features, operation, and specifications.</p>
	<p><a href="#"><b>Polaroid P1 Music Player Quick Start Guide</b></a></p> <p>Get started quickly with the Polaroid P1 Music Player. This guide covers charging, powering on, Bluetooth connection, and stereo pairing for your portable music device.</p>
	<p><a href="#"><b>Polaroid Lab Quick Start Guide: Setup and Usage Instructions</b></a></p> <p>Learn how to set up and use your Polaroid Lab instant photo printer with this comprehensive quick start guide. Includes charging, app connection, film insertion, and photo development steps.</p>