

## RYOBI EZClean

# RYOBI ONE+ HP 18V BRUSHLESS EZCLEAN 600 PSI Cordless Cold Water Power Cleaner

## INSTRUCTION MANUAL

### 1. Introduction

---

Thank you for choosing the RYOBI ONE+ HP 18V BRUSHLESS EZCLEAN Cordless Cold Water Power Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new power cleaner. Please read this manual thoroughly before first use and keep it for future reference.

This power cleaner is designed for light to medium-duty cleaning tasks, offering portability and convenience for various applications such as cleaning vehicles, patio furniture, windows, and outdoor equipment.

### 2. Safety Information

---

**WARNING: Read all safety warnings, instructions, illustrations, and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury.**

- Always wear eye protection with side shields marked to comply with ANSI Z87.1.
- Do not operate the power cleaner when fatigued or under the influence of drugs, alcohol, or medication.
- Keep children and bystanders away while operating the power cleaner.
- Never direct the water stream at people, pets, or electrical devices.
- Use only cold water with this power cleaner. Do not use hot water or corrosive chemicals.
- Ensure all connections are secure before operating to prevent leaks and maintain pressure.
- Use only RYOBI ONE+ 18V batteries and chargers.

### 3. Package Contents

---

Carefully unpack your power cleaner and inspect for any damage. Ensure all items are present:

- RYOBI EZCLEAN Power Cleaner Unit
- 20-foot High-Pressure Hose
- Various Nozzles (e.g., Turbo, 15°, Soap)



**TOOL ONLY**

Battery Sold Separately

**REMEMBER YOUR BATTERY & CHARGER**



**RYOBI** **18V ONE+**

18V ONE+ HIGH PERFORMANCE Lithium-Ion  
4.0 Ah Battery and Charger Starter Kit

MODEL: PSK004 | SKU: 1005931360

An image illustrating a RYOBI 18V ONE+ HP Lithium-Ion 4.0 Ah Battery and Charger Starter Kit, with a clear label indicating that the power cleaner is sold as a 'TOOL ONLY' and the battery and charger are 'Sold Separately'.

#### 4. Setup

1. **Install the Battery:** Align the ribs on the battery with the grooves in the power cleaner's battery port. Slide the battery into place until it clicks securely. To remove, press the release latch and slide the battery out.
2. **Connect the High-Pressure Hose:** Attach one end of the 20-foot high-pressure hose to the outlet on the power cleaner and the other end to the spray wand. Ensure connections are hand-tight.
3. **Connect Water Source:** Your EZCLEAN power cleaner offers multiple water source options:
  - **Garden Hose:** Connect a standard garden hose to the quick connect adapter on the power cleaner.
  - **Siphon Hose (Bucket/Lake):** Attach the siphon hose to the power cleaner's inlet. Place the filtered end of the siphon hose into a bucket of water, lake, or other suitable water source. Ensure the filter is fully submerged.
  - **Water Bottle:** Screw a compatible plastic water bottle directly onto the power cleaner's inlet.



**PORTABILITY**

**CONVENIENT**  
**ON-THE-GO CLEANING**

A person is shown using the RYOBI EZCLEAN power cleaner to clean a muddy bicycle outdoors. The cleaner is powered by a battery and draws water from a connected plastic bottle, highlighting its portability.



A man stands on a wooden bridge over a lake, using the RYOBI EZCLEAN power cleaner. A hose extends from the cleaner into the lake, demonstrating its ability to draw water from natural sources for remote cleaning tasks.

4. **Attach Nozzle:** Select the appropriate nozzle for your cleaning task and firmly attach it to the end of the spray wand.

## 5. Operating Instructions

---

1. **Prime the Pump:** Before starting, ensure the water source is connected and turned on (if using a garden hose). Squeeze the trigger on the spray wand for a few seconds to allow water to flow through the pump and expel any air.
2. **Start the Cleaner:** Press the power button on the unit. The cleaner will be in standby mode.
3. **Select Pressure Mode:** Use the 'MODE' button on the side of the unit to cycle through LOW, MED, and HIGH pressure settings. Choose the setting appropriate for your cleaning task.



A detailed close-up of the RYOBI EZCLEAN power cleaner's control panel, showing the 'MODE' button and indicators for 'LOW', 'MED', and 'HIGH' pressure settings.

4. **Begin Cleaning:** Aim the nozzle at the surface to be cleaned and squeeze the trigger. Maintain a safe distance from the surface to avoid damage. Work in sections, overlapping slightly.
5. **Cleaning Applications:** This power cleaner is suitable for various tasks:



A woman is operating the RYOBI EZCLEAN power cleaner to clean the side of a boat while standing on a dock. Below the image, icons suggest various applications such as patio furniture, vehicles, windows, beach gear, bicycles, camping gear, boats, outdoor equipment, and grills.

**INCREASED PERFORMANCE**

**85%**  
**MORE POWERFUL\***



\* Compared to RY120350

A close-up of a person using the RYOBI EZCLEAN power cleaner to spray water onto a dirty car door. The cleaner is connected to a garden hose, demonstrating its use for vehicle cleaning.



A person is cleaning patio chairs next to a swimming pool using the RYOBI EZCLEAN power cleaner. The cleaner is drawing water directly from the pool via a siphon hose, illustrating its versatile water source options.

6. **Stop the Cleaner:** Release the trigger to stop the water flow. Press the power button to turn off the unit. If using a garden hose, turn off the water supply.

## 6. Maintenance

---

- **Cleaning the Unit:** Wipe down the exterior of the power cleaner with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Nozzle Care:** If a nozzle becomes clogged, use a small wire or the included nozzle cleaning tool to clear any debris. Rinse thoroughly.
- **Hose Care:** After each use, drain all water from the high-pressure hose and siphon hose. Coil them

neatly for storage.

- **Battery Storage:** Store batteries in a cool, dry place away from direct sunlight and extreme temperatures. Do not store batteries in a discharged state for extended periods.
- **Winterization:** In freezing climates, ensure all water is drained from the pump, hoses, and spray wand to prevent damage from freezing. Store the unit in a heated area.

## 7. Troubleshooting

---

Problem	Possible Cause	Solution
Unit does not start	Battery not installed correctly or discharged	Ensure battery is fully charged and properly seated.
Low or no water pressure	<ul style="list-style-type: none"><li>• Nozzle clogged</li><li>• Insufficient water supply</li><li>• Air in the pump</li><li>• Hose kinked</li></ul>	<ul style="list-style-type: none"><li>• Clean nozzle.</li><li>• Check water source connection and supply.</li><li>• Prime the pump by squeezing trigger without power until water flows.</li><li>• Straighten hose.</li></ul>
Water leaks from connections	Loose connections or worn O-rings	Tighten all connections. Inspect and replace O-rings if damaged.

## 8. Specifications

---

- **Brand:** RYOBI
- **Model:** EZClean
- **Power Source:** Battery Powered (RYOBI ONE+ 18V)
- **Maximum Pressure:** 600 PSI (Pounds per Square Inch)
- **Maximum Flow Rate:** 0.7 GPM (Gallons Per Minute)
- **Hose Length:** 20 Feet
- **Item Weight:** 8.38 Pounds
- **Color:** Green
- **UPC:** 046396036766

## 9. Warranty and Support

---

For warranty information, please refer to the separate warranty card included with your product or visit the official RYOBI website. For technical support, replacement parts, or service inquiries, please contact RYOBI customer service directly. Contact details can typically be found on the RYOBI website or on your product packaging.