

WINIA KOS-1N1SS

Winia KOS-1N1SS Microwave Oven User Manual

Model: KOS-1N1SS

1. INTRODUCTION

Thank you for purchasing the Winia KOS-1N1SS Microwave Oven. This manual provides important information for the safe and efficient operation of your appliance. Please read it thoroughly before use and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure proper ventilation around the microwave.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Always use microwave-safe cookware.
- Supervise children closely when the microwave is in use.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Winia KOS-1N1SS Microwave Oven.

- **Control Panel:** Digital display and buttons for various functions.
- **Oven Door:** Features a black glass panel and a sturdy, elegant handle.

- **Turntable:** Glass tray for even cooking.
- **Oven Cavity:** Easy-to-clean interior with Diamond Cooking technology for uniform heating.
- **Cabinet:** Durable steel construction.



Image: Front view of the Winia KOS-1N1SS Microwave Oven, showing the control panel and door.



Image: Interior view of the Winia KOS-1N1SS Microwave Oven, showing the glass turntable and cavity.

4. SETUP AND INSTALLATION

Follow these steps to set up your microwave oven:

1. **Unpacking:** Carefully remove all packaging materials and accessories. Check the oven for any damage, such as dents or a misaligned door. Do not operate if damaged.
2. **Placement:** Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it. Ensure there is adequate ventilation space around the oven (at least 10 cm on the sides and back, and 20 cm above).
3. **Power Connection:** Plug the power cord into a standard grounded electrical outlet. Ensure the voltage matches the specifications of the oven.
4. **Turntable Installation:** Place the roller ring in the center of the oven floor, then place the glass turntable on top of the roller ring, ensuring it sits securely.

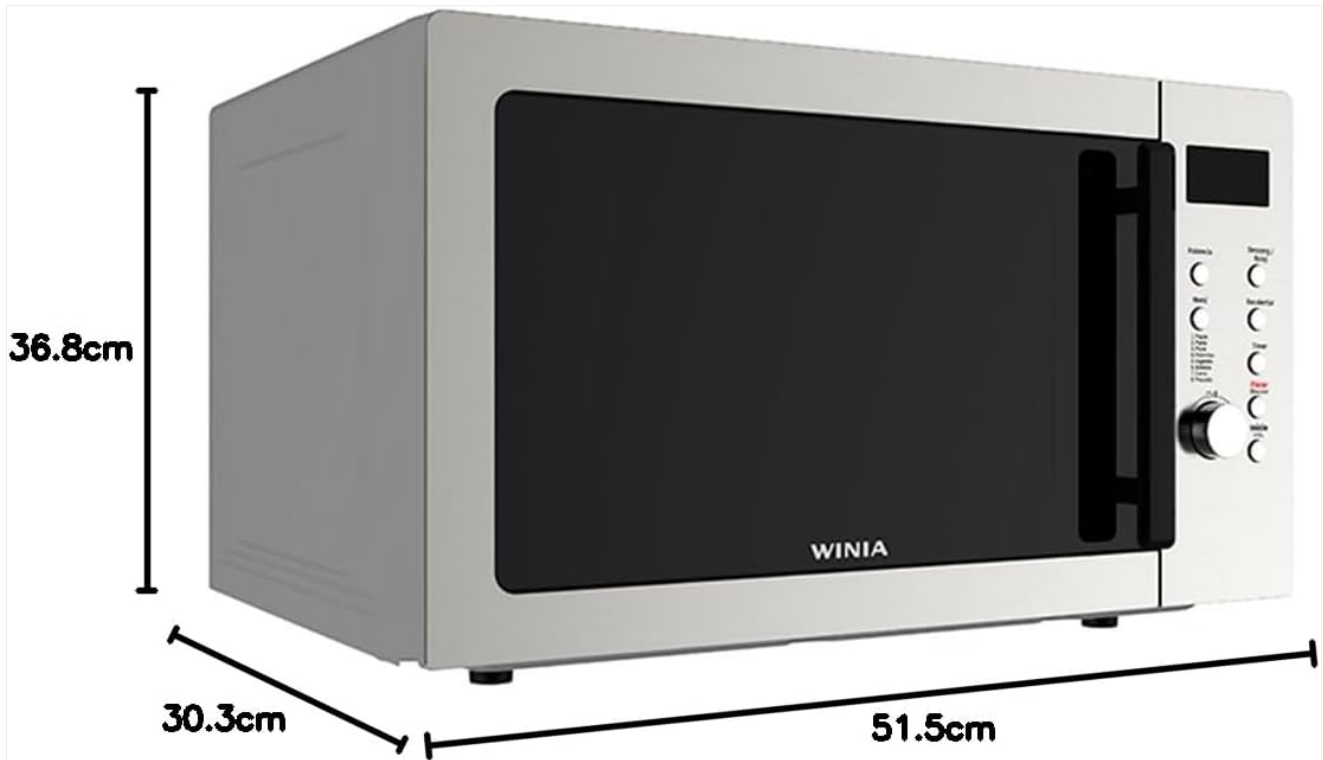


Image: Diagram showing the dimensions of the Winia KOS-1N1SS Microwave Oven (30.3 cm depth, 51.5 cm width, 36.8 cm height).

5. OPERATING INSTRUCTIONS

This section details the various functions and how to operate your microwave oven.

5.1. Setting the Clock

To set the current time, press the 'Clock' button and use the dial or number pads to enter the time. Confirm by pressing 'Clock' again.

5.2. Microwave Cooking

To cook with microwave power:

1. Place food in a microwave-safe container on the turntable.
2. Close the door.
3. Press the 'Power' button to select one of the 5 power levels.
4. Use the dial or number pads to set the desired cooking time (up to 60 minutes).
5. Press 'Start' to begin cooking.

5.3. Automatic Menus

The oven features 8 automatic menus for common food items. Refer to the control panel for specific menu options. To use:

1. Place food in the oven.
2. Press the 'Menu' button repeatedly to select the desired automatic program.
3. Adjust the quantity/weight if prompted.
4. Press 'Start'.

5.4. Defrost Function

The defrost function allows you to thaw food by weight or time.

- **Defrost by Weight:** Press the 'Defrost' button, then select the weight between 100 to 1500 grams using the dial. Press 'Start'.
- **Defrost by Time:** Press the 'Defrost' button twice, then set the desired defrosting time (up to 60 minutes) using the dial. Press 'Start'.

5.5. Reheat Function

Use the 'Reheat' function to quickly warm up pre-cooked food. Press the 'Reheat' button and then 'Start'. The oven will automatically determine the optimal reheating time.

5.6. Express Timer

For quick heating, use the 'Express Timer' function. Press the 'Express' button to add cooking time in increments (e.g., 30 seconds or 1 minute) up to 60 minutes. Press 'Start' to begin.

5.7. Child Lock

To prevent unintended operation, especially by children, activate the child lock. Consult your control panel for specific instructions on how to activate and deactivate this feature, typically by holding a specific button for a few seconds.

5.8. Diamond Cooking Technology

The Winia KOS-1N1SS features 11 diamond-shaped patterns on the back of the internal cavity. This design ensures uniform cooking and defrosting by reflecting microwave energy more effectively throughout the oven.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- **Interior Cleaning:** For spills and splatters, wipe the interior with a damp cloth and mild detergent. For stubborn stains, place a bowl of water with lemon slices inside and heat for a few minutes to loosen residue, then wipe clean.
- **Turntable and Roller Ring:** The glass turntable and roller ring can be removed and washed in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Door Seals:** Keep the door seals clean to ensure proper closure and efficient operation.
- **Do not use harsh chemicals or abrasive cleaning pads on any part of the microwave.**

7. TROUBLESHOOTING

If you encounter any issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is firmly in outlet; Close door securely; Check household fuse or reset circuit breaker.
Food not heating	Incorrect cooking time/power level set; Microwave-safe cookware not used.	Adjust time/power; Use appropriate cookware.
Turntable not rotating	Turntable not properly placed; Obstruction under turntable.	Ensure turntable and roller ring are correctly positioned; Remove any obstructions.
Unusual noise during operation	Loose parts; Food container touching oven walls.	Check for loose parts; Ensure food container is centered and not touching sides. If noise persists, contact service.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Detailed technical specifications for the Winia KOS-1N1SS Microwave Oven:

Feature	Specification
Brand	WINIA
Model Number	KOS-1N1SS
Color	Silver
Product Dimensions (D x W x H)	30.3 x 51.5 x 36.8 cm
Capacity	1.1 Cubic Feet
Power Output	1100 Watts
Material	Stainless Steel
Special Feature	Control Panel Lock
Product Weight	11 Kilograms
Installation Type	Countertop
Included Components	Microwave Oven

9. WARRANTY AND SUPPORT

Your Winia KOS-1N1SS Microwave Oven comes with a **3-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

For warranty claims, technical assistance, or any questions regarding your product, please refer to the contact information provided with your purchase documentation or visit the official Winia website for customer support details.

Please retain your proof of purchase for warranty validation.