

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [FurReal](#) /
- › [FurReal Walkalots Big Wags Walking Dog Toy F8131 Instruction Manual](#)

FurReal F8131

FurReal Walkalots Big Wags Walking Dog Toy F8131 Instruction Manual

INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your FurReal Walkalots Big Wags Walking Dog Toy, model F8131. This interactive electronic pet is designed to provide an engaging play experience with its walking motion, sounds, and cuddly design.

WHAT'S IN THE BOX

- 1 x FurReal Walkalots Big Wags Pet
- 1 x Leash (2 pieces)
- 1 x Handle
- 1 x Connector
- 1 x Instruction Sheet



Image of the FurReal Walkalots Big Wags Walking Dog Toy in its packaging, showing the plush dog and its detachable leash.

SETUP

1. Battery Installation

The FurReal Walkalots Big Wags toy requires 3 LR44 batteries, which are included. Locate the battery compartment on the underside of the pet. Use a small Phillips head screwdriver to open the compartment, insert the batteries according to the polarity indicators (+/-), and then securely close the compartment.

2. Leash Assembly

1. Connect the two pieces of the leash together until they click securely.
2. Attach the handle to the top end of the assembled leash.
3. Insert the connector end of the leash into the designated slot on the back of the pet's collar until it is firmly in place.



Close-up image showing how to connect the two parts of the leash to the back of the FurReal Walkalots dog.

OPERATING INSTRUCTIONS

Walking Your Pet

Once the leash is attached and batteries are installed, gently push the leash forward to make your FurReal Walkalots pet move. It will exhibit a bouncy walk and its head will wobble as it moves. The pet also makes various puppy-like sounds and funny noises during interaction.



Image of the FurReal Walkalots dog being walked by a child, demonstrating its bouncy walk and wobbling head.

Interactive Play

The FurReal Walkalots pet is designed for interactive play. In addition to walking, it responds with sounds. You can also cuddle your pet for a comforting experience.



Image of a child gently holding and cuddling the FurReal Walkalots dog, highlighting its soft plush texture.

MAINTENANCE

Cleaning

To clean your FurReal Walkalots pet, gently wipe the surface with a damp cloth. Do not immerse the toy in water, as this can damage the electronic components. Avoid using harsh chemicals or abrasive cleaners.

Storage

When not in use, store the toy in a clean, dry place away from direct sunlight and extreme temperatures. Remove batteries if the toy will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

- **Pet does not move or make sounds:** Check if the batteries are correctly installed and not depleted. Replace with new LR44 batteries if necessary. Ensure the leash is properly connected.
- **Movement is sluggish:** This may indicate low battery power. Replace the batteries.

SPECIFICATIONS

Model Number	F8131
Product Dimensions	5.25 x 9 x 9 inches
Item Weight	1.08 pounds
Batteries Required	3 x LR44 (included)
Recommended Age	4 years and up

SAFETY INFORMATION

WARNING: Small parts may be generated. Not for children under 3 years.

Always supervise children during play. Ensure all components are securely attached before use. Do not modify the toy or its components.

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Official product video demonstrating the assembly and interactive features of the FurReal Walkalots Big Wags Walking Dog Toy, including its walking motion and sounds.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official FurReal website. Keep your purchase receipt for any warranty claims.