

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Ceybo](#) /
- › [Hisense Roku TV Remote Control User Manual](#)

Ceybo 3226001217

Hisense Roku TV Remote Control User Manual

Model: 3226001217

INTRODUCTION

This user manual provides essential information for the operation and maintenance of your Ceybo Original OEM Remote Control, compatible with Hisense Roku TVs. This remote is designed for ease of use, offering direct access to popular streaming services and essential TV functions without complex setup.



Image: Front and back view of the Ceybo Hisense Roku TV remote control, showcasing its ergonomic design.

COMPATIBILITY

This remote control is specifically designed for use with Hisense Roku TV models. It is not compatible with Roku Streaming Players, Roku Boxes, or Roku Sticks.

Compatible Hisense Roku TV Models:

- 43R6E3, 50R6E3, 58R6E3, 65R6E3
- 43R6E1, 50R6E1, 55R6E1, 65R6E1
- 58R6E, 55R6070G, 55R6090G
- 75R6E3, 75R6E1

Compatible With All Hisense Roku TVs



Image: The remote control displayed alongside several Hisense Roku TV models, illustrating its broad compatibility.



Image: The remote control positioned near a Roku Stick and Roku Box, with text clearly stating it is not suitable for these devices.

SETUP

Installing Batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Note: This remote control does not require any programming or pairing with your Hisense Roku TV. Once batteries are installed, it is ready for immediate use.



Power it up with 2 AAA batteries

Image: A close-up view of a AAA battery, emphasizing that the remote requires two AAA batteries for operation.



No pairing needed just add batteries

Image: A hand holding the remote control, accompanied by text stating that no pairing is required, only battery installation.

OPERATING INSTRUCTIONS

The remote control provides intuitive access to all standard Hisense Roku TV functions.

Key Functions:


- **Power Button** (⏻): Turns the TV on or off.
- **Directional Pad (Up, Down, Left, Right)**: Navigates menus and selects items.
- **OK Button**: Confirms selections.
- **Back Button** (⏪): Returns to the previous screen.
- **Home Button** (🏠): Returns to the Roku TV home screen.
- **Volume Buttons (Side)**: Adjusts the TV volume up or down.
- **Mute Button (Side)**: Mutes or unmutes the TV audio.
- **Instant Replay Button** (↺): Replays the last few seconds of content.
- **Sleep Timer Button** (⏸): Activates the sleep timer function.
- **Asterisk Button** (*): Accesses options or settings within an app or menu.
- **Playback Controls (Rewind, Play/Pause, Fast Forward)**: Controls media playback.

Dedicated Hotkeys:

The remote features dedicated shortcut buttons for quick access to popular streaming services:

- **Netflix**
- **Disney+**
- **Apple TV**

- HBO Max

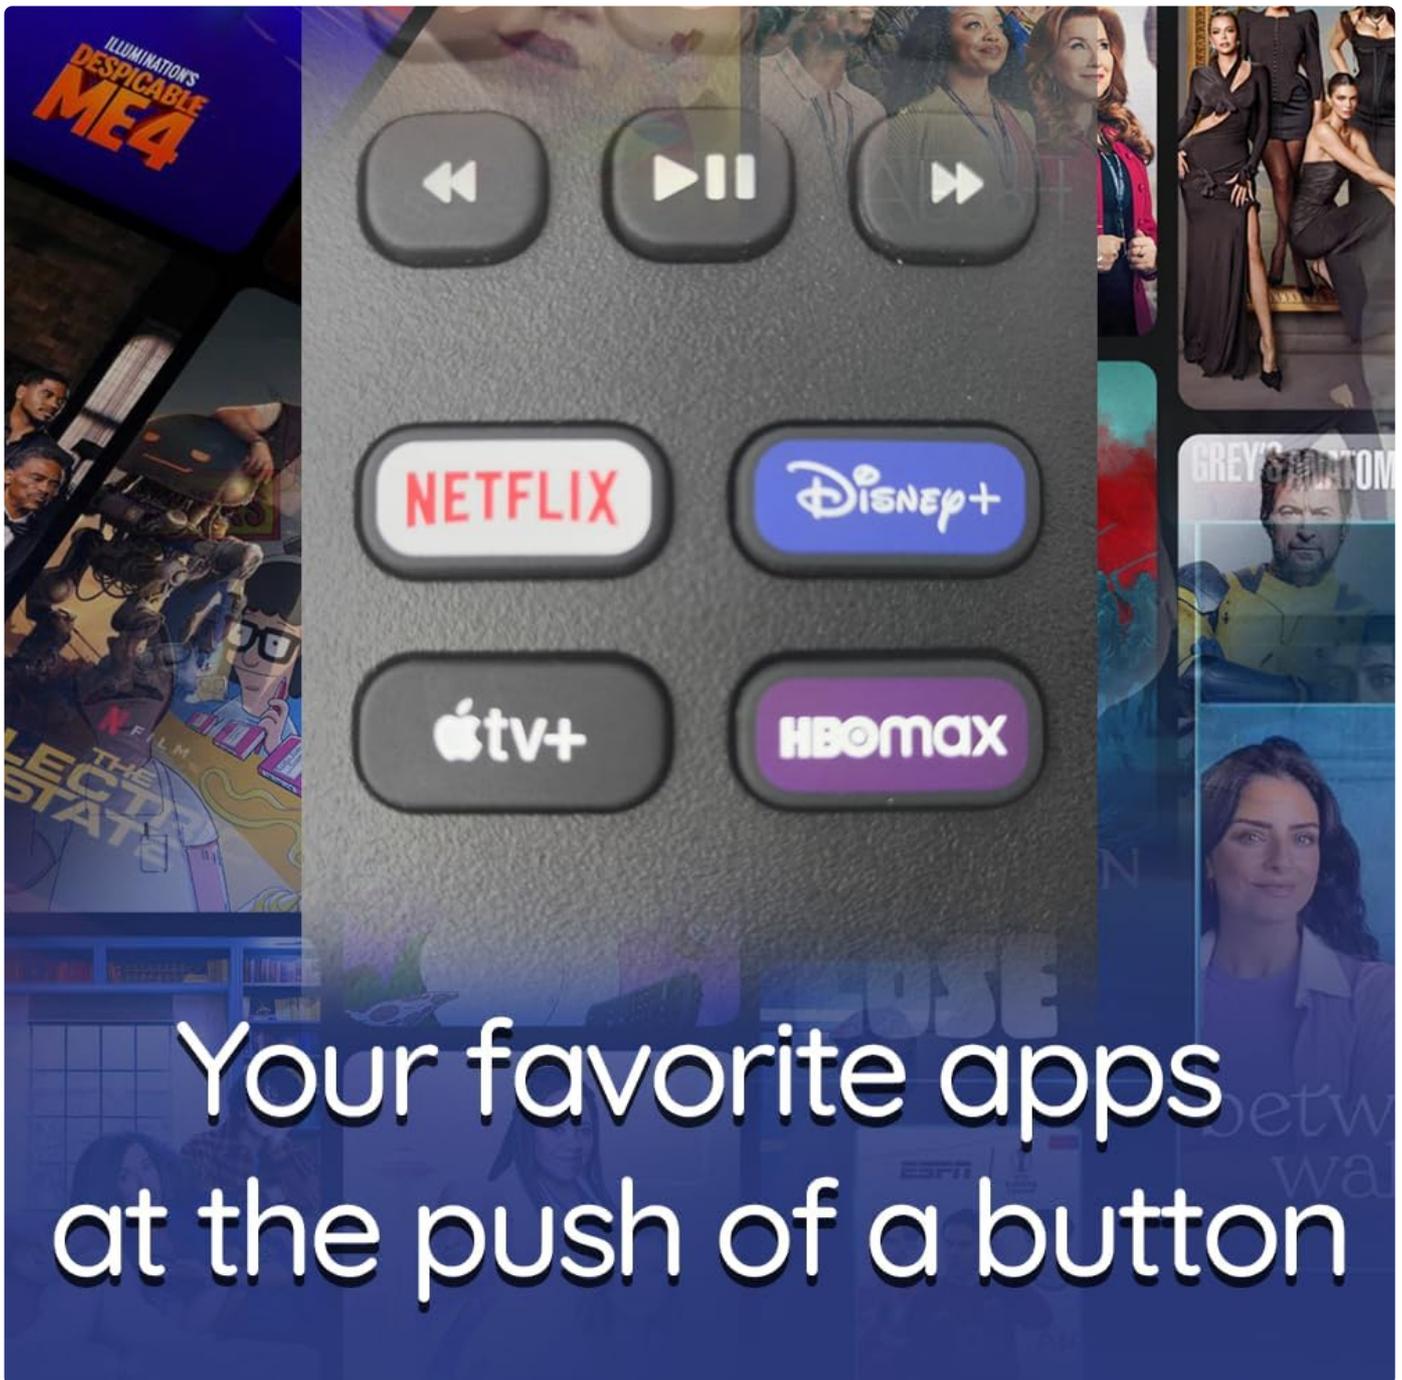

Your favorite apps
at the push of a button

Image: A detailed view of the remote's dedicated hotkeys, providing direct access to popular streaming applications.

Play, pause,
skip ahead or
go back,
total control in
your hands.



Side buttons
make
volume control
a breeze.

Image: The remote control with emphasis on the playback controls (rewind, play/pause, fast forward) and the side-mounted volume buttons.

Drift off with ease—just tap the moon icon to set your sleep timer.



Image: A close-up of the remote control, highlighting the moon icon button used to activate the sleep timer function.

MAINTENANCE

Cleaning:

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the remote's finish or internal components.

Battery Replacement:

Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

Storage:

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be

used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries. Obstruction between remote and TV. Remote is out of range.	<ol style="list-style-type: none">1. Replace batteries with new AAA batteries, ensuring correct polarity.2. Remove any objects blocking the line of sight between the remote and the TV's IR receiver.3. Move closer to the TV.
Certain buttons not working.	Dirt or debris under the button. Internal malfunction.	<ol style="list-style-type: none">1. Gently clean around the button with a soft, dry cloth.2. If the issue persists, the remote may require replacement.
Remote works intermittently.	Low battery power. Interference.	<ol style="list-style-type: none">1. Replace batteries.2. Ensure no strong light sources (e.g., direct sunlight, fluorescent lights) are interfering with the TV's IR receiver.

If troubleshooting steps do not resolve the issue, please refer to the support section.

SPECIFICATIONS

Feature	Detail
Model Number	3226001217
Brand	Ceybo
Compatibility	Hisense Roku TVs (Specific models listed in Compatibility section)
Power Source	2 x AAA Batteries (not included)
Special Features	Ergonomic design, Dedicated hotkeys (Netflix, Disney+, Apple TV, HBO Max), Volume control buttons
Dimensions (L x W x H)	5.55 x 2.2 x 0.91 inches
Weight	1.76 ounces
Voice Control	Not supported
Headphone Jack	Not supported

WARRANTY AND SUPPORT

Warranty Information:

For information regarding the warranty of your Ceybo remote control, please refer to the purchase documentation or contact the seller directly. Standard return policies typically allow for returns or replacements within 30 days of purchase, provided the item is in its original condition.

Customer Support:

If you encounter issues not covered in the troubleshooting section or require further assistance, please contact Ceybo customer support or the retailer from whom you purchased the product. Provide your product model number (3226001217) and a detailed description of the issue for efficient support.

You can visit the [Ceybo Store on Amazon](#) for more product information and support options.

© 2025 Ceybo. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.