

D88 D88

D88 Multifunctional Bluetooth Alarm Clock with Speaker User Manual

Model: D88

1. PRODUCT OVERVIEW

The D88 Multifunctional Bluetooth Alarm Clock with Speaker is a versatile device designed for various environments such as bedrooms and offices. It combines the functionality of a digital alarm clock, a Bluetooth speaker, and an FM radio, offering convenience and entertainment.

Key features include a digital display, dual alarm settings, and a built-in speaker for audio playback. The device is battery-powered for portability and features a sleek design suitable for tabletop placement.



Image 1.1: Front angled view of the D88 Multifunctional Bluetooth Alarm Clock. The device is white with a black digital display showing "15:12" and an alarm icon. Several control buttons are visible on the top surface.

2. PACKAGE CONTENTS

Please check the package for the following items:

- D88 Multifunctional Bluetooth Alarm Clock with Speaker
- USB Charging Cable
- User Manual

3. SETUP GUIDE

3.1 Initial Charging

1. Connect the provided USB charging cable to the charging port on the device.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer's USB port.
3. Allow the device to charge fully before first use. The charging indicator will typically change color or turn off once charging is complete.

3.2 Powering On/Off

- To power on: Press and hold the Power button (usually located on the top or back) for a few seconds until the display illuminates.
- To power off: Press and hold the Power button again until the display turns off.

3.3 Setting the Time

1. In time display mode, press the "Time Set" button (refer to device diagram for exact button).
2. Use the "+" and "-" buttons to adjust the hour.
3. Press "Time Set" again to confirm the hour and move to minute adjustment.
4. Use the "+" and "-" buttons to adjust the minutes.
5. Press "Time Set" one more time to save the time settings.

4. OPERATING INSTRUCTIONS

4.1 Bluetooth Speaker Function

1. Ensure the device is powered on.
2. Press the "Mode" button to switch to Bluetooth mode. The display will show a Bluetooth icon or "BT".
3. On your mobile device, enable Bluetooth and search for available devices.
4. Select "D88" (or similar name) from the list to pair. A confirmation sound will indicate successful pairing.
5. You can now play audio from your mobile device through the D88 speaker.



Mirror Clock Bluetooth Wireless Speaker

suitable for bedroom, living room, study,
office, etc

makes it the best gift for your family, friends
and lovers on Christmas, birthday, Valen-
tine's Day or anniversary.

Image 4.1: The D88 alarm clock speaker placed on a desk, functioning as a mirror clock and Bluetooth wireless speaker. The digital display shows "15:12".

4.2 Setting Alarms (Dual Alarm Function)

The D88 supports setting two independent alarms.

1. Press the "Alarm 1" button (or "Alarm Set" button and cycle to Alarm 1). The alarm time will flash.
2. Use the "+" and "-" buttons to adjust the hour for Alarm 1.
3. Press "Alarm 1" again to confirm the hour and move to minute adjustment.
4. Use the "+" and "-" buttons to adjust the minutes for Alarm 1.
5. Press "Alarm 1" again to save and activate Alarm 1. An alarm icon will appear on the display.
6. Repeat steps 1-5 for "Alarm 2" using the "Alarm 2" button.
7. To deactivate an alarm, press its respective alarm button until the alarm icon disappears from the display.

Can be used as a mobile phone holder.

The dual alarm clock allows you to set 2 independent wake-up alarms at different times

The volume can also be adjusted.



Image 4.2: The D88 alarm clock on a desk, illustrating its capability as a mobile phone holder and its dual alarm functionality. The display shows "15:12" with an alarm icon.

4.3 Radio Function

1. Press the "Mode" button to switch to FM Radio mode. The display will show the frequency.
2. Press and hold the "Play/Pause" button to initiate an automatic station scan. The device will save available stations.
3. Use the "+" and "-" buttons to navigate through the saved stations.

4.4 Volume Adjustment

Use the dedicated volume buttons (usually marked with "+" and "-") to increase or decrease the audio volume for both Bluetooth and Radio modes.

4.5 Mobile Phone Holder

The D88 features a retractable or integrated mobile phone holder. Gently pull out or extend the holder from the front base of the device to place your smartphone.



Image 4.3: Angled view of the D88 alarm clock with its mobile phone holder extended from the front base. The digital display shows "15:12".

5. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid abrasive cleaners or solvents.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Exposure:** This device is not waterproof. Avoid exposure to water or high humidity.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly.

6. TROUBLESHOOTING

- **Device not powering on:**
 - Ensure the device is fully charged.
 - Check the charging cable and power source.
- **No sound from speaker:**
 - Increase the volume on both the device and your connected Bluetooth source.
 - Ensure the device is correctly paired via Bluetooth.

- Check if the device is in the correct mode (Bluetooth or Radio).

- **Bluetooth pairing issues:**

- Ensure the device is in Bluetooth pairing mode.
- Turn off and on Bluetooth on your mobile device.
- Move your mobile device closer to the alarm clock.
- Forget the device from your mobile device's Bluetooth list and try pairing again.

- **Alarm not sounding:**

- Ensure the alarm is set and activated (alarm icon visible).
- Check the alarm volume setting.

- **Radio reception is poor:**

- Adjust the position of the device to improve signal.
- Perform an automatic station scan again.

7. SPECIFICATIONS

Model	D88
Display Type	Digital
Special Features	Alarm, Radio, Bluetooth Speaker, Mobile Phone Holder
Power Source	Battery Powered
Room Type	Bedroom, Office
Mounting Type	Tabletop
Color	White

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact your retailer. Specific warranty terms may vary by region and retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question