

[Manuals.plus](#) /

› [MEDION](#) /

› MEDION P64145 DAB+ Radio with Bluetooth and CD Player User Manual

MEDION P64145

MEDION P64145 DAB+ Radio with Bluetooth and CD Player

USER MANUAL

Model: P64145 | Brand: MEDION

1. Introduction

Thank you for choosing the MEDION P64145 DAB+ Radio with Bluetooth and CD Player. This compact stereo system offers a versatile audio experience, combining digital DAB+ radio, traditional FM radio, CD playback, USB MP3 playback, and wireless music streaming via Bluetooth. It also features an alarm clock with snooze functionality. This manual provides detailed instructions for setting up, operating, and maintaining your device to ensure optimal performance and longevity.

2. Safety Instructions

- Read all instructions carefully before using the device.
- Keep this manual for future reference.
- Do not expose the device to rain or moisture to prevent fire or electric shock.
- Ensure proper ventilation; do not block any ventilation openings.
- Do not place the device near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

3. Package Contents

Please check the package contents upon unpacking. If any items are missing or damaged, contact your retailer immediately.

- MEDION LIFE MD44125 P64145 AiO Audio System
- Remote Control (with battery)

- Power Cable
- User Manual (this document)
- Warranty Card

4. Product Overview

Familiarize yourself with the main components and controls of your MEDION P64145.



Figure 4.1: Front view of the MEDION P64145 with its remote control.

4.1 Front Panel Controls

- **Display:** Shows current mode, station information, track details, and time.
- **CD Slot:** For inserting audio and MP3 CDs.
- **Volume Knob:** Adjusts the master volume. Press to confirm selections.
- **Navigation Buttons:** For menu navigation and track/station selection.
- **Mode Button:** Switches between DAB+, FM, CD, Bluetooth, USB, and AUX modes.
- **Power Button:** Turns the unit on/off or into standby mode.

4.2 Rear Panel Connections



Figure 4.2: Rear panel connections including power, USB, and AUX ports.

- **Power Input:** Connect the supplied power cable here.
- **FM/DAB Antenna:** Extendable telescopic antenna for radio reception.
- **USB Port:** For connecting USB storage devices for MP3 playback.
- **AUX-In (3.5mm):** Connect external audio devices using a 3.5mm audio cable.
- **Headphone Jack:** For private listening.

4.3 Remote Control

Digitaler Radioempfang mit DAB+

Lieblingslieder in bestmöglicher Klangqualität



Figure 4.3: The remote control for the MEDION P64145.

The remote control provides full functionality for operating the system from a distance. It requires 2 AAA batteries (included). Ensure correct polarity when inserting batteries.

5. Setup

5.1 Power Connection

1. Place the unit on a stable, flat surface.
2. Extend the telescopic antenna for optimal radio reception.
3. Connect the power cable to the AC IN port on the rear of the unit.
4. Plug the other end of the power cable into a wall outlet.

5.2 Remote Control Battery Installation

1. Open the battery compartment cover on the back of the remote control.

2. Insert 2 AAA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
3. Close the battery compartment cover securely.

6. Operating Instructions

6.1 Power On/Off

Press the **POWER** button on the unit or remote control to turn the system on or switch it to standby mode.

6.2 DAB+ Radio Operation



Figure 6.1: Digital radio reception with DAB+ technology.

1. Press the **MODE** button repeatedly until 'DAB+' is selected.
2. The system will automatically scan for available DAB+ stations during the first use. If not, initiate a scan from the menu.

3. Use the **PREV/NEXT** buttons or navigation knob to browse through available stations.
4. Press **OK** or the volume knob to select a station.
5. To save a station, press and hold the **PROG** button, then select a preset number and confirm.

6.3 FM Radio Operation

1. Press the **MODE** button repeatedly until 'FM' is selected.
2. Press and hold the **PREV/NEXT** buttons to auto-scan for the next available station. Short press to fine-tune.
3. To save an FM station, follow the same procedure as for DAB+ stations.

6.4 CD Playback



Figure 6.2: Integrated CD player for audio and MP3 CDs.

1. Press the **MODE** button repeatedly until 'CD' is selected.
2. Gently insert an audio CD or MP3 CD into the CD slot with the label side facing up. The disc will be drawn in automatically.

3. Playback will start automatically. Use the **PLAY/PAUSE**, **STOP**, **PREV/NEXT** buttons to control playback.

6.5 Bluetooth Streaming



Figure 6.3: Wireless music streaming from a smartphone or tablet.

1. Press the **MODE** button repeatedly until 'Bluetooth' is selected. The display will show 'Pairing' or 'BT Pairing'.
2. Enable Bluetooth on your smartphone or tablet and search for available devices.
3. Select 'MEDION P64145' from the list of devices.
4. Once paired, you can play music from your device through the stereo system.

6.6 USB Playback

1. Insert a USB flash drive into the USB port on the rear panel.
2. Press the **MODE** button repeatedly until 'USB' is selected.
3. The system will automatically detect and begin playing MP3 files from the USB drive.

4. Use the navigation buttons to browse folders and tracks.

6.7 AUX-In Connection

1. Connect an external audio device (e.g., MP3 player) to the AUX-In port on the rear panel using a 3.5mm audio cable.
2. Press the **MODE** button repeatedly until 'AUX' is selected.
3. Audio from the connected device will now play through the system. Control playback from the external device.

6.8 Alarm Function and Sleep Timer

- **Setting Alarm:** Access the alarm settings through the menu. You can set two independent alarms, choosing to wake up to radio (DAB+ or FM), CD, USB, or a buzzer sound.
- **Snooze:** When the alarm sounds, press the **SNOOZE** button on the remote to temporarily silence it. The alarm will sound again after a set interval.
- **Sleep Timer:** Set a sleep timer to automatically turn off the unit after a specified period (e.g., 15, 30, 60 minutes). This is useful for falling asleep to music.

6.9 Sound Settings

Passender Sound

Fünf auswählbare Soundeinstellungen



POP



ROCK



JAZZ



CLASSIC



FLAT

Figure 6.4: Five selectable sound equalization settings.

The system offers five pre-set equalizer modes to optimize sound for different music genres:

- POP
- ROCK
- JAZZ
- CLASSIC
- FLAT (default, no equalization)

Press the **EQ** button on the remote control to cycle through these modes.

7. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners, waxes, or solvents.
- **CD Care:** Handle CDs by their edges. Keep them clean and free of scratches. Use a soft, lint-free cloth to wipe CDs

from the center outwards.

- **Ventilation:** Ensure the ventilation openings are not blocked to prevent overheating.
- **Storage:** If storing the unit for an extended period, unplug it from the power outlet and remove batteries from the remote control.

8. Troubleshooting

If you encounter issues with your MEDION P64145, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet faulty	Ensure power cable is securely plugged in; Try a different power outlet.
No sound	Volume too low; Mute function active; Incorrect input mode selected	Increase volume; Press MUTE button on remote; Select correct input mode (DAB+, FM, CD, BT, USB, AUX).
Poor radio reception	Antenna not extended; Weak signal area; Interference	Fully extend the telescopic antenna; Reposition the unit for better signal; Move away from other electronic devices.
CD not playing	CD inserted incorrectly; CD is dirty or scratched; Disc format not supported	Re-insert CD with label side up; Clean or replace CD; Ensure it's an audio CD or MP3 CD.
Bluetooth pairing failed	Bluetooth not enabled on device; Unit not in pairing mode; Device too far	Ensure Bluetooth is on and discoverable on your device; Select Bluetooth mode on the unit; Move device closer (within 10m).
Remote control not working	Batteries depleted or incorrectly inserted; Obstruction between remote and unit	Replace batteries, ensuring correct polarity; Remove any obstructions; Point remote directly at the unit's sensor.

9. Specifications



Figure 9.1: Dimensions of the MEDION P64145 unit.

Feature	Detail
Brand	MEDION
Model Number	P64145
Color	Anthracite/Black
Radio Tuner	DAB+, PLL-FM (30 presets)
CD Player	Supports Audio CD, MP3 CD
Bluetooth	Wireless music streaming (up to 10m range)
USB Playback	MP3 playback from USB devices
Connections	USB, Bluetooth, AUX-In (3.5mm), Headphone Jack

Feature	Detail
Special Features	Alarm function (Radio, Alarm Sound, CD, USB), Snooze, Sleep Timer, 5 Sound Equalizer settings
Compatible Devices	Smartphone, Tablet, MP3 Player
Remote Control Batteries	2 x AAA (included)
Dimensions (approx.)	377 mm (W) x 120 mm (H) x 220 mm (D)

10. Warranty and Support

For warranty information, please refer to the warranty card included in your package. For technical support or service inquiries, please contact MEDION customer service. Information regarding spare parts availability and software updates is not specifically provided at the time of this manual's publication.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BH935Y1F>

More documents and user manuals: <https://manuals.plus/>