

[Manuals.plus](#) /

› [Willz](#) /

› Willz WLR33MBED02 Compact Refrigerator User Manual

Willz WLR33MBED02

Willz WLR33MBED02 Compact Refrigerator User Manual

Model: WLR33MBED02 | Brand: Willz

INTRODUCTION

Thank you for choosing the Willz WLR33MBED02 Compact Refrigerator. This manual provides important information regarding the installation, operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before using the refrigerator to ensure safe and efficient operation. Keep this manual for future reference.



Image: Front view of the Willz WLR33MBED02 Compact Refrigerator in blue.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the refrigerator is properly grounded.

- Do not operate the appliance with a damaged cord or plug.
- Keep ventilation openings clear of obstruction.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Unplug the refrigerator before cleaning or performing maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PRODUCT FEATURES

The Willz WLR33MBED02 Compact Refrigerator is designed for convenience and efficiency, offering a range of features to enhance your experience.

Cooling System and Temperature Control

Equipped with a fast and stable R600a cooling system, this refrigerator maintains optimal temperatures efficiently. The adjustable thermostat offers settings from 0 to 7, allowing precise control over the internal temperature. The chiller compartment typically operates between 27°F and 37°F, while the main refrigerator section maintains temperatures between 32°F and 47°F.

Fast and Stable Cooling System

0-7 Settings Thermostat



Image: Interior view of the refrigerator highlighting the chiller compartment and main section temperature ranges, along with the thermostat control.

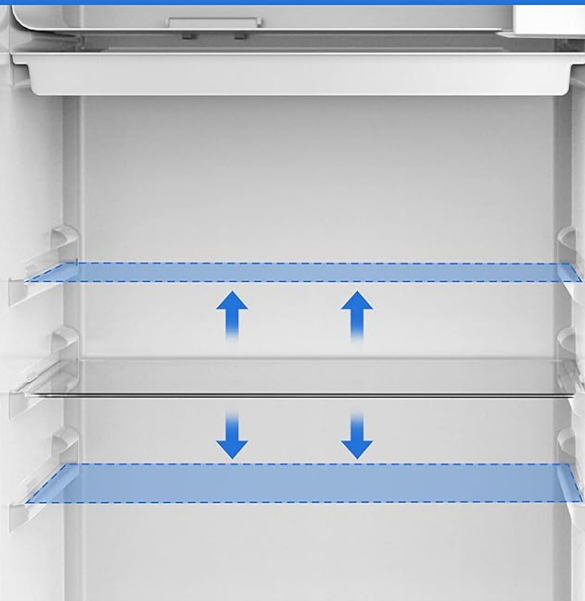 


Image: Detailed view of the refrigerator's internal components, including the R600a cooling system, adjustable front feet, easy-cleaning drip tray, and top recessed door handle.

Flexible Storage and Design

The interior features removable shelves, providing three ways to customize your storage space to accommodate various items. The door includes a convenient can dispenser and additional storage for bottles and other beverages.

Flexible & Roomy Space



Removable Shelves

Provide 3 ways to customize your storage space



Door Storage – Can Dispenser

Store cans, water/soda bottles, wine and more

Image: Interior view demonstrating the removable shelves and the door storage with a can dispenser.

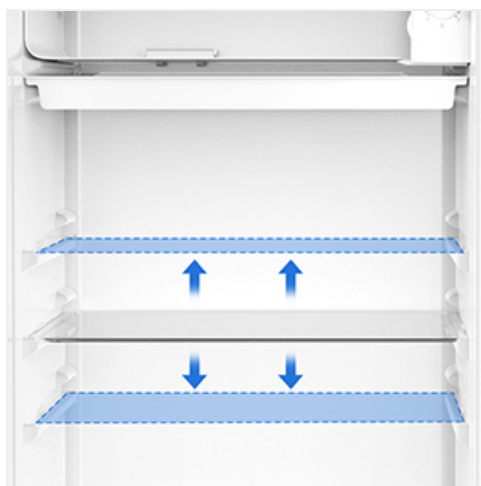 


Image: Close-up view of the removable shelves, illustrating their adjustability.



Image: Close-up view of the can dispenser integrated into the refrigerator door.

 
Energy Efficiency and Quiet Operation

The refrigerator is designed to be energy-efficient, with an estimated daily cost of \$0.07 and consumption of 0.6 kWh/day. It operates quietly, with noise levels typically below 42 dB, comparable to a whispering sound, making it suitable for various environments.

Energy-Efficient & Super Quiet

A light blue Willz refrigerator is positioned in a bedroom. To its left is a bed with a white sheet, several pillows (one orange, one dark blue with a leaf pattern, one beige with a woven texture), and a white cup on a wooden tray. A green plant is visible in the upper left corner. To the right of the refrigerator is a white metal rack with a beige crocheted bag hanging from it. The background is a plain, light-colored wall.

Energy Efficiency Icons:

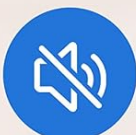-  0.07\$/Day
-  0.6kWh/Day
-  ≤42 dB

Noise Level Comparison:

-  **10dB**
The Rustle of Leaves
-  **42dB**
Refrigerator
-  **60dB**
Whispering Sound

Image: The refrigerator placed in a bedroom, illustrating its compact size and quiet operation, with icons indicating energy efficiency and low noise levels.

Reversible Door

The door is reversible, allowing it to open from either the left or the right side. This feature provides flexibility for placement in various room layouts.

Reversible Door

Open from left or right to suit all room layouts



Image: Two refrigerators side-by-side, demonstrating the reversible door feature opening to the left and right.



Image: Close-up view of the reversible door mechanism, showing how the hinge can be adjusted.

Compact Design and Capacity

With a total capacity of 3.3 cubic feet, the refrigerator includes a 0.39 cubic feet freezer compartment and a 2.84 cubic feet refrigerator section. Its compact dimensions make it suitable for various spaces such as recreational rooms, home offices, and dorm rooms.



Image: The refrigerator with its overall dimensions (33.2" H x 17.5" W x 19.0" D) and a breakdown of freezer (0.39 Cu.Ft) and refrigerator (2.84 Cu.Ft) capacities.

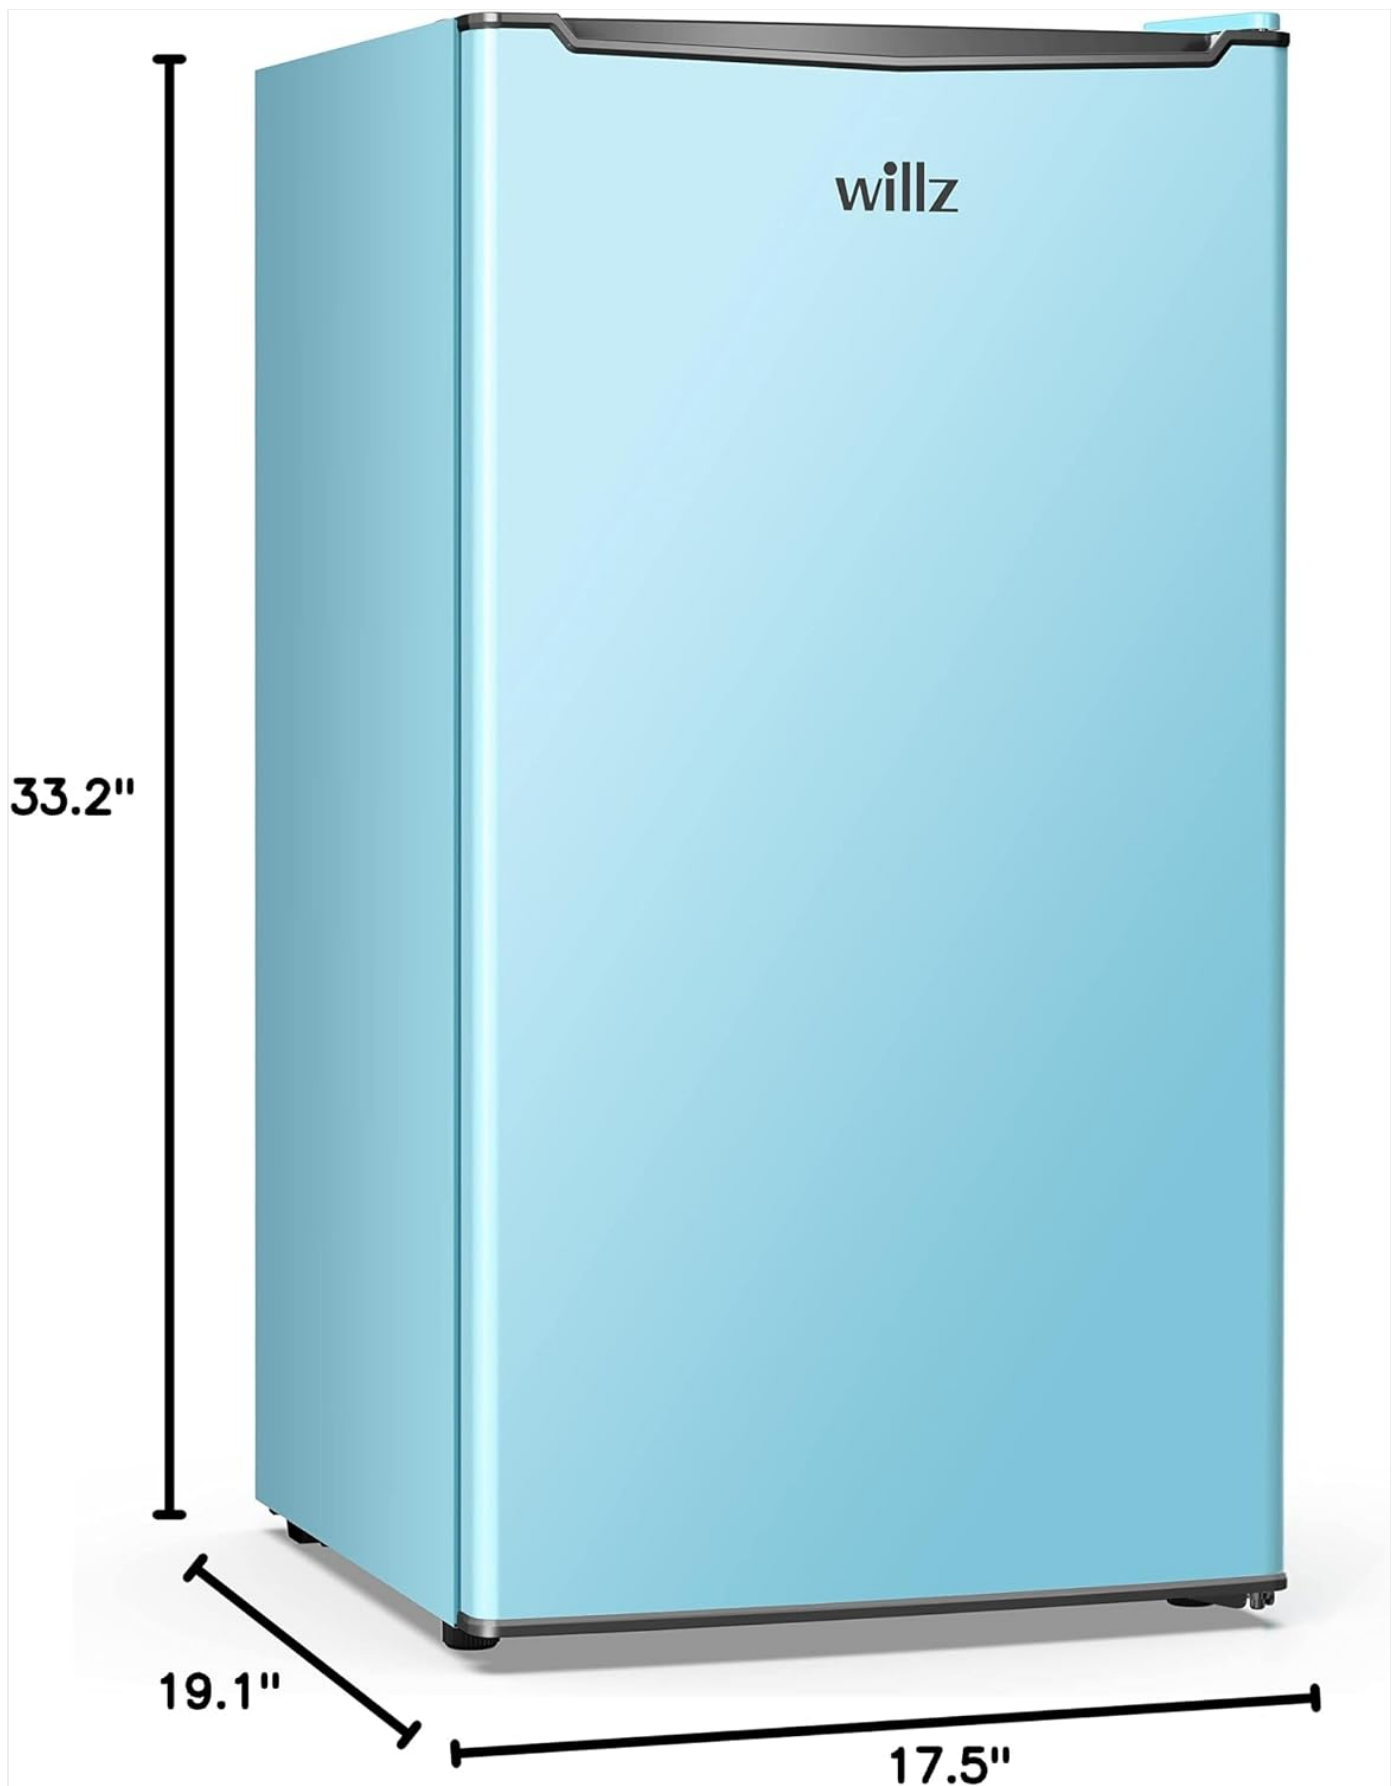 


Image: A detailed view of the refrigerator with its height, width, and depth measurements clearly indicated.



Image: Collage showing the compact refrigerator in different environments: a recreational room, a home office, and a dorm room, illustrating its versatility.

SETUP AND INSTALLATION

Unpacking

- Remove all packaging materials, including the foam base and adhesive tape.
- Inspect the refrigerator for any damage during transit. Report any damage to your retailer immediately.
- Keep packaging materials out of reach of children.

Placement

- Choose a location with a firm, level floor that can support the weight of the refrigerator when fully loaded.
- Allow at least 4 inches (10 cm) of space around the back and sides of the refrigerator for proper air circulation.
- Avoid placing the refrigerator in direct sunlight or near heat sources such as stoves, heaters, or radiators, as this will increase energy consumption.
- Ensure the ambient temperature is within the recommended operating range for the appliance.

Leveling

The refrigerator is equipped with adjustable front leveling legs. To level the appliance:

1. Turn the leveling legs clockwise to raise the refrigerator or counter-clockwise to lower it.
2. Ensure the refrigerator is level to prevent vibrations and ensure proper door sealing.

Electrical Connection

- Plug the refrigerator into a dedicated, grounded 115V, 60Hz AC outlet.
- Do not use extension cords or ungrounded adapters.
- Allow the refrigerator to stand upright for at least 2-4 hours before plugging it in to allow refrigerants to settle.

OPERATING INSTRUCTIONS

Initial Startup

After plugging in the refrigerator, allow it to cool for approximately 2-3 hours before placing food inside.

Temperature Adjustment

The thermostat control knob is located inside the refrigerator compartment. Turn the knob to adjust the temperature setting:

- **0 (OFF):** Turns off the cooling.
- **1 (MIN):** Least cold setting.
- **7 (MAX):** Coldest setting.

For general use, a setting between 3 and 5 is recommended. Adjust as needed based on ambient temperature and food load.

Food Storage Guidelines

- Do not overload the refrigerator.
- Ensure proper air circulation around food items.
- Store raw meat and poultry below cooked foods to prevent cross-contamination.
- Wrap or cover all food items to maintain freshness and prevent odors.

MAINTENANCE AND CLEANING

Defrosting

The chiller compartment will accumulate frost. Defrost when the frost layer is about 0.2 inches (5 mm) thick.

1. Turn the thermostat to "0" (OFF) and unplug the refrigerator.
2. Remove all food items and place them in a cooler.
3. Leave the door open to allow frost to melt naturally. You can place a towel at the bottom to absorb water.
4. Once defrosted, wipe the interior dry with a soft cloth.
5. Plug in the refrigerator and return food items after it has cooled down.

Do not use sharp objects or heating devices to remove frost, as this can damage the cooling system.

The easy cleaning drip tray helps capture moisture and prevent frost buildup.

Cleaning the Interior

- Unplug the refrigerator before cleaning.
- Wash the interior surfaces, removable shelves, and door storage with a solution of mild detergent and warm water.
- Rinse thoroughly and dry with a soft cloth.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals.

Cleaning the Exterior

- Wipe the exterior with a soft cloth dampened with mild detergent and water.
- Dry thoroughly.
- Clean the condenser coils at the back of the refrigerator periodically (e.g., every 6-12 months) using a vacuum cleaner or soft brush to improve efficiency.

TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; circuit breaker tripped; power outage.	Ensure plug is firmly in outlet; check circuit breaker; check household power supply.
Refrigerator is not cold enough.	Temperature setting too high; door opened too frequently; warm food placed inside; poor air circulation; condenser coils dirty.	Adjust thermostat to a colder setting; minimize door openings; allow hot food to cool before placing in fridge; ensure proper spacing for air flow; clean condenser coils.
Excessive noise.	Refrigerator not level; loose parts; normal operating sounds.	Level the refrigerator using the adjustable feet; check for loose items inside; gurgling/hissing sounds are normal refrigerant flow.
Water on floor or inside.	Drain tube clogged; door not sealed properly; high humidity.	Clear drain tube; check door gasket for proper seal; this can be normal in high humidity.

SPECIFICATIONS

Feature	Detail
Brand	Willz
Model Number	WLR33MBED02
Capacity (Total)	3.3 Cu. Ft.
Freezer Capacity	0.39 Cu. Ft.
Refrigerator Capacity	2.84 Cu. Ft.
Dimensions (H x W x D)	33.2 x 17.5 x 19.1 inches
Item Weight	49.9 pounds
Cooling Method	Compressor (R600a)
Temperature Control	Adjustable Thermostat (0-7 settings)
Special Features	Removable Shelf, Reversible Door, Adjustable Front Leveling Legs, Energy Efficient, Quiet Operation
Certification	Energy Certified

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Willz customer service directly. Keep your purchase receipt as proof of purchase for warranty claims. You can often find support contact details on the manufacturer's official website or through your retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question