

plusOne 6730

plusOne Thumping Arouser Instruction Manual

Model: 6730

Brand: plusOne

1. PRODUCT OVERVIEW

The plusOne Thumping Arouser is designed to provide a unique and arousing stimulation. Its perfectly curved form is crafted to fit comfortably and reach desired areas, delivering a gentle yet powerful thumping sensation for both internal and external use. This device features a fully waterproof design, making it suitable for use in the bath or shower, and is easy to clean. Constructed from high-quality, body-safe silicone, it ensures a safe and enjoyable experience. Powered by a rechargeable lithium-ion battery, it offers extended use on a single charge.

Key Features:

- Curved form for optimal reach and comfort.
- Precise thumping stimulation for internal and external application.
- 10 distinct intensity settings for personalized experience.
- Fully waterproof for versatile use and easy cleaning.
- Made from high-quality, body-safe silicone.
- USB rechargeable lithium-ion battery.



Figure 1: The plusOne Thumping Arouser shown with its retail packaging.



Figure 2: Key features of the plusOne Thumping Arouser, including its curved form, suitability for internal or external use, high-quality body-safe silicone, full waterproof design, and power button location.

2. SAFETY INFORMATION

Please read all instructions and warnings carefully before using the plusOne Thumping Arouser. Keep this manual for future reference.

- **For Adult Use Only:** This product is intended for adult use only.
- **Body-Safe Materials:** The device is made from high-quality, body-safe silicone. If you experience any irritation, discontinue use immediately.
- **Cleaning:** Always clean the device thoroughly before and after each use as described in the "Cleaning and Care" section.
- **Waterproof:** The device is fully waterproof. However, ensure the charging port is completely dry before connecting the charging cable.

- **Charging:** Use only the provided USB charging cable. Do not use the device while it is charging.
- **Storage:** Store the device in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Disposal:** Do not dispose of the device with household waste. Refer to the "Disposal" section for proper recycling instructions.

Legal Disclaimer: Actual product packaging and materials may contain more and different information than what is shown. We recommend that you do not rely solely on the information presented and that you always read labels, warnings, and directions before using or consuming a product.

3. WHAT'S INCLUDED

Your plusOne Thumping Arouser package should contain the following items:

- 1 x plusOne Thumping Arouser device
- 1 x USB Charging Cable
- 1 x Instruction Manual



Figure 3: The plusOne Thumping Arouser device, USB charging cable, and instruction manual.

4. SETUP AND CHARGING

Before first use, fully charge your plusOne Thumping Arouser.

1. Locate the charging port on the device. Ensure it is clean and dry.
2. Insert the small end of the provided USB charging cable into the device's charging port.
3. Connect the larger end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
4. The indicator light on the device will illuminate to show it is charging. A full charge typically takes approximately 2 hours and provides hours of use. The light will change or turn off when fully charged.
5. Once charging is complete, disconnect the cable and ensure the charging port is sealed (if applicable) to maintain waterproof integrity.

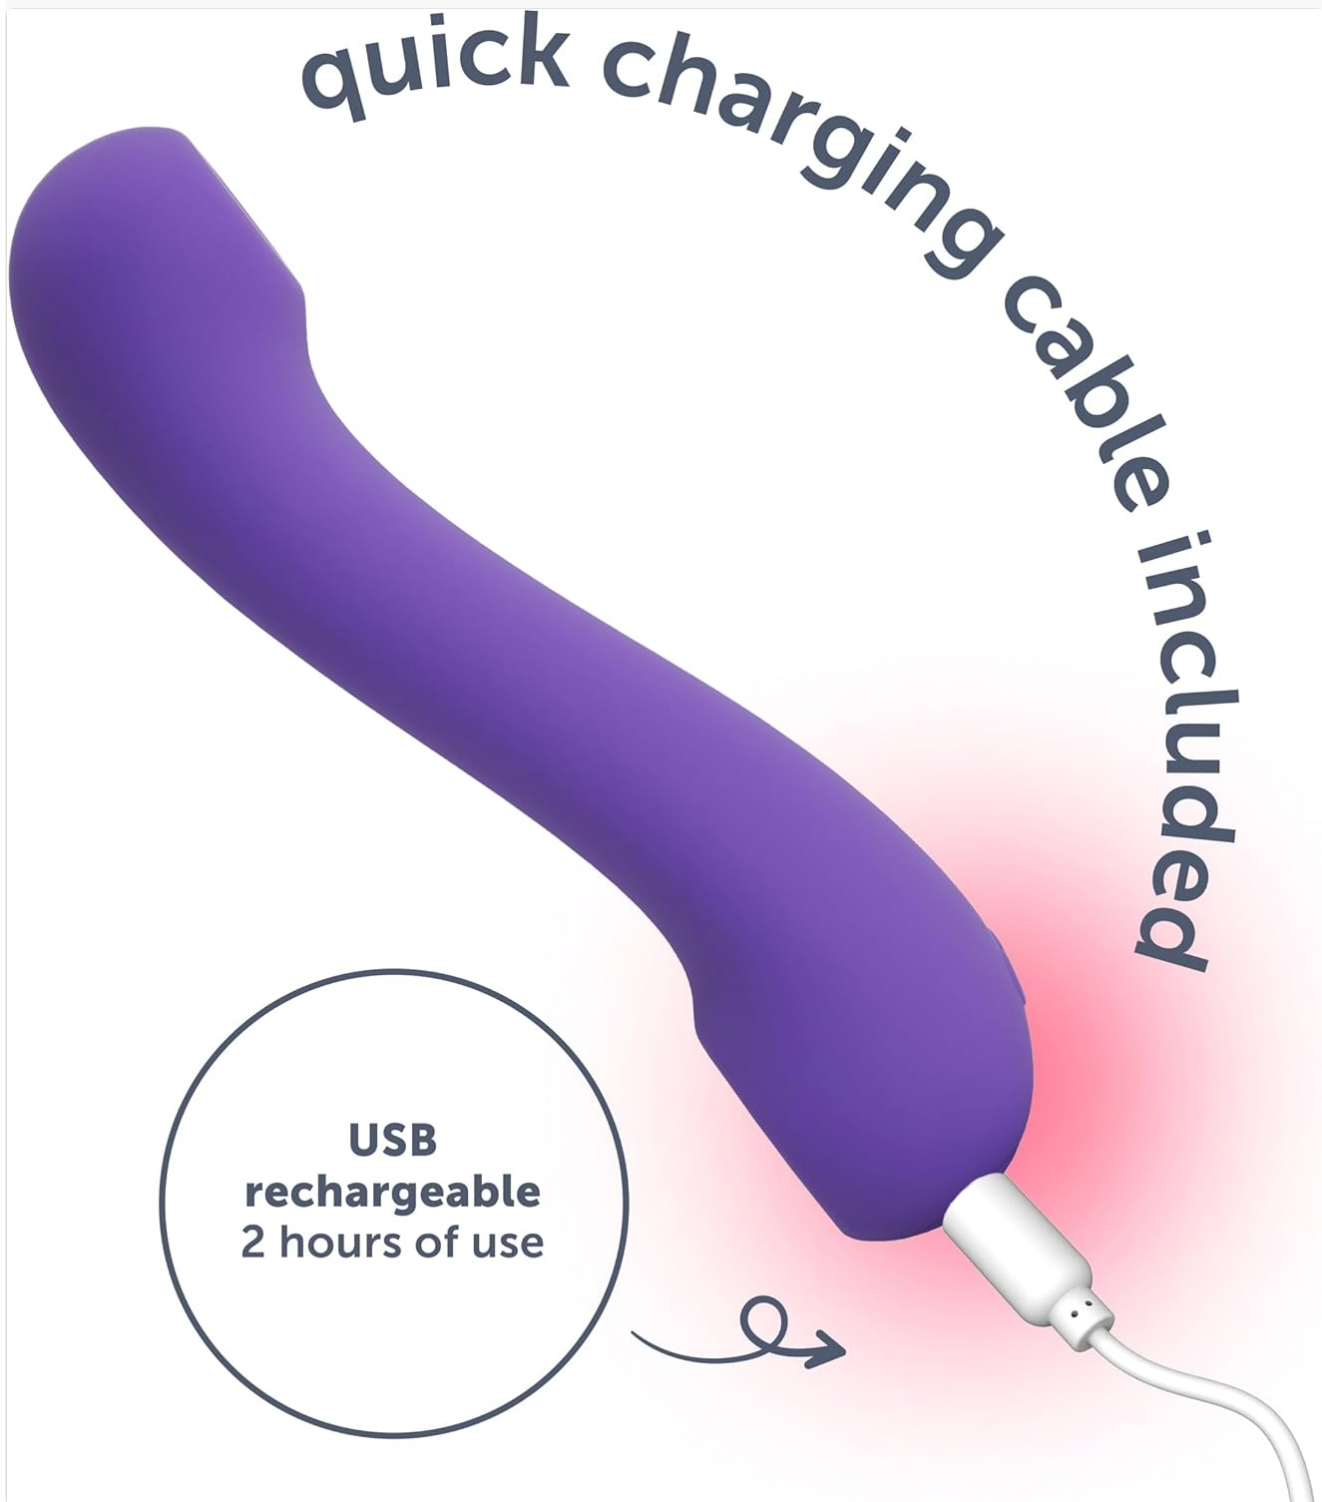


Figure 4: The plusOne Thumping Arouser showing its USB charging port and the included charging cable. The device is USB rechargeable and provides approximately 2 hours of use per charge.

5. OPERATING INSTRUCTIONS

The plusOne Thumping Arouser is designed for intuitive operation.

1. **Power On/Off:** Press and hold the power button (usually located on the base or side of the device) for approximately 3 seconds to turn the device on or off.
2. **Adjusting Intensity:** Once powered on, short presses of the power button will cycle through the 10 different intensity settings. Find the setting that best suits your preference.
3. **Usage:** The device can be used for precise thumping stimulation both internally and externally, thanks to its curved design.



Figure 5: The plusOne Thumping Arouser illustrating its 10 distinct vibration modes, which can be cycled through by pressing the power button.

6. CLEANING AND CARE

Proper cleaning and care will extend the life of your plusOne Thumping Arouser and ensure hygienic use.

- **Before and After Each Use:** Clean the device thoroughly with warm water and a mild soap or a specialized toy cleaner.

- **Rinsing:** Rinse the device thoroughly under running water to remove all soap residue.
- **Drying:** Pat dry with a lint-free cloth or allow to air dry completely before storage.
- **Waterproof Design:** The fully waterproof design allows for easy cleaning under running water or in the shower. Ensure the charging port is dry before charging.
- **Avoid:** Do not use harsh chemicals, alcohol-based cleaners, or abrasive materials, as these can damage the silicone.



Figure 6: The plusOne Thumping Arouser submerged in water, demonstrating its fully waterproof capability for easy cleaning and use in wet environments.

7. STORAGE

Store your plusOne Thumping Arouser properly to maintain its condition.

- Store in a clean, dry, and cool place.
- Keep away from direct sunlight and extreme temperatures.
- Avoid storing with other silicone products for prolonged periods to prevent material degradation.

8. TROUBLESHOOTING

If you encounter any issues with your plusOne Thumping Arouser, please refer to the following common solutions:

- **Device not turning on:** Ensure the device is fully charged. Connect it to the charger and allow it to charge for at least 30 minutes before attempting to turn it on again.
- **Weak or inconsistent thumping:** The battery may be low. Recharge the device fully.
- **Charging issues:** Ensure the USB cable is securely connected to both the device and the power source. Try a different USB port or power adapter. Ensure the charging port on the device is clean and dry.

If problems persist, please contact customer support as detailed in the "Warranty and Support" section.

9. SPECIFICATIONS

Model Number	6730
Brand	plusOne
Material	Body-Safe Silicone
Color	Purple
Dimensions (L x W x H)	22.4 x 11.1 x 5.9 cm (8.8 x 4.4 x 2.3 inches)
Weight	208.65 g (7.36 oz)
Water Resistance	Fully Waterproof
Number of Intensity Settings	10
Battery Type	Rechargeable Lithium-ion
Charging Time	Approx. 2 hours
Run Time	Hours of use per charge
UPC	843445032058

6.7 inches



Figure 7: The plusOne Thumping Arouser held in a hand, illustrating its approximate length of 6.7 inches (17 cm).

10. DISPOSAL

This product contains a rechargeable lithium-ion battery and electronic components. To protect the environment, do not dispose of this product with your regular household waste at the end of its life cycle.

- Please take it to an authorized collection point for the recycling of electrical and electronic equipment.
- Contact your local authority or retailer for information on recycling options.
- Proper disposal helps conserve natural resources and ensures that it is recycled in a manner that protects human health and the environment.

11. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official plusOne website.

You may also contact the retailer from whom you purchased the product for assistance.

Please have your model number (6730) and proof of purchase ready when contacting support.

This manual is for informational purposes only. Specifications are subject to change without notice.