

[Manuals.plus](#) /

> [Seiko](#) /

> Seiko Clock DL218W Digital Radio Alarm Clock with LED Backlight User Manual

Seiko DL218W

Seiko Clock DL218W Digital Radio Alarm Clock with LED Backlight User Manual

Model: DL218W | Brand: Seiko

INTRODUCTION

The Seiko Clock DL218W is a versatile digital alarm clock designed for clear visibility with its LED backlight. This clock is suitable for various environments, including bedrooms and living rooms. It features a standard radio wave clock for accurate timekeeping, an electronic alarm with a gradual tone, a snooze function, a full auto calendar, and a temperature display.



Image: Front view of the Seiko DL218W Digital Radio Alarm Clock, displaying time, date, and temperature.

SETUP

1. Power Supply

Connect the included dedicated AC adapter (cord length approximately 1.8m) to the clock and then plug it into a standard wall outlet. The clock requires continuous AC power for operation.

2. Backup Battery Installation


A CR2032 backup battery (x1) is included. This battery is for memory retention of time and calendar information during power outages and does not power the display independently. Install the CR2032 battery into the designated compartment on the back of the clock.



Image: Side view of the Seiko DL218W clock, showing the AC adapter connected to the unit.

3. Initial Time Setting (Radio Wave Reception)

Place the clock near a window or an area where radio waves can be easily received. Avoid locations with radio noise interference. The clock automatically corrects the displayed time by receiving standard radio waves (40kHz/60kHz auto-selection). Allow some time for the clock to receive the signal and set the time automatically.

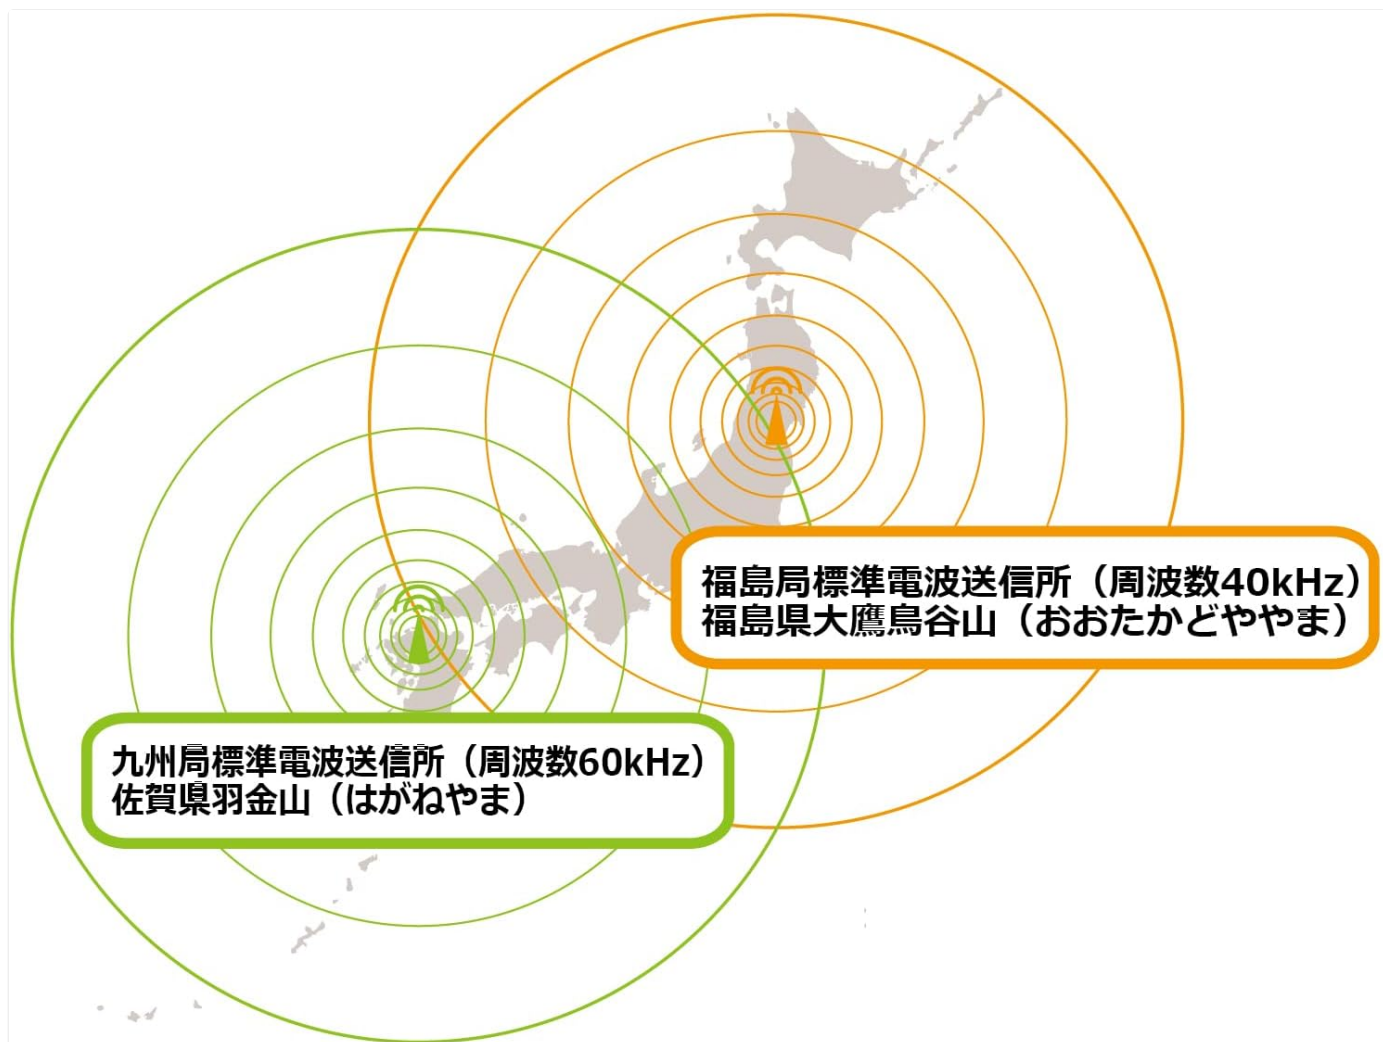

電波クロック

正確な時刻をのせた電波を受信し、
自動的に表示時刻を修正するクロックです。

- 電波を受信していないときは、クォーツの精度で作動します。

Image: A map illustrating the coverage areas for 40kHz and 60kHz standard radio wave transmissions in Japan, indicating optimal reception zones.

4. Manual Time Setting

If radio wave reception is not possible or desired, the clock operates with quartz accuracy. Refer to the detailed instructions in the full manual for manual time setting procedures if automatic reception fails or is disabled.

OPERATING INSTRUCTIONS

1. Alarm Function

The clock features an electronic alarm with a gradual tone. To set the alarm, locate the alarm setting buttons (typically labeled 'Alarm Set' or similar) on the clock. Follow the on-screen prompts to adjust the desired alarm time. The alarm has an auto-stop function, sounding for approximately 5 minutes before automatically turning off.

2. Snooze Function

When the alarm sounds, press the large snooze button (usually located on the top of the clock) to temporarily stop the alarm. The alarm will sound again after a few minutes (typically 5-10 minutes, refer to the full manual for exact duration).

3. Display Brightness Adjustment

The LED display brightness can be switched between two levels: bright and dim. Use the dedicated brightness control button (refer to the clock's physical controls) to toggle between these settings according to your preference and ambient light conditions.



Image: Comparison of the Seiko DL218W display in bright and dim settings, illustrating the two-level brightness adjustment.

4. Full Auto Calendar

The integrated calendar automatically adjusts for leap years, requiring no manual correction for date accuracy.

5. Temperature Display

The clock displays the current room temperature. The measurement range is 0°C to 40°C, with an accuracy of $\pm 2^{\circ}\text{C}$. This feature is useful for monitoring and managing room conditions.

6. 12-hour/24-hour Display Switch

You can switch the time display format between 12-hour (with AM/PM indicator) and 24-hour modes. Consult the physical controls for the specific button or sequence to change this setting.

7. Alarm Monitor Function

The alarm monitor function allows you to test the alarm sound outside of the set alarm time. This is useful for checking the alarm volume and tone.

MAINTENANCE

To ensure the longevity and proper functioning of your Seiko Clock DL218W, follow these maintenance guidelines:

- **Cleaning:** Clean the clock with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the display or casing.
- **Environmental Conditions:** Avoid exposing the clock to extreme temperatures, direct sunlight, or high humidity. These conditions can affect the clock's accuracy and lifespan.
- **Battery Replacement:** The CR2032 backup battery should be replaced periodically (e.g., every few years) to ensure memory retention during power interruptions.

TROUBLESHOOTING

If you encounter issues with your Seiko Clock DL218W, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Poor or no radio wave reception	Ensure the clock is placed near a window and away from sources of electrical noise (e.g., TVs, refrigerators, air conditioners, computers, fax machines). Avoid placing the clock in buildings, valleys between buildings, underground, near high-voltage lines, TV towers, train overhead lines, construction sites, airports, or areas with heavy traffic. Metal furniture (e.g., steel desks) can interfere with reception. Do not place the clock on or near such items. Note: Reception may be possible outside the designated reception areas depending on conditions.
Display is unclear or blank	Check the AC adapter connection to ensure it is securely plugged into both the clock and the wall outlet. Ensure the CR2032 backup battery is correctly installed. Adjust the display brightness setting.
Alarm does not sound	Verify that the alarm time is correctly set and the alarm function is activated. Check the power supply. The alarm function requires AC power.

SPECIFICATIONS

Detailed specifications for the Seiko Clock DL218W:

- **Brand:** Seiko
- **Model Number:** DL218W
- **Color:** White (LED Backlight Type)
- **Display Type:** Digital
- **Dimensions (H x W x D):** 64mm x 154mm x 39mm
- **Weight:** Approximately 0.14 kg (135g)
- **Power Source:** Dedicated AC Adapter (included), CR2032 Lithium Metal Backup Battery (x1, included)
- **Material:** Glass, Plastic
- **Movement:** Quartz
- **Features:**
 - Radio Wave Time Correction (40kHz/60kHz auto-selection, reception OFF function)
 - Electronic Alarm (gradual tone)
 - Alarm Auto-Stop Function (approx. 5 minutes)
 - Snooze Function
 - Alarm Monitor Function
 - 2-level LED Display Brightness Adjustment
 - Full Auto Calendar
 - Temperature Display (Measurement range: 0°C to 40°C, Accuracy: ±2°C)
 - 12-hour/24-hour Time Display Switch



Image: Diagram showing the Seiko DL218W clock with its dimensions (15.4cm width, 6.4cm height, 3.9cm depth) and key features labeled.

WARRANTY AND SUPPORT

For detailed warranty information, product registration, and customer support, please refer to the official Seiko website or contact your local authorized Seiko retailer. Keep your purchase receipt as proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question