

Jisile 007

Jisile Digital Alarm Clock User Manual

Model: 007

INTRODUCTION

Thank you for choosing the Jisile Digital Alarm Clock, Model 007. This manual provides detailed instructions for the setup, operation, and maintenance of your new alarm clock. Please read this manual thoroughly before use to ensure proper functionality and to maximize your product experience.



Figure 1: Jisile Digital Alarm Clock Front View

PRODUCT OVERVIEW

The Jisile Digital Alarm Clock features a large 4.5-inch LCD display for clear visibility of time, date, and indoor temperature. It is designed for ease of use with dedicated buttons for various functions and a smart night light feature.

Key Features:

- **Large LCD Display:** 4.5-inch screen with bold, clear digits for time (12/24hr), temperature (°C or °F), and calendar.
- **Smart Night Light:** Automatic soft blue backlight in dark environments when the sensor is enabled.
- **Snooze Function:** Large snooze button provides a 5-minute alarm pause.
- **Gradual Alarm:** Alarm sound gradually increases over 90 seconds for a gentle wake-up.
- **Battery Operated:** Requires 3 AAA carbon batteries (not included) for convenient placement.
- **Durable Construction:** Made from high-quality ABS material.

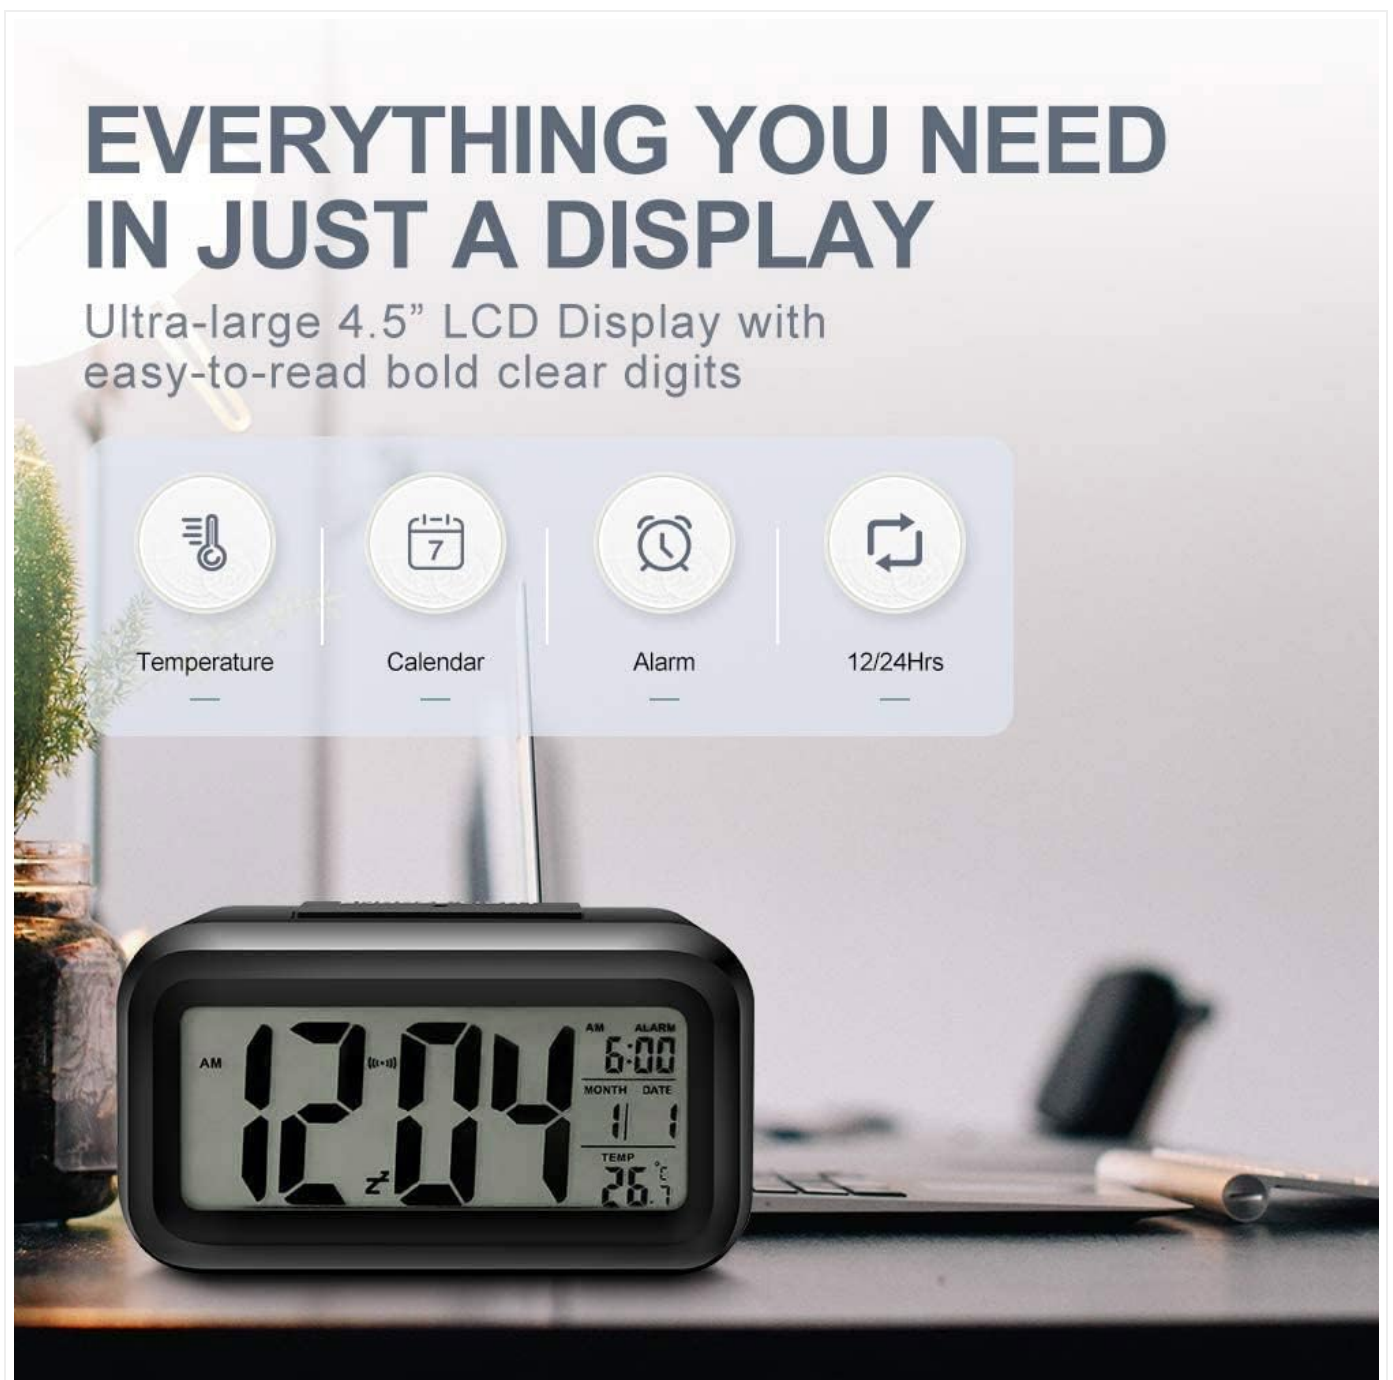


Figure 2: Display Features

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Remove the battery cover.
3. Insert 3 new AAA carbon batteries, ensuring correct polarity (+/-).
4. Replace the battery cover securely.

2. Initial Settings

Before setting the time and alarm, familiarize yourself with the control buttons and switches on the back of the clock.

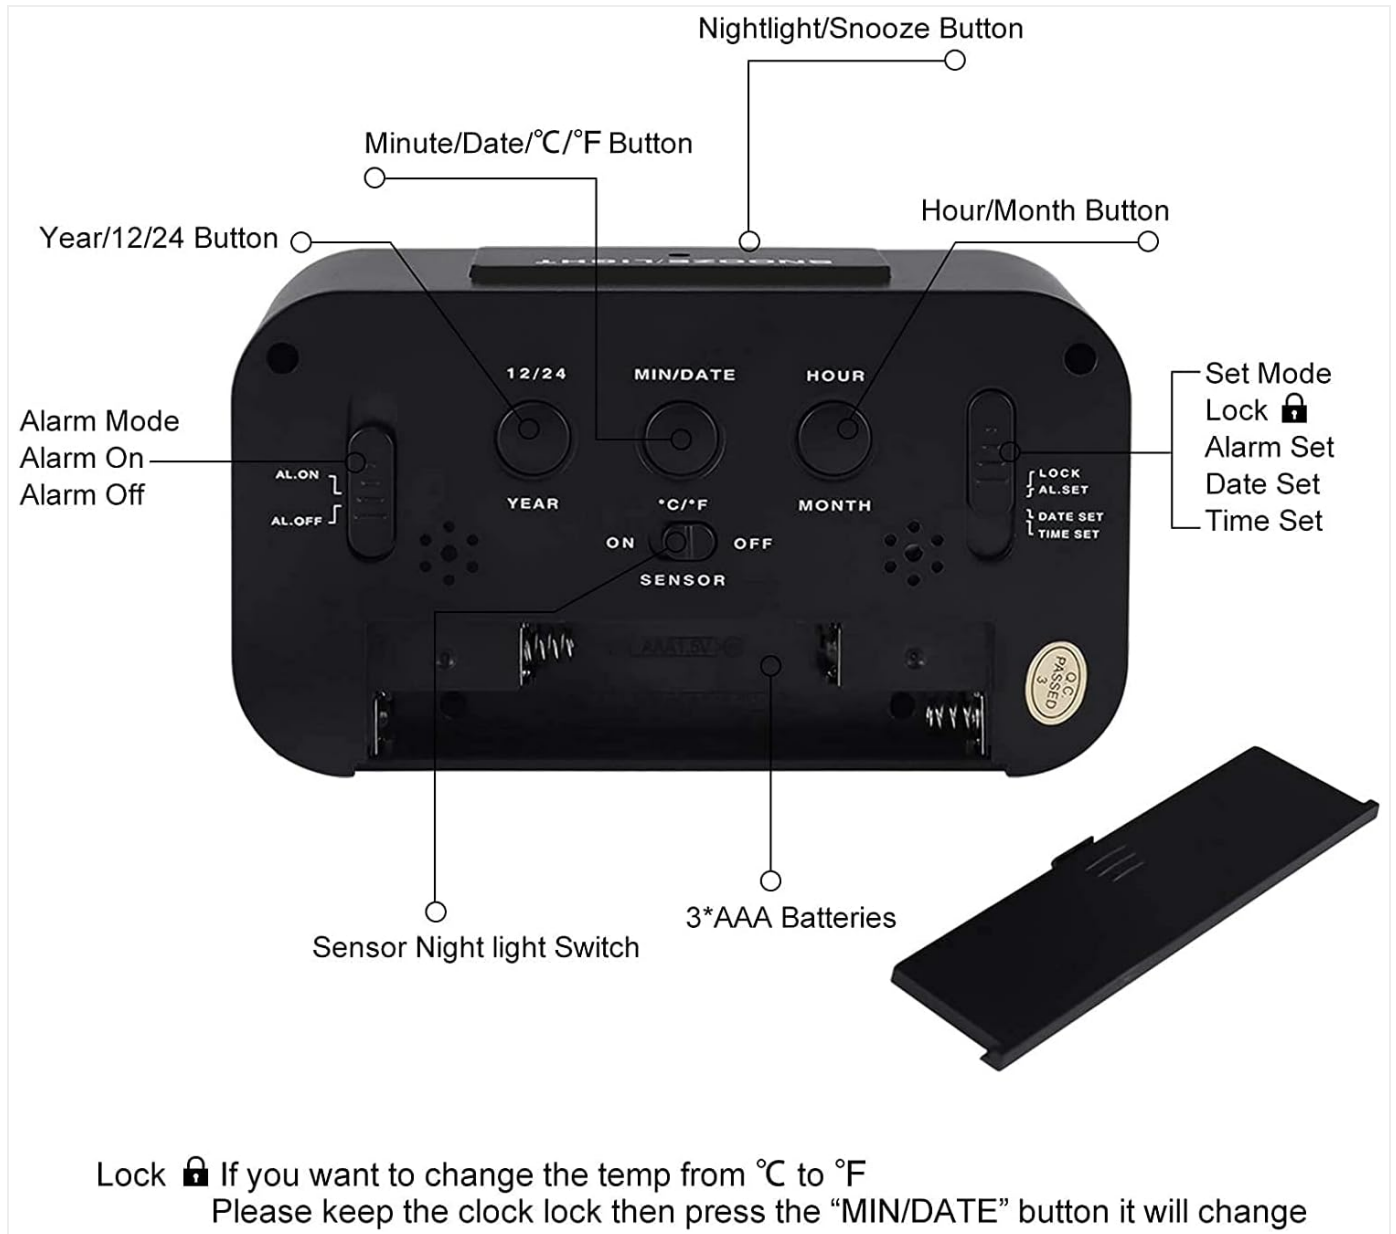


Figure 3: Back Panel Controls

- **Set Mode Switch:** Slide to select LOCK, ALARM SET, DATE SET, or TIME SET.
- **Alarm Mode Switch:** Slide to select ALARM ON or ALARM OFF.
- **SENSOR Switch:** ON/OFF for the smart night light feature.
- **Buttons:** YEAR/12/24, MIN/DATE/°C/°F, HOUR/MONTH.

OPERATING INSTRUCTIONS

1. Setting the Time

1. Slide the **Set Mode Switch** to **TIME SET**.
2. Press the **HOUR/MONTH Button** to adjust the hour.
3. Press the **MIN/DATE/°C/°F Button** to adjust the minute.
4. Once the desired time is set, slide the **Set Mode Switch** back to **LOCK**.

2. Setting the Date

1. Slide the **Set Mode Switch** to **DATE SET**.
2. Press the **YEAR/12/24 Button** to adjust the year.
3. Press the **HOUR/MONTH Button** to adjust the month.
4. Press the **MIN/DATE/°C/°F Button** to adjust the date.
5. Once the desired date is set, slide the **Set Mode Switch** back to **LOCK**.

3. Setting the Alarm

1. Slide the **Set Mode Switch** to **ALARM SET**.
2. Press the **HOUR/MONTH Button** to adjust the alarm hour.
3. Press the **MIN/DATE/°C/°F Button** to adjust the alarm minute.
4. Once the desired alarm time is set, slide the **Set Mode Switch** back to **LOCK**.
5. To activate the alarm, slide the **Alarm Mode Switch** to **ALARM ON**. To deactivate, slide to **ALARM OFF**.

4. Snooze Function

When the alarm sounds, press the large **Nightlight/Snooze Button** on top of the clock. The alarm will pause for 5 minutes and then sound again. The alarm will gradually increase in volume over 90 seconds.

Top button can be continually pressed to get an extra 8-minute nap and light the clock for 10s



Figure 4: Snooze Button Operation

5. 12/24 Hour Format

In **LOCK** mode, press the **YEAR/12/24 Button** to switch between 12-hour (AM/PM) and 24-hour (military time) display formats.

12-hour / 24-hour switchable



12-hour (Standard Time)



24-hour (Military Time)

Figure 5: 12-hour / 24-hour Format Switch

6. Temperature Unit (°C/°F)

In **LOCK** mode, press the **MIN/DATE/°C/°F Button** to toggle the temperature display between Celsius (°C) and Fahrenheit (°F).

7. Smart Night Light and Manual Backlight

- **Smart Night Light:** Slide the **SENSOR Switch** on the back of the clock to **ON**. The clock will automatically emit a soft blue backlight in low-light conditions, allowing the display to be visible without pressing any buttons.
- **Manual Backlight:** When the **SENSOR** is **OFF**, or if you need a brighter, temporary light, press the **Nightlight/Snooze Button** on top. The backlight will illuminate for 5 seconds.

Figure 6: Smart Backlight Function

MAINTENANCE

- Clean the clock's exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the clock to extreme temperatures, direct sunlight, or high humidity.
- If the clock will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	<ul style="list-style-type: none">• Batteries are low or incorrectly installed.• SENSOR switch is OFF in a dark environment.	<ul style="list-style-type: none">• Replace batteries with new AAA carbon batteries, ensuring correct polarity.• Slide the SENSOR switch to ON.• Press the Nightlight/Snooze button for temporary illumination.
Alarm does not sound.	<ul style="list-style-type: none">• Alarm is not activated.• Alarm volume is too low (not applicable for this model as volume is fixed).	<ul style="list-style-type: none">• Ensure the Alarm Mode Switch is set to ALARM ON.• Verify the alarm time is correctly set.
Cannot change time/date/alarm.	Set Mode Switch is in LOCK position.	Slide the Set Mode Switch to the appropriate setting (TIME SET, DATE SET, or ALARM SET) before making adjustments. Remember to return it to LOCK after setting.
Incorrect temperature reading.	Clock is exposed to direct heat sources or drafts.	Relocate the clock to a stable indoor environment away from direct heat, cold, or drafts for accurate readings.

SPECIFICATIONS

Brand	Jisile
Model Number	007
Display Type	Digital LCD
Power Source	3 x AAA Batteries (not included)
Material	Acrylonitrile Butadiene Styrene (ABS) Plastic
Product Dimensions	Approximately 3.94" W x 1.97" H (Actual: 3.9" W x 1.95" H based on image)
Features	Alarm, Snooze, Smart Night Light, Indoor Temperature, Calendar, 12/24 Hour Format
Indoor/Outdoor Usage	Indoor



Figure 7: Product Dimensions

WARRANTY AND SUPPORT

Jisile provides a **Lifetime Warranty** for this product, ensuring quality and customer satisfaction. If you encounter any issues or have questions regarding your Jisile Digital Alarm Clock, please contact our customer support team. We are committed to providing quality products and considerate services.

For support, please refer to the contact information provided with your purchase or visit the official Jisile store on Amazon: [Jisile Store](#).

