

Manuals.plus /

› ARROW /

› ARROW RO-18TLT 18kg Top Load Washing Machine User Manual

## ARROW RO-18TLT

# ARROW RO-18TLT 18kg Top Load Washing Machine User Manual

Model: RO-18TLT

## 1. INTRODUCTION

---

Thank you for choosing the ARROW RO-18TLT Top Load Washing Machine. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read it thoroughly before first use and keep it for future reference.

## 2. SAFETY INFORMATION

---

To prevent injury to yourself and others, or damage to property, observe all safety warnings and precautions. Always disconnect the power supply before cleaning or performing any maintenance.

- Ensure the washing machine is installed on a firm, level surface.
- Do not allow children to play with or operate the appliance.
- Do not wash items that are soiled with flammable substances.
- Keep the area around the washing machine clear of obstructions.
- Do not open the lid during the spin cycle.

## 3. PRODUCT OVERVIEW

---

The ARROW RO-18TLT is an 18kg capacity top-load washing machine featuring an LED display and 8 wash programs for various fabric types and soil levels.

## Child Lock

The door cannot be opened during the drying cycle



Front view of the ARROW RO-18TLT washing machine.



This image highlights the LED display, 8 program options, and 18kg capacity of the ARROW RO-18TLT washing machine.



The child lock feature prevents the door from being opened during operation, as indicated by the shield and lock icon.



Side view of the ARROW RO-18TLT washing machine.



Back view of the ARROW RO-18TLT washing machine.

## 4. SETUP

---

### 4.1 Unpacking

Carefully remove all packaging materials. Inspect the washing machine for any damage incurred during transit. Keep packaging materials away from children.

### 4.2 Location and Leveling

Place the washing machine on a solid, level floor. Avoid direct sunlight or excessively humid environments. Use the adjustable leveling feet to ensure the machine is perfectly stable and balanced. An unbalanced machine can cause excessive vibration and noise.

### 4.3 Water Connection

Connect the inlet hose to a cold water tap with a 3/4-inch thread. Ensure all connections are tight to prevent leaks. The water pressure should be between 0.05 MPa and 1 MPa.

### 4.4 Drain Hose Installation

Position the drain hose correctly to ensure proper water drainage. The drain hose should be placed at a height between 60 cm and 100 cm from the floor. Do not kink or block the drain hose.

## 4.5 Power Connection

Plug the power cord into a grounded electrical outlet. The power supply should be 220-240V~/60Hz. Do not use extension cords or adapters.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Loading Laundry

Open the lid and load clothes loosely into the drum. Do not overload the machine; ensure there is enough space for clothes to move freely. For optimal results, sort laundry by fabric type and color.

### 5.2 Adding Detergent and Softener

Add the appropriate amount of detergent to the detergent dispenser. If using fabric softener, add it to the designated compartment. Refer to detergent packaging for recommended quantities.

### 5.3 Selecting a Wash Program

Close the lid. Turn on the washing machine. Use the control panel to select one of the 8 available wash programs based on your laundry needs. The LED display will show the selected program and remaining time.

### 5.4 Starting the Wash Cycle

Press the 'Start/Pause' button to begin the wash cycle. The machine will automatically fill with water, wash, rinse, and spin. You can pause the cycle at any time by pressing the 'Start/Pause' button again.

### 5.5 Child Lock Function

To activate the child lock, press and hold the designated button (refer to control panel diagram in your physical manual) for a few seconds. This will prevent accidental changes to settings or opening of the lid during operation. Repeat the action to deactivate.

## 6. MAINTENANCE

---

### 6.1 Cleaning the Drum

Regularly clean the washing machine drum to prevent odor and residue buildup. You can run a 'Tub Clean' cycle (if available) or a hot wash cycle with a washing machine cleaner.

### 6.2 Cleaning the Detergent Dispenser

Remove the detergent dispenser drawer and rinse it under running water to remove any detergent or softener residue. Dry thoroughly before reinserting.

### 6.3 Cleaning the Filter

Locate and clean the lint filter regularly to ensure efficient operation. Refer to your physical manual for the exact location and removal instructions for the filter.

### 6.4 Exterior Care

Wipe the exterior of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents that could damage the finish.

## 7. TROUBLESHOOTING

---

Before contacting service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Washing machine does not start	Power cord unplugged, lid not closed properly, power outage	Check power connection, ensure lid is fully closed, check household circuit breaker
Water not draining	Drain hose kinked or blocked, pump filter clogged	Straighten drain hose, clean pump filter
Excessive vibration or noise	Machine not level, load unbalanced, transit bolts not removed	Adjust leveling feet, redistribute laundry, ensure all transit bolts are removed
Water leakage	Inlet/drain hose loose, detergent overdose	Tighten hose connections, use recommended detergent amount

## 8. SPECIFICATIONS

Technical details for the ARROW RO-18TLT Top Load Washing Machine:

Feature	Detail
Brand	ARROW
Model Number	RO-18TLT
Capacity	18 kg
Color	Silver
Product Dimensions (D x W x H)	69 cm x 71.5 cm x 109 cm
Depth with Door Open (Max)	71.5 cm
Item Weight	62 kg
Power Source Voltage	220-240V~
Frequency	60Hz
Display Type	LED
Number of Wash Cycles	8
Control Type	Touch
Access Location	Top Load
Special Feature	Adjustable Leveling Feet
Annual Energy Consumption	279 kWh
Finish Type	Metallic
Operating Mode	Fully Automatic
Drum Material	Plastic
Included Components	Accessories

## 9. WARRANTY AND SUPPORT

---

## 9.1 Warranty Information

This ARROW washing machine comes with a 2-year manufacturer warranty. Please retain your purchase receipt as proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use conditions.

## 9.2 Customer Support

For technical assistance, service requests, or inquiries regarding your warranty, please contact ARROW customer support. Contact details can typically be found on the manufacturer's website or your warranty card.

*Please note: Unauthorized repairs or modifications may void your warranty.*