

[Manuals.plus](#) /

> [moovv](#) /

> moovv Metronic Mady Portable CD Radio with Bluetooth, MP3, USB, Micro SD - Model 477186 User Manual

moovv 477186

moovv Metronic Mady Portable CD Radio (Model 477186) User Manual

Your guide to setup, operation, and maintenance.

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your moovv Metronic Mady Portable CD Radio. This versatile device combines a CD player, FM radio, Bluetooth connectivity, and playback from USB and Micro SD cards. Please read this manual thoroughly before operating the device and retain it for future reference.

2. SAFETY INFORMATION

- **Power Source:** Use only the specified power adapter or batteries (6 x LR14, not supplied). Ensure the voltage matches the device requirements.
- **Water and Moisture:** Do not expose the unit to rain, moisture, or immerse it in water. Avoid placing objects filled with liquids, such as vases, on the unit.
- **Ventilation:** Ensure proper ventilation. Do not block any ventilation openings.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the unit from the wall outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **CD Compartment:** Never open the CD compartment while a disc is spinning.

3. PACKAGE CONTENTS

Verify that all items are present:

- moovv Metronic Mady Portable CD Radio Unit
- AC Power Adapter
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your portable CD radio.



Figure 4.1: Front View - The front panel features the central LCD display, two integrated speakers, and the 'mooov' brand logo.



Figure 4.2: Side View (Right) - This view highlights the Micro SD card slot, USB port, headphone output (AUX), and auxiliary input (AUX IN).



Figure 4.3: Rear View - The rear panel includes the telescopic FM antenna and the AC power input socket.



Figure 4.4: Top View (Controls) - The top panel features various control buttons: OFF/ON/MODE, EQ, SCAN, Play/Pause/MEM, Previous Track/Rewind, Next Track/Fast Forward, PROG, Volume Down, and Volume Up.

Controls and Ports:

- **LCD Display:** Shows current mode, track number, time, and radio frequency.
- **OFF/ON/MODE Button:** Powers the unit on/off and switches between CD, Bluetooth, USB, Micro SD, Radio, and AUX modes.
- **EQ Button:** Adjusts equalizer settings (if available).
- **SCAN Button:** Scans for FM radio stations.
- **Play/Pause/MEM Button:** Plays or pauses playback; in radio mode, saves a station to memory.
- **Previous Track/Rewind Button:** Skips to the previous track or rewinds current track.
- **Next Track/Fast Forward Button:** Skips to the next track or fast forwards current track.

- **PROG Button:** Programs CD tracks or radio stations.
- **Volume - / + Buttons:** Adjusts the volume level.
- **CD Compartment:** For inserting audio CDs.
- **USB Port:** For playing MP3 files from a USB flash drive.
- **Micro SD Card Slot:** For playing MP3 files from a Micro SD card.
- **AUX Input (3.5mm):** For connecting external audio devices.
- **Headphone Output (3.5mm):** For private listening.
- **FM Antenna:** Telescopic antenna for improved radio reception.
- **AC Power Input:** Connects to the provided AC power adapter.
- **Battery Compartment:** Located on the bottom, for 6 x LR14 batteries (not included).

5. SETUP

5.1 Power Connection

Your portable CD radio can be powered by either AC power or batteries.

AC Power:

1. Ensure the unit is switched OFF.
2. Connect the AC power adapter to the AC power input socket on the back of the unit.
3. Plug the other end of the adapter into a standard wall outlet.

Battery Power:

1. Ensure the unit is switched OFF and disconnected from AC power.
2. Open the battery compartment cover located on the bottom of the unit.
3. Insert 6 x LR14 (C-size) batteries (not included), observing the correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Note: When using battery power, disconnect the AC adapter. Batteries are not recharged by the unit.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Mode Selection

1. To turn the unit ON, press the **OFF/ON/MODE** button.
2. To switch between modes (CD, Bluetooth, USB, Micro SD, Radio, AUX), press the **OFF/ON/MODE** button repeatedly. The current mode will be displayed on the LCD.
3. To turn the unit OFF, press and hold the **OFF/ON/MODE** button.

6.2 CD Playback

The unit supports CD, CD-R, CD-RW, and CD-MP3 formats.

1. Press the **OFF/ON/MODE** button until "CD" mode is selected.
2. Open the CD compartment cover.
3. Place a CD with the label side facing up onto the spindle.
4. Close the CD compartment cover. The unit will read the disc, and playback will start automatically.
5. Press **Play/Pause** to pause or resume playback.
6. Press **Previous Track** or **Next Track** to skip tracks.
7. Press and hold **Previous Track** or **Next Track** to fast forward or rewind.
8. **Repeat Function:** Press the **Repeat** button (often integrated with Play/Pause or a dedicated button) to repeat the current track or all tracks.
9. **Program Function:** Press the **PROG** button to program a sequence of tracks. Follow the on-screen prompts to select tracks.

6.3 Bluetooth Operation

1. Press the **OFF/ON/MODE** button until "Bluetooth" mode is selected. The unit will enter pairing mode, indicated by a flashing Bluetooth icon on the display.
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Mady" or a similar name from the list of devices.
4. Once paired, the Bluetooth icon on the unit's display will stop flashing and remain solid.
5. You can now play audio from your connected device through the CD radio. Use the unit's controls or your device's controls for playback and volume.

6.4 USB / Micro SD Playback

The unit supports MP3 files from USB flash drives and Micro SD cards.

1. Insert a USB flash drive into the USB port or a Micro SD card into the Micro SD card slot.
2. Press the **OFF/ON/MODE** button until "USB" or "SD" mode is selected. The unit will automatically detect and begin playing MP3 files.
3. Use the **Play/Pause**, **Previous Track**, and **Next Track** buttons to control playback.

6.5 FM Radio Operation

1. Extend the telescopic FM antenna for optimal reception.
2. Press the **OFF/ON/MODE** button until "Radio" or "FM" mode is selected.
3. **Automatic Scan:** Press the **SCAN** button to automatically scan and save available FM stations.
4. **Manual Tuning:** Use the **Previous Track** or **Next Track** buttons to manually tune to a desired frequency.
5. **Saving Presets:** After tuning to a station, press the **MEM** button (often integrated with Play/Pause) to enter program mode, then use the track buttons to select a preset number, and press **MEM** again to save.
6. **Recalling Presets:** In radio mode, use the **Previous Track** or **Next Track** buttons to cycle through saved preset stations.

6.6 AUX Input

1. Connect an external audio device (e.g., MP3 player, smartphone) to the **AUX Input** using a 3.5mm audio cable (not included).

2. Press the **OFF/ON/MODE** button until "AUX" mode is selected.
3. Play audio from your external device. The sound will be output through the CD radio's speakers. Control playback from your external device.

6.7 Headphone Output

To listen privately, plug 3.5mm headphones (not included) into the **Headphone Output** jack. The speakers will automatically mute.

7. MAINTENANCE

7.1 Cleaning

- Always unplug the unit before cleaning.
- Use a soft, dry, lint-free cloth to clean the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- For the CD lens, use a specialized CD lens cleaner disc.

7.2 Storage

When not in use for extended periods, store the unit in a cool, dry place. Remove batteries if storing for more than a few weeks to prevent leakage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC adapter not connected; Batteries depleted or incorrectly inserted.	Check AC connection; Replace batteries or ensure correct polarity.
No sound	Volume too low; Headphones connected; Incorrect mode selected.	Increase volume; Disconnect headphones; Select correct source mode.
CD skipping or not playing	CD dirty or scratched; CD inserted incorrectly; Unit on an unstable surface.	Clean or replace CD; Reinsert CD correctly; Place unit on a stable surface.
Bluetooth not pairing	Unit not in Bluetooth mode; Device too far; Bluetooth already connected to another device.	Ensure unit is in Bluetooth mode; Move device closer; Disconnect from other devices.
Poor FM radio reception	Antenna not extended; Weak signal; Interference.	Fully extend and adjust antenna; Try moving the unit to a different location.

9. SPECIFICATIONS

- **Brand:** mooov
- **Manufacturer:** Metronic

- **Model Number:** 477186
- **Color:** Green
- **Connectivity Technology:** Bluetooth
- **Special Features:** CD-R/RW Compatible, Programmable Memory, Portable, Built-in Radio
- **Total USB Ports:** 1
- **Compatible Devices:** Any Bluetooth-enabled device, Smartphone, iPhone
- **Speaker Type:** Stereo
- **Dimensions (L x W x H):** 21.5 x 21.5 x 12.3 cm (8.46 x 8.46 x 4.84 inches)
- **Power Source:** AC Cable or 6 x LR14 (C-size) Batteries (not included)
- **Power Output:** 6 Watts (2 x 3 W)
- **Supported Media:** CD, CD-R, CD-RW, CD-MP3, USB (MP3), Micro SD (MP3)
- **Radio Frequency:** FM 87.5-108 MHz
- **Weight:** 1 Kilogram



Figure 9.1: Product Dimensions - Visual representation of the unit's length, width, and height.

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BHJ6QGF6>

More documents and user manuals: <https://manuals.plus/>