

[Manuals.plus](#) /

› [TopWit](#) /

› Topwit FB1202 Mini Rice Cooker Instruction Manual

TopWit FB1202

Topwit FB1202 Mini Rice Cooker Instruction Manual

Model: FB1202

INTRODUCTION

Thank you for choosing the Topwit FB1202 Mini Rice Cooker. This appliance is designed for convenience and versatility, offering multiple cooking functions in a compact size. Please read this manual thoroughly before use to ensure safe and optimal operation.

IMPORTANT SAFEGUARDS

- Read all instructions carefully before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use the appliance for other than intended use.

PRODUCT OVERVIEW

The Topwit FB1202 Mini Rice Cooker is designed for ease of use and portability. It features a smart control panel with

multiple cooking functions and a non-stick inner pot.



Figure 1: Topwit Mini Rice Cooker (1.2L capacity) with four servings of rice, suitable for 1-3 people.



Figure 2: Smart control panel displaying 9 menu options including Rice, Noodles, Porridge, Soup, Simmer, Yogurt, Cake, Steam, and Keep Warm.

DELICATE DESIGN DETAILS



Figure 3: Detailed view of the rice cooker's features: visible glass lid, detachable power cable, anti-hot carry handle on the inner pot, and food-grade nonstick coating.

SETUP

Unpacking and Initial Cleaning

1. Carefully remove all packaging materials and accessories.
2. Wash the inner pot, glass lid, measuring cup, and rice spatula with warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the exterior of the rice cooker base with a damp cloth. Do not immerse the main unit in water.

Assembly

1. Place the clean, dry inner pot into the rice cooker base. Ensure it sits properly on the heating element.
2. Connect the detachable power cord to the appliance's power inlet and then to a suitable electrical outlet (110V AC).

Your browser does not support the video tag.

Video 1: Unboxing and initial setup of the Topwit Mini Rice Cooker, demonstrating how to unpack components, clean the inner pot and lid, and connect the power cord.

OPERATING INSTRUCTIONS

General Operation

1. Add desired ingredients (e.g., rice and water) to the inner pot. Refer to specific function guidelines for ratios.
2. Place the lid securely on the inner pot.
3. Plug in the appliance. The display will illuminate.

4. Press the 'Menu/Cancel' button repeatedly to cycle through the available cooking functions until your desired function is selected.
5. Once a function is selected, the cooker will typically start automatically after a few seconds, or you may need to press 'Delay Start' to confirm.

Cooking Functions

The Topwit FB1202 offers 8 versatile cooking functions:

- **Rice (White/Brown Rice):** For perfectly cooked grains. Use the provided measuring cup for accurate portions.
- **Noodles:** Ideal for cooking various types of noodles.
- **Porridge:** Prepares creamy porridge.
- **Soup:** For simmering soups and broths.
- **Simmer:** A slow cooking function for tender dishes.
- **Yogurt:** For homemade yogurt.
- **Cake:** Bake small cakes.
- **Steam:** For steaming vegetables, dumplings, or other foods.

24H TIMER DELAY

Put the ingredients in the rice cooker before going to work

Enjoy the food when you back home



Figure 4: Illustration of the 24-hour delay start function, allowing ingredients to be prepared in advance and cooked later.

Delay Start Function (24H Preset)

This function allows you to set a delayed start time for your cooking. Prepare your ingredients, select the desired cooking function, then press the 'Delay Start' button. Use the '+' and '-' buttons to adjust the delay time in hours. The cooker will automatically start cooking at the preset time.

Keep Warm Function

Once cooking is complete, the rice cooker will automatically switch to the 'Keep Warm' mode. This function maintains the food at an optimal serving temperature for up to 12 hours.

Your browser does not support the video tag.

Video 2: Demonstration of the Topvit Mini Rice Cooker's operation, including adding rice and water, selecting a cooking function, and the automatic transition to keep warm mode.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and performance of your rice cooker.

Inner Pot and Lid

- The non-stick inner pot and glass lid are removable for easy cleaning.
- Wash with warm, soapy water using a soft sponge or cloth. Avoid abrasive cleaners or metal scouring pads to prevent damage to the non-stick coating.
- Rinse thoroughly and dry completely before reassembling or storing.

Exterior

- Wipe the exterior of the rice cooker base with a damp cloth.
- Do not immerse the main unit in water or any other liquid.
- Ensure the power inlet and plug are dry before plugging in the appliance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; damaged cord/plug.	Ensure power cord is fully inserted and plugged into a working outlet. Check for damage to cord/plug.
Rice is too hard or too soft.	Incorrect water-to-rice ratio.	Adjust water amount for future cooking. Typically 1:1 ratio for white rice, but may vary by rice type.
Food sticks to the inner pot.	Inner pot not properly cleaned; excessive heat.	Ensure inner pot is clean and dry before use. Do not use metal utensils.
Display shows error code.	Internal malfunction.	Unplug the appliance, wait a few minutes, then plug it back in. If the error persists, contact customer support.

SPECIFICATIONS

- Brand:** TopWit
- Model Name:** FB1202
- Capacity:** 1.2 Liters (2 cups uncooked rice)
- Product Dimensions:** 6.22"D x 7.87"W x 7.67"H
- Power Source:** Corded Electric

Voltage: 110 Volts (AC)

Wattage: 300 watts

Material: Plastic (exterior), Non-stick (inner pot), Glass (lid)

Special Features: Smart Control, 8 Cooking Functions, 24H Delay Start, Automatic Keep Warm, Non-Stick Removable Inner Pot, Removable Lid

Included Components: Inner Pot, Instruction Manual, Measuring Cup, Spatula

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase documentation or visit the official Topwit website. Keep your purchase receipt as proof of purchase.

© 2023 Topwit. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BHKM6RGJ>

More documents and user manuals: <https://manuals.plus/>